



ultrys

User Manual





Acknowledgment

Welcome to the world of high security!

You have purchased ULTRYS v2 software; it will allow you to configure SPECTRE readers, encode user cards and vehicle tags.

We would like to thank you for the confidence you place in us and we hope that this solution developed by STid will keep you satisfied.

We remain at your disposal for any further information about this programming tool and our cutting-edge solutions.

We look forward to seeing you for more information on our website www.stid-security.com.

The STid Team



1. INFORMATION	5
PC REQUIREMENTS	5
USB KEY CONTENT	5
HARDWARE REQUIRED	5
WINDOWS INSTALLATION	6
COMPATIBILITY ULTRYS / READER RANGE / USER IDS	6
COMPATIBILITY ULTRYS v2 / FIRMWARE READER	6
OVERVIEW	7
OPEN	8
2. ULTRYS V2 SETTINGS	10
3. READER CONFIGURATION	12
3.1 READERS CONFIGURATION	12
3.2 CREATE NEW CONFIGURATION	12
STEP 1- FREQUENCY BAND REGULATION	13
STEP 2- CONFIGURATION PROTECTION LOADED INTO THE READER.....	15
STEP 3- READER SELECTION.....	16
STEP 4- SPECTRE READ ONLY - ANTENNA TYPE SELECTION.....	19
STEP 5- SPECTRE READ ONLY - INSTALLATION CONFIGURATION.....	20
STEP 6- SPECTRE READ ONLY - SETTING UP LIGHT INDICATOR.....	33
STEP 7- SPECTRE READ ONLY - COMMUNICATION PROTOCOL.....	35
STEP 4- SPECTRE OSDPTM - ANTENNA TYPE SELECTION	43
STEP 5- SPECTRE OSDPTM - INSTALLATION CONFIGURATION	43
STEP 6- SPECTRE OSDPTM - SETTING UP LIGHT INDICATOR.....	54
STEP 7- SPECTRE OSDPTM - COMMUNICATION PROTOCOL.....	55
STEP 4- ATX READ ONLY / OSDPTM - ANTENNA TYPE SELECTION.....	57
STEP 5- ATX READ ONLY / OSDPTM - INSTALLATION CONFIGURATION	57
STEP 6- ATX READ ONLY / OSDPTM - SETTING UP LIGHT INDICATOR.....	66
STEP 7- ATX READ ONLY - COMMUNICATION PROTOCOL.....	66
STEP 7- ATX OSDPTM - COMMUNICATION PROTOCOL.....	66
STEP 4- ATX4 READ ONLY / OSDPTM - ANTENNA TYPE SELECTION	67
STEP 5- ATX4 READ ONLY / OSDPTM - INSTALLATION CONFIGURATION.....	67
STEP 6- ATX4 READ ONLY / OSDPTM - SETTING UP LIGHT INDICATOR.....	77
STEP 7- ATX4 READ ONLY - COMMUNICATION PROTOCOL.....	77
STEP 7- ATX4 OSDPTM - COMMUNICATION PROTOCOL.....	77
STEP 8- USER MANAGEMENT.....	78
STEP 9- CONFIGURATION SAVE AND PROTECT.....	79
3.3 OPEN AN EXISTING CONFIGURATION	81
3.3.1 CONFIGURATION FILE.....	81
3.3.2 READER VIA USB.....	82



3.3.3 CONFIGURATION BADGE (SCB/OCB UHF).....	83
3.4 LOAD THE CONFIGURATION INTO THE READER	84
3.4.1. LOADING THE CONFIGURATION INTO THE READER.....	85
3.4.2 CONFIGURATION CARD (SCB/OCB UHF)	87
4. USER CREDENTIALS	88
<hr/>	
STEP 1- CONFIGURATION DETAILS LOADED.....	88
STEP 2- USER ID DEFINITION.....	91
STEP 3- ENCODING TAGS	93
USING THE EPC CODE FEEDBACK FORMAT AND EPC FILTER.....	94
5. REVISION	96
<hr/>	



1. Information

PC requirements

- A PC with operating system: Windows 7 or 10 or Windows server 2012r2.
- USB communication port.
- 50 MB min of free disk space.

USB Key Content

- FTDI USB Driver for Windows 7, 8.x and 10.
- ULTRYS Version 2.x.x.

Hardware required

To configure the reader:

- USB cable provided with SLA and SMA to directly configure the reader via USB link.

Or

- STid UHF 866-915 MHZ encoder to encode UHF SCB/OCB configuration card:

Part number:

- GAD-Wx5-E/U04-5AA/1 (v08 firmware version required *)
 - ARC-Wx5-G/U04-5AA/1
 - STR-Wx5-E/U04-5AA/1 (v10 firmware version required *)
- UHF ISO card part number: CCTW630_AP (ISO card UHF – Broadband- Quanray QS-5AE 64K).

To encode user credentials and vehicle tags:

STid UHF 866-915 MHz encoder, part number:

- GAD-Wx5-E/U04-5AA/1 (v08 firmware version required *)
- ARC-Wx5-G/U04-5AA/1
- STR-Wx5-E/U04-5AA/1 (v10 firmware version required *)

*Identification on the back of the encoder.



Windows Installation

1. Insert the ULTRYS v2 USB stick on an USB port of your PC.
2. Wait for the automatic opening of the browser window.
3. Launch ULTRYS V2.x.x_setup.exe.
4. Follow the instructions on the screen.

Compatibility ULTRYS / Reader Range / User IDs

This ULTRYS version (2.x.x) allows you to configure SPECTRE,ATX and ATX4 readers.

To configure URx & GAT readers, please use ULTRYS v1.x.x.

	ULTRYS v1	ULTRYS v2
SPECTRE + SPECTRE ANTENNA	x	✓
SPECTRE + URD ANTENNA	x	✓
URx + URD ANTENNA	✓	x
URx + SPECTRE ANTENNA	✓	x
Credential encoding in secure mode	x	✓

Warning:

- To read credentials encoded with ULTRYS v1 on a SPECTRE reader: configure the EPC reading in Mode 1(standard) and do not use the EPC filter.
- Credentials encoded with ULTRYS v2 will not read on the Urx /GAT readers.


Compatibility ULTRYS v2 / Firmware reader

This ULTRYS v2 version (2.2.x) allows you to configure SPECTRE, ATX and ATX4 readers according to the firmware version of the reader.

	ULTRYS v2.0	ULTRYS v2.1	ULTRYS v2.2
Firmware v7	✓	✓	✓
Firmware v9		✓	✓
Firmware v10			✓

Overview

It is possible to install the software on an unlimited number of workstations.

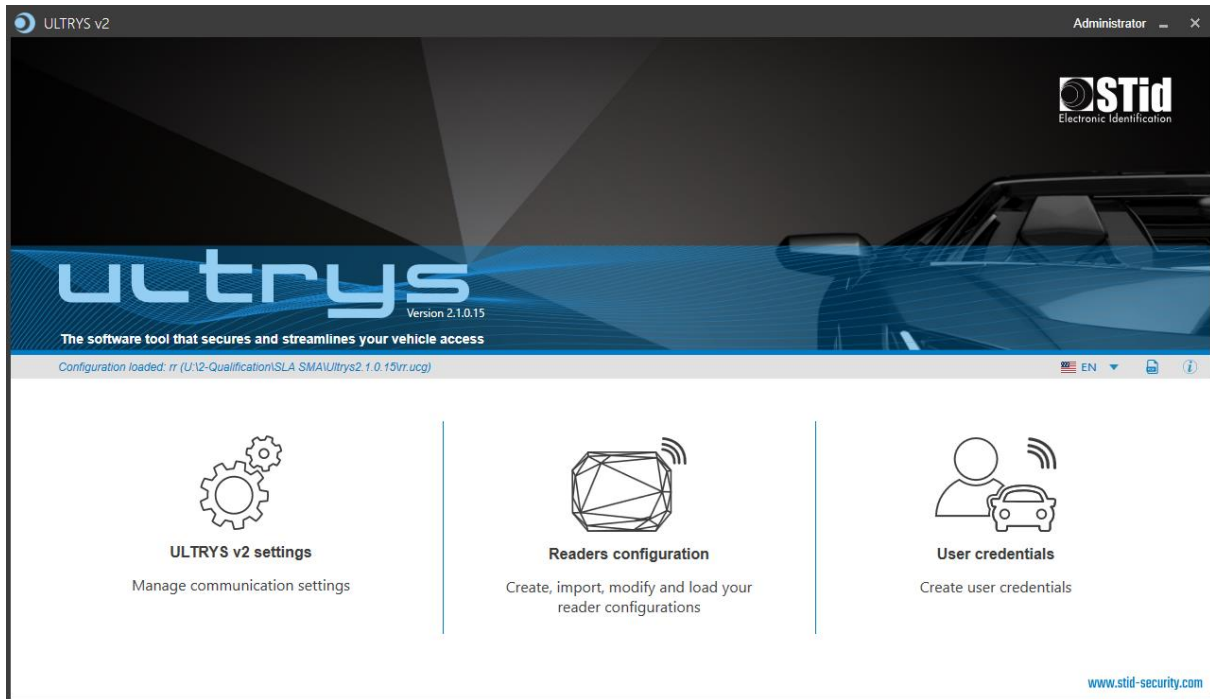

- ❖ The software is divided into three distinct parts:

ULTRYS settings


Readers configuration

User credentials

- ❖ On the Home page, you can select the language (English, Spanish, French) and click on the link for user manual.

Open

At the first opening no file is loaded by default.
ULTRYS is directly open on the home page.

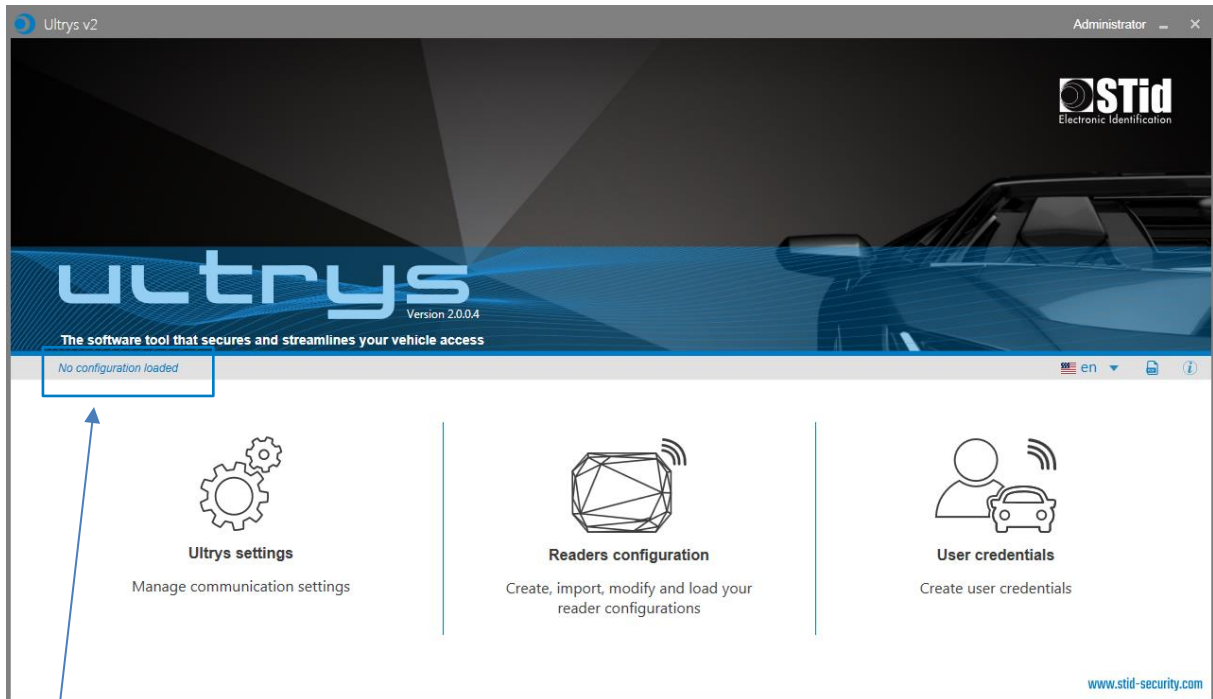

This mention indicates the current configuration.


At the next opening, ULTRYS will automatically load the last loaded configuration file.

Two possible cases:


- The loaded file is the one to use
- The loaded file is not the one to use




1st case: the loaded file is the one to use

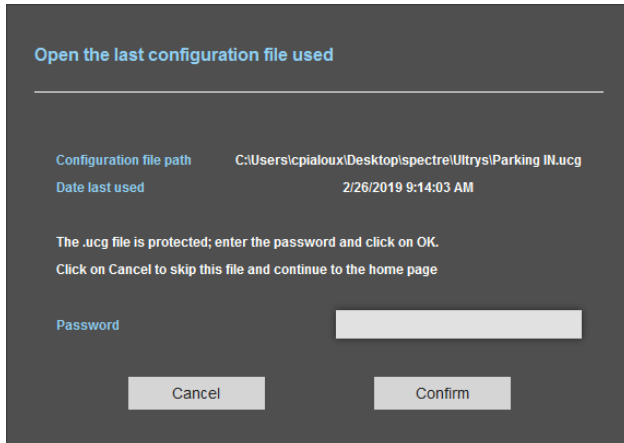

- 1- Enter the password of the configuration file if there is one if not go to step 2.

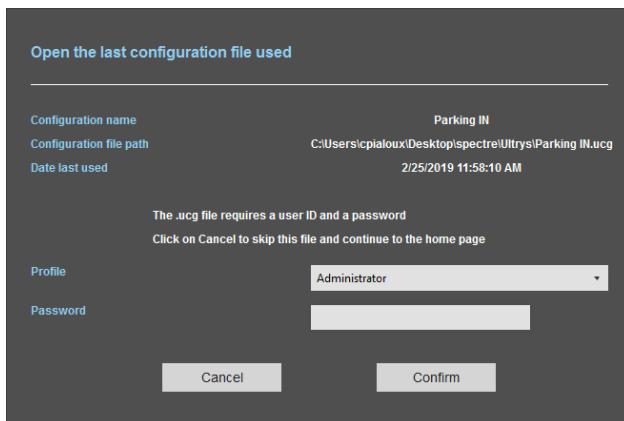


- 2- Select the profile to use to open the file.
- 3- Enter the profile password if there is one.
- 4- Please confirm.

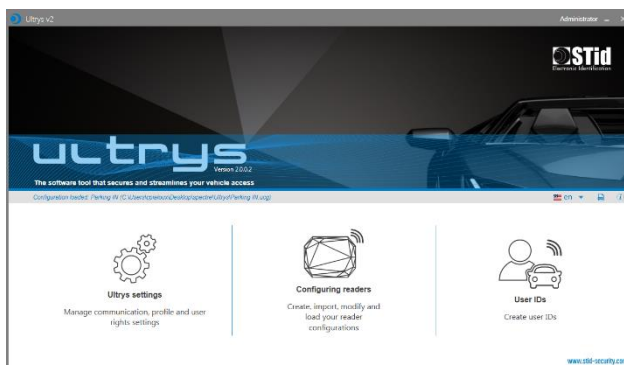

- 5- ULTRYS loads the file and opens the home page.

2nd case: the loaded file is not the one to use

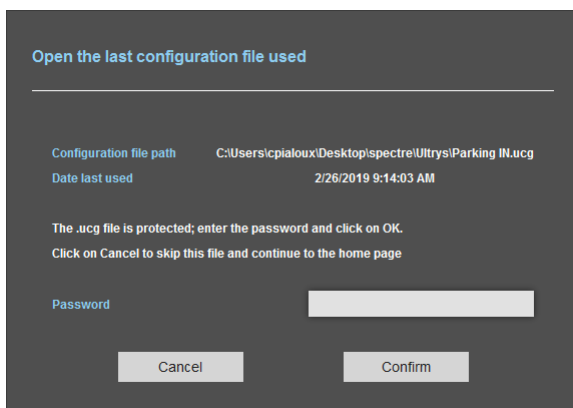


- 1- Cancel.
- 2- ULTRYS is open on the home page without any configuration loaded.





2. ULTRYS V2 Settings

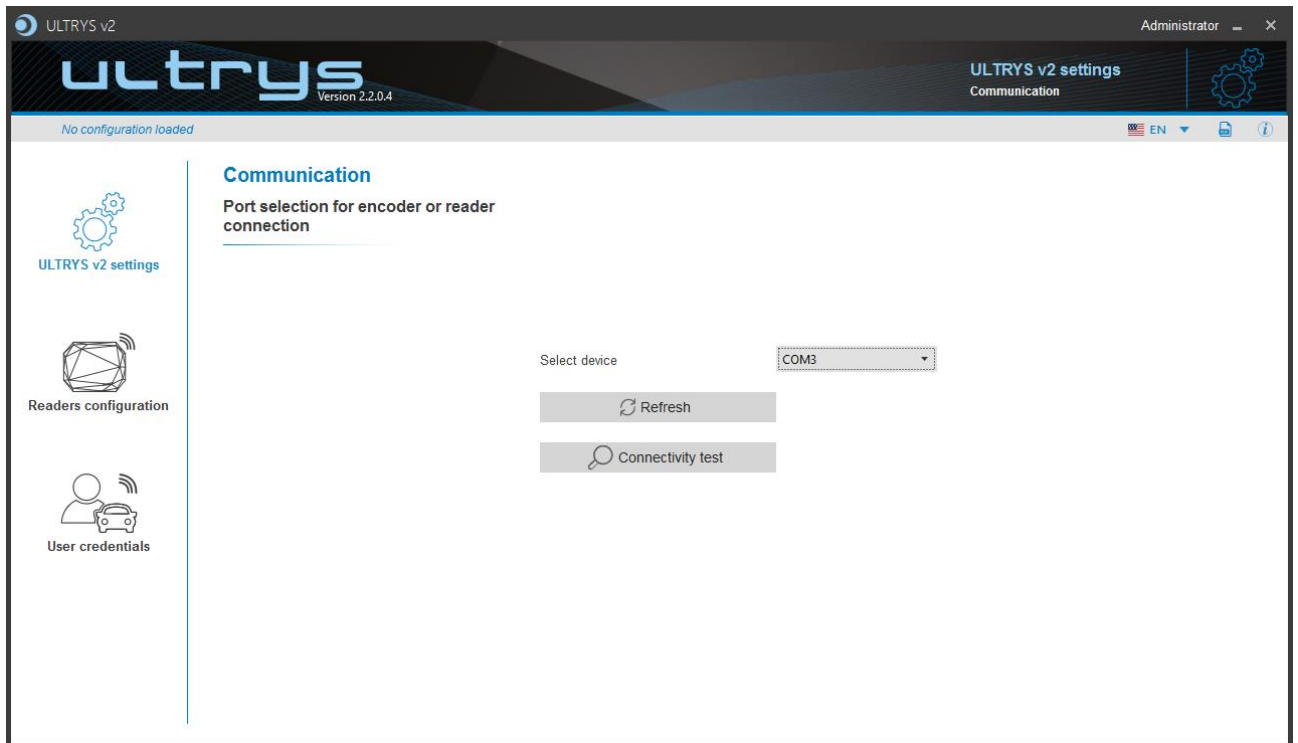

- Connect the SPECTRE, ATX or ATX4 reader to the PC using the provided USB cable to load the configuration via serial link directly onto the reader:




SPECTRE connection

or


- Connect an UHF encoder to the PC to encode User IDs or load the configuration onto UHF SCB/OCB configuration card.




To set the communication port

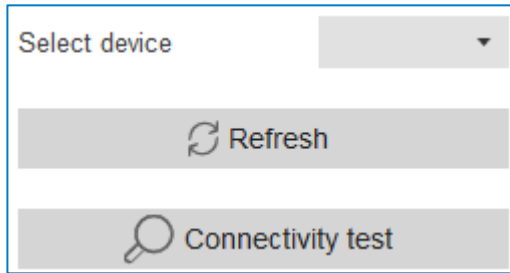


1- Click on 'Refresh' to detect all readers connected to the PC.

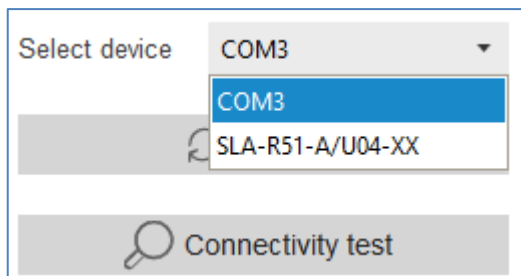


2- Open the dropdown list Select device
3- Readers whose firmware is ≥ 8 will appear in the drop-down list under their commercial reference.
Select the communication port number for the encoder or reader or select the reader to use.

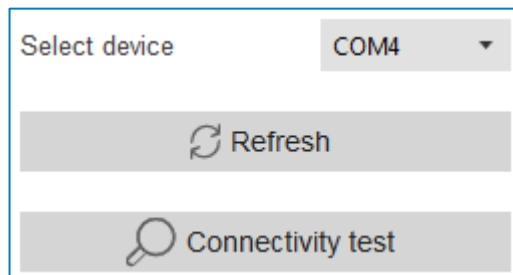

4- Run the connectivity test

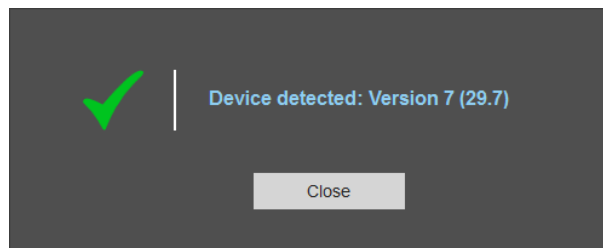

Message OK (with indication of the firmware version).

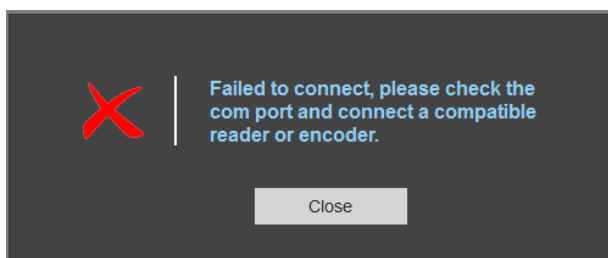

Message: Failed

- Check the compatibility of the reader.
- Check the USB cable.
- Check the Baudrate reader: it must be fixed to 115200.

Note: during the connectivity test on a UHF encoder, a sound and light signal (orange) will be emitted for 1 second.



3. Reader configuration



3.1 Readers configuration





This button allows to access to the settings of the loaded configuration settings.

3.2 Create new configuration

The reader configuration is done in nine steps. To move from one stage to another, you must click on "Next".

	Frequency band regulation
	Configuration protection loaded into the reader
	Reader selection
	Antenna type selection
	Installation configuration
	Setting up light indicator (only available for ANT_UHF2)
	Communication protocol
	User management
	Configuration save and protect

Step 1- Frequency band regulation

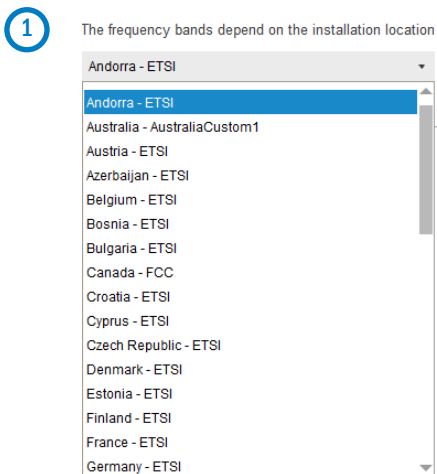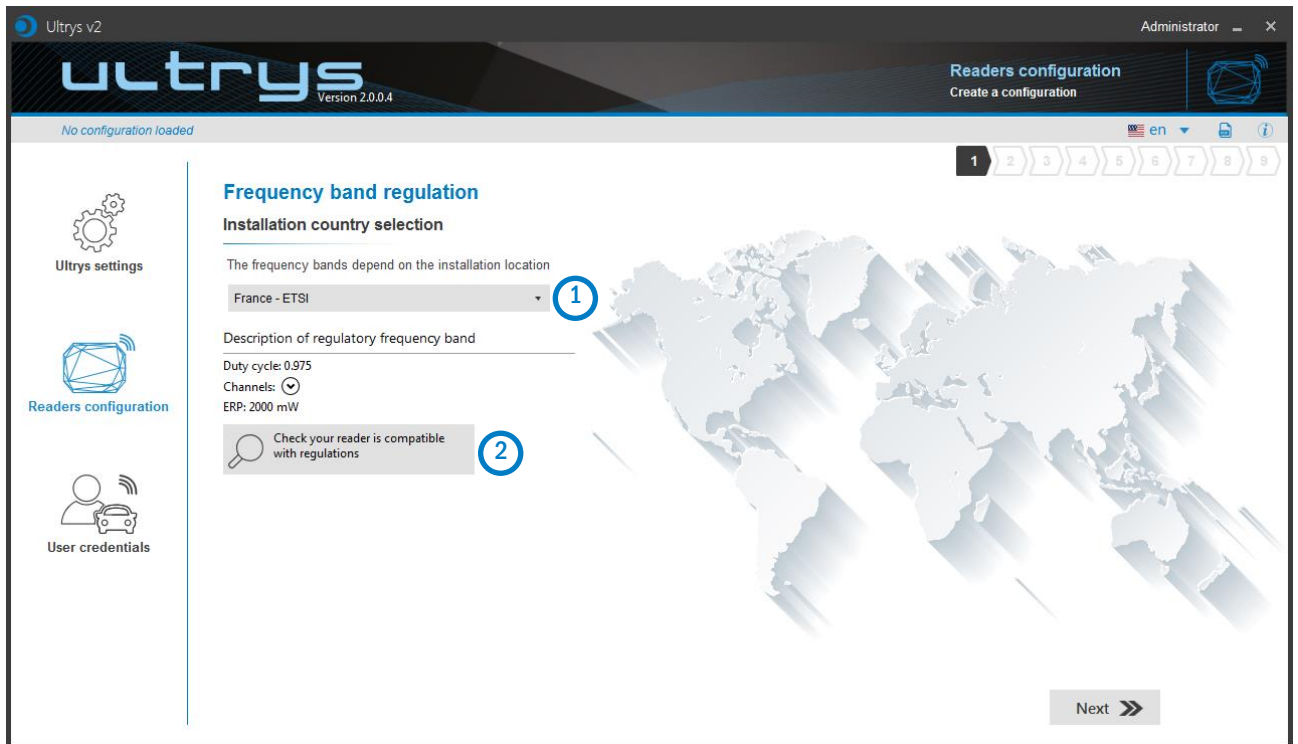


Type the first characters to display a country or select the country in which the installation will be done.

For a country which is not in the list, please contact STid: support@stid.com.


2 To approve the feasibility to install your reader in the selected country, you can check the compatibility.




With USB reader connection

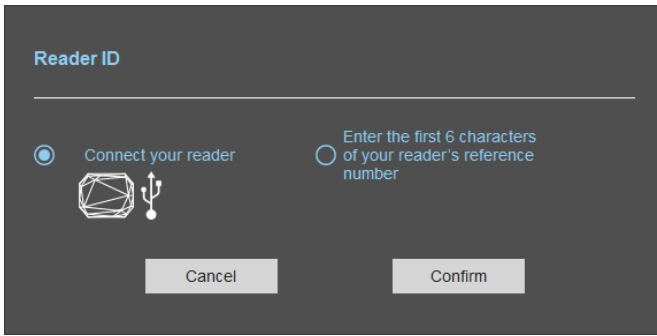

- 1- Connect the reader and set the communication COM port.
- 2- Select 'Connect your reader'
- 3- Please confirm

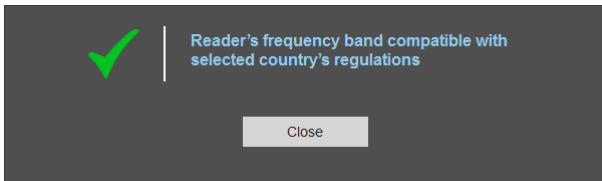


Message: OK

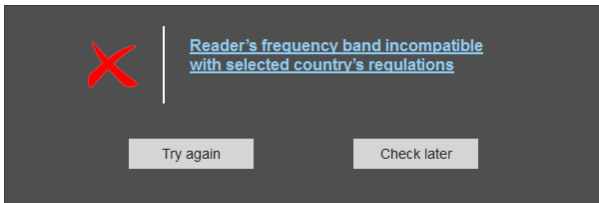


Message: NOK

The reader can't be installed in the selected country.

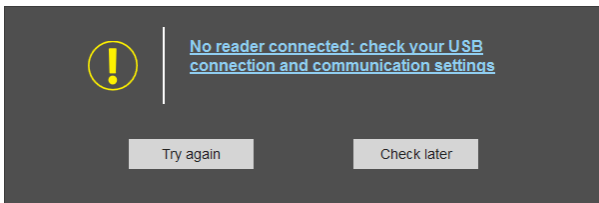


- Check the USB cable
- Check the communication with reader

With reader part number

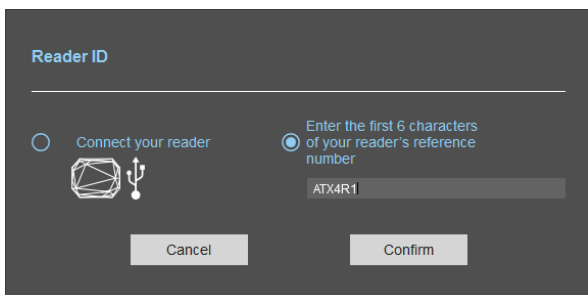


Enter the first 5 characters of the reader part number

Example: SLAR4, SLAR5, SMAR4...

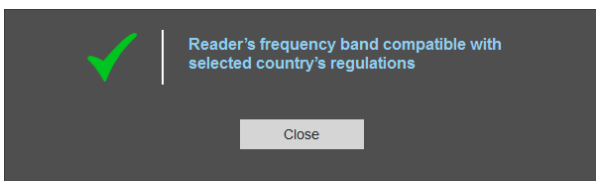


Message: OK

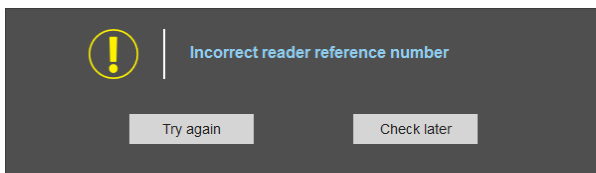

Message: the reference reader is not compatible with regulation selected.



Step 2- Configuration protection loaded into the reader

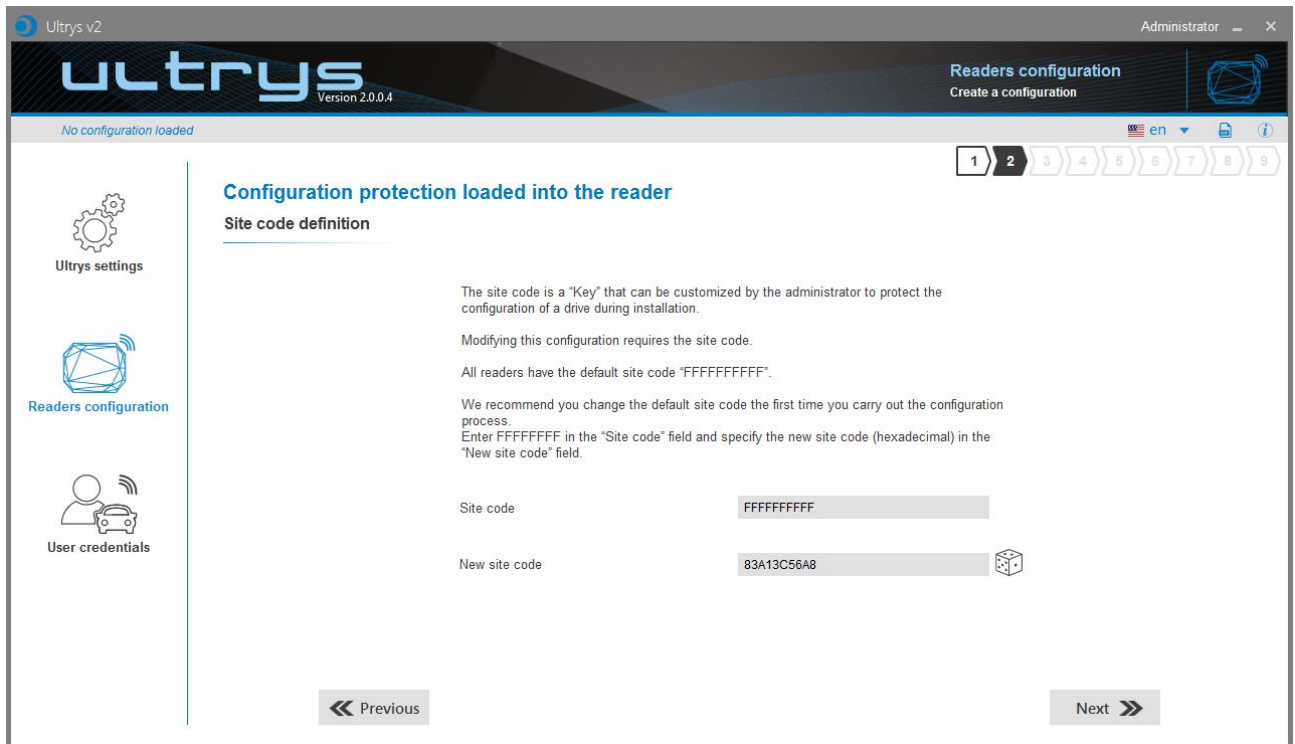

SPECTRE readers are initially supplied with a default configuration and a site code to OxFFFFFFFFFFFF.

The size of this site code is 5 bytes (10 hexadecimal characters).

After the initial setup and in order to reconfigure the reader, it will be necessary to present an UHF SCB/OCB card or a configuration file with the same 'site code' as the reader.



Random site code generator.


Caution

**This site code is important and should definitely be known by the administrator.
It protects the configuration data and allows reader configuration updates.**

If you lose this site code, you won't be able to reconfigure the reader again and the reader must be reset at the factory.

To change the site code, it will be necessary to know the current site code.

Step 3- Reader selection

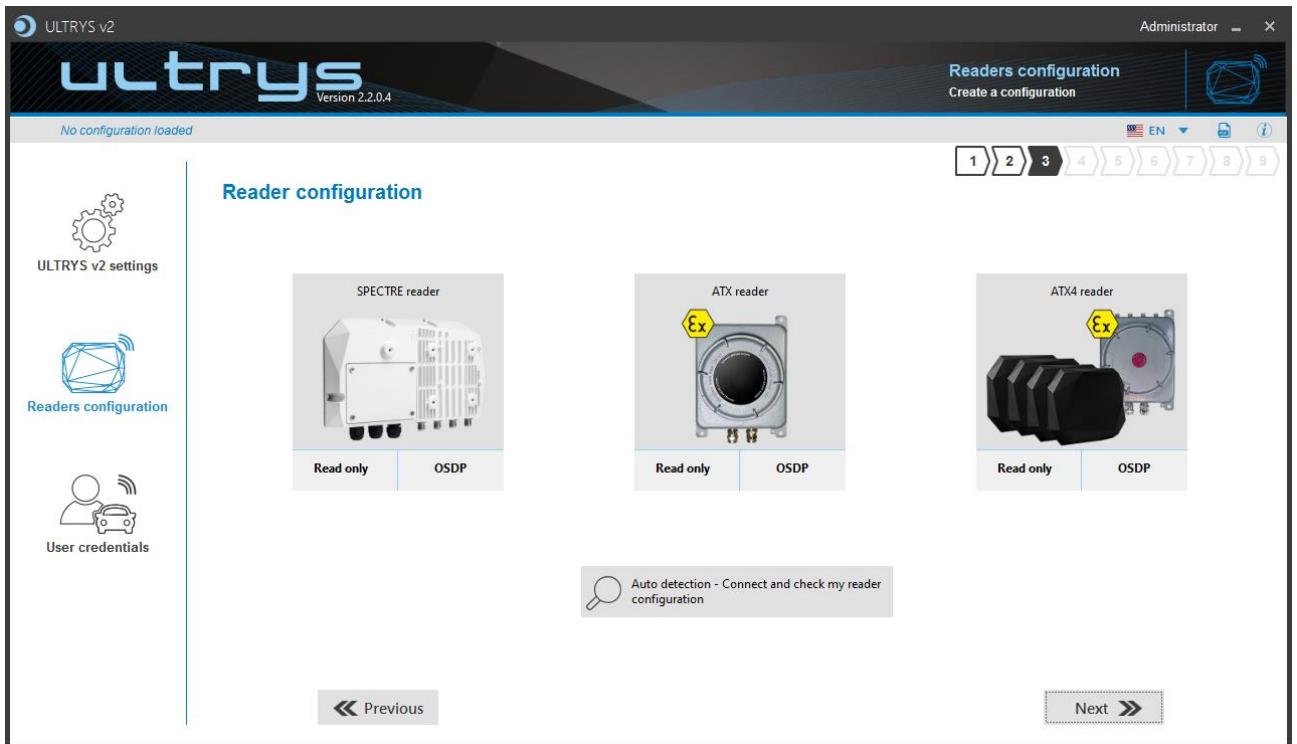

SPECTRE SLA-R4/5x-A/U04-xx readers can be configured in “Read only” mode from firmware version 7.

SPECTRE SLA-W33-A-U04-7OS readers can be configured in OSDPTM from firmware version 9.

ATX and ATX4 readers can be configured in “Access” mode or OSDPTM from firmware version 10.

You must select the reader type and the firmware version that is compatible with your reader. To do so, you can manually select the reader and firmware version, or you can use the function "Auto detection – Connect and check my reader configuration".


Compatibility between firmware readers and ULTRYS v2 versions

		ULTRYS v2 softwares		
		ULTRYS V2.0	ULTRYS V2.1	ULTRYS V2.2
Firmware versions	v 7	✓	✓	✓
	v 9		✓	✓
	v 10			✓


Close



With USB reader connection

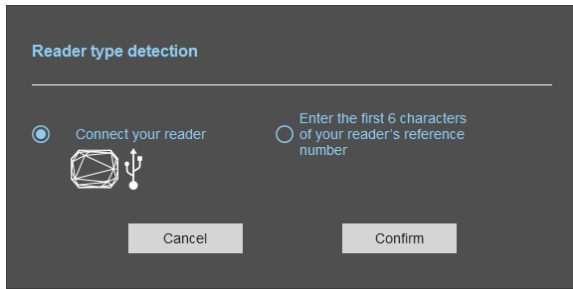


- 1- Connect the reader via USB cable provided. Configure the communication parameters.
- 2- Select the Connect your reader
- 3- Click on Confirm

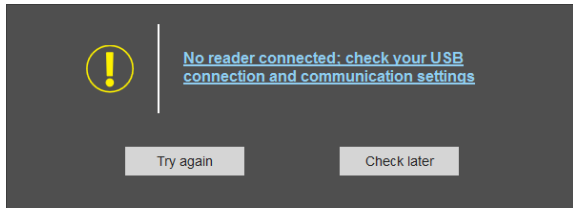

Message : NOK


- Check the USB cable
- Check the communication with reader

With reader's number reference

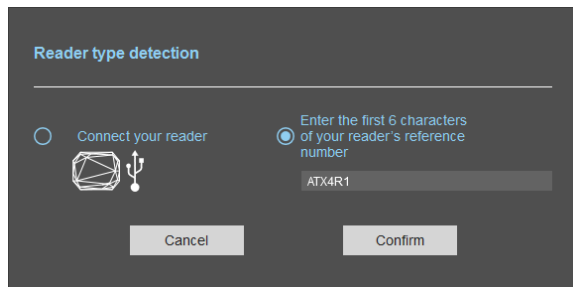


- 1- Enter the first 6 characters of your reader's reference number

Examples : SLAR41, SLAR51, SMAR41, ATXW41, ATX4R45, etc..

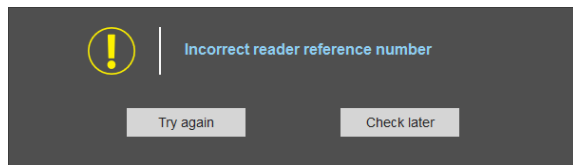

Message : NOK

Check your reader's reference number

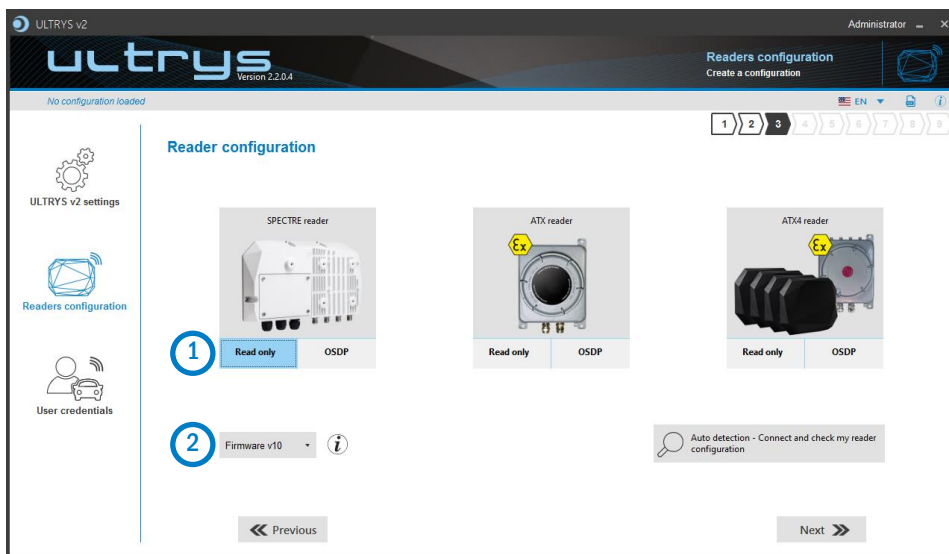

- ① Update reader type
- ② Update Firmware version



Steps 4 through 7 are specific to readers.

A vertical colored strip makes it possible to quickly check in the document to which reader the documentation refers.

SPECTRE READ ONLY

SPECTRE OSDP™

ATX READ ONLY / OSDP™

ATX 4 READ ONLY / OSDP™

Step 4- SPECTRE Read Only - Antenna type selection



The SPECTRE reader can be connected to new SPECTRE antennas (ANT-UHF2), or previous antennas (ANT_URD).

Select the type of antenna used in the installation and compatible with the reader selected.

Step 5- SPECTRE Read Only - Installation configuration



① Name the lane

Maximum 10 characters.

For example, Entry1.

②③ Add / Delete lane

Use 'Add /Delete lane' to configure the number of lanes you will use in your application.


The default setting is one antenna on the first lane.

[For more information about the possible combination please refer to the document NA_SPECTRE.](#)

4 Add/ Remove antenna on lane

Set the number of antennas on the corresponding lane.

When an antenna is added, the RF port to which the antenna has to be connected appears on the reader with corresponding color to help the installation.

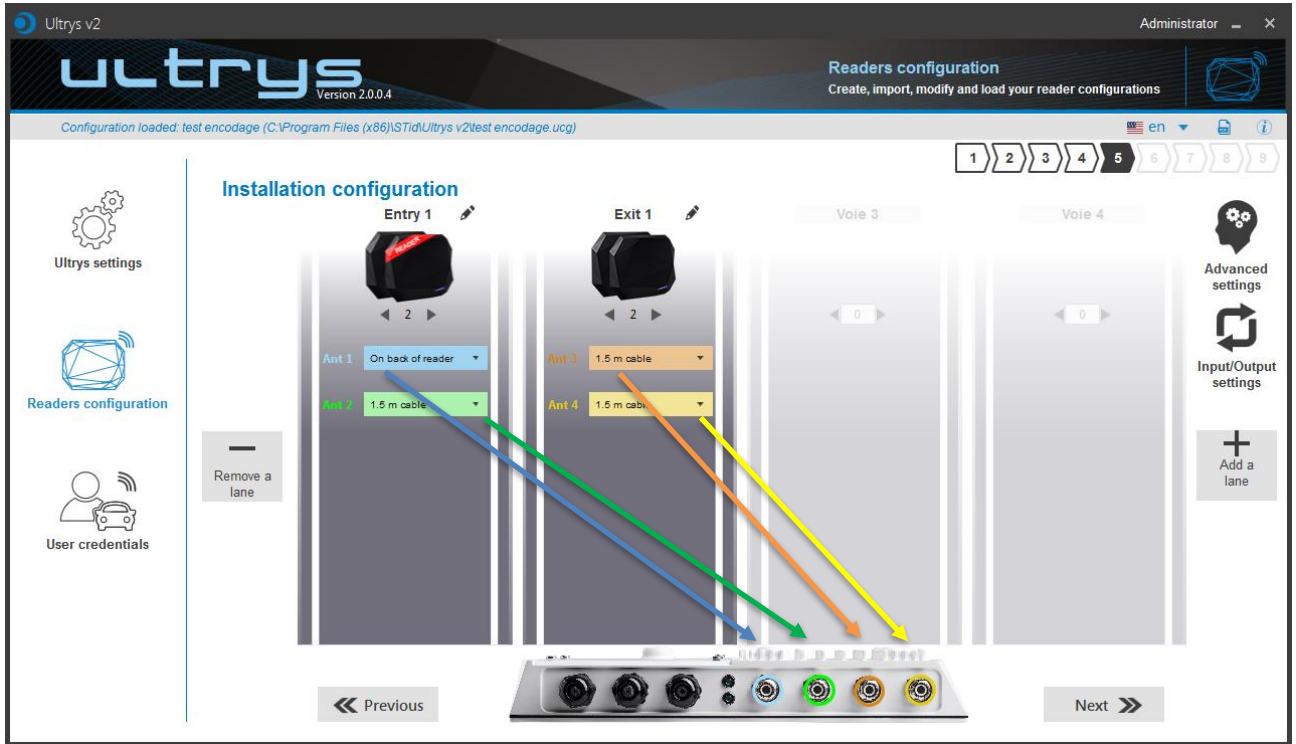


RF ports are assigned in order to add the antennas in the configuration wizard.

When an antenna is removed from the configuration, the RF port connection for other antennas does not change.

Example: Ant 2 deleted from lane 1 and added to lane 2.




5 Select the cable length for each antenna

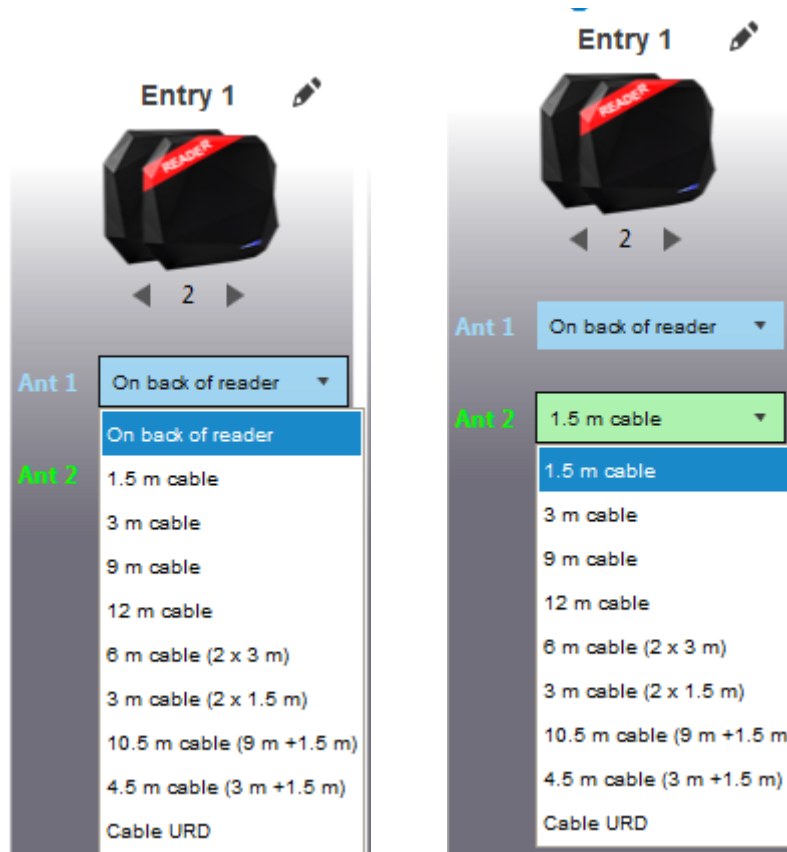

For each antenna, select the cable length you would like to use between antenna and reader.

Only the first Antenna of the lane 1 can be lean against the reader.

6 Advanced settings

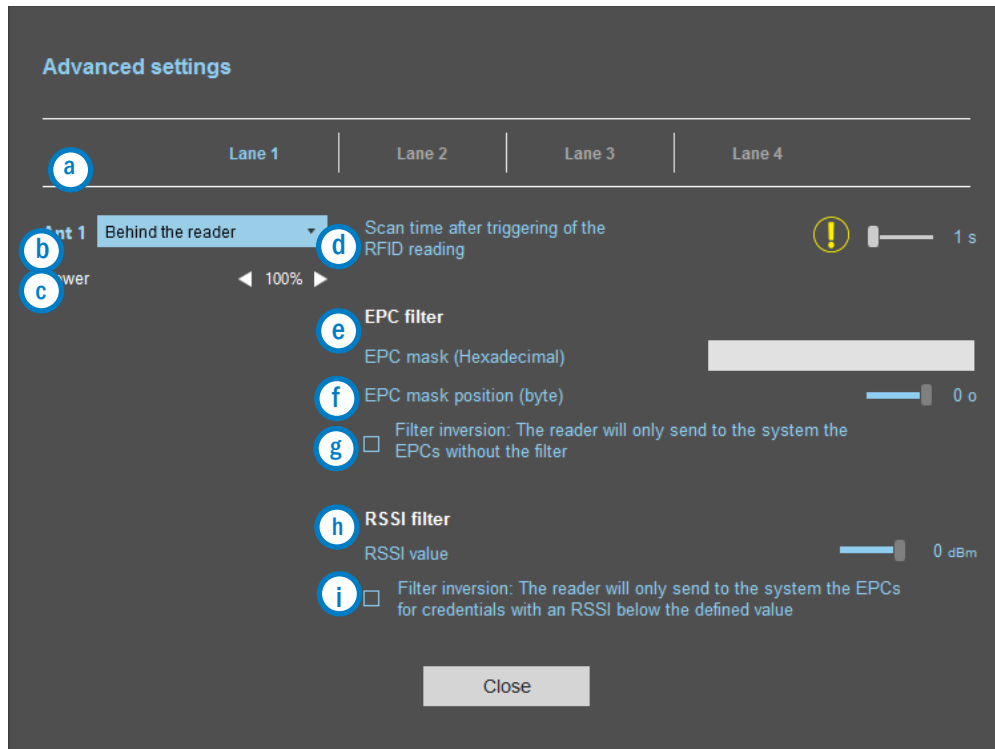


- a** Select the lane to configure. The lanes selected in installation setup are blue. When a lane is selected in Advanced parameters it is written in white.
- b** Select / Change the cable length between the antenna and the reader.
- c** Adjust the power of each antenna (from 10% to 100%) to adjust the reading distances.
- d** Adjust the timing for a scan (reading) by step of 1 second (max 30s). This setting is taking into account only if *Input type selection* is set to *Activating all lanes* or *Activating the event lane*.
- e** **The EPC filter is not available in Secure Mode.** Enter the value for EPC Mask, max 62 hexadecimal bytes.
- f** Adjust the value for offset EPC mask in bytes (0 to 65535). It depends on the EPC Mask length.
- g** Filter inversion not selected: only tags with an EPC value corresponding to the EPC mask value will be provided to the user.
Filter inversion selected: only tags with an EPC value different from the EPC mask value will be provided to the user.
- h** RSSI (Received Signal Strength Indication) is a measure of the power in reception of the tag response. The value returned by the reader is proportional to the amplitude of the reception signal
Adjust the RSSI value (-110dBm to 0dBm). 0dBm deactivates the RSSI filter.
- i** Filter inversion not selected: only tags with an RSSI greater than or equal to the specified value will be provided to the user.
Filter inversion selected: only tags with an RSSI smaller or equal to the specified value will be provided to the user.

Ex: RSSI filter = -49dBm + Reversal not selected


A tag that will have a RSSI value of -20dBm will be sent back,
 A tag that will have a RSSI value of -60dBm will not be sent back.

Scan time, EPC filter and RRSI filter settings are the same for antennas on the same lane. The cable length and RF power antenna are set for each antenna.

Example 1: 4 antennas on lane 1.

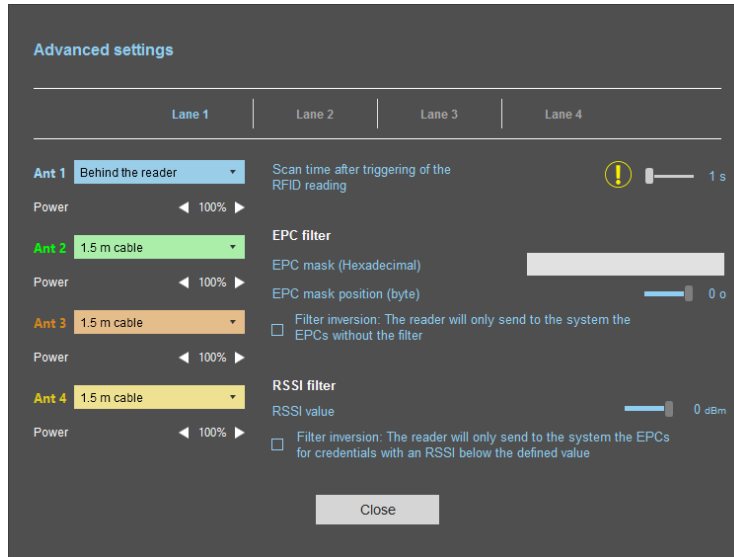

Example 2: 2 antennas on lane 1 and 2 antennas on lane 2.

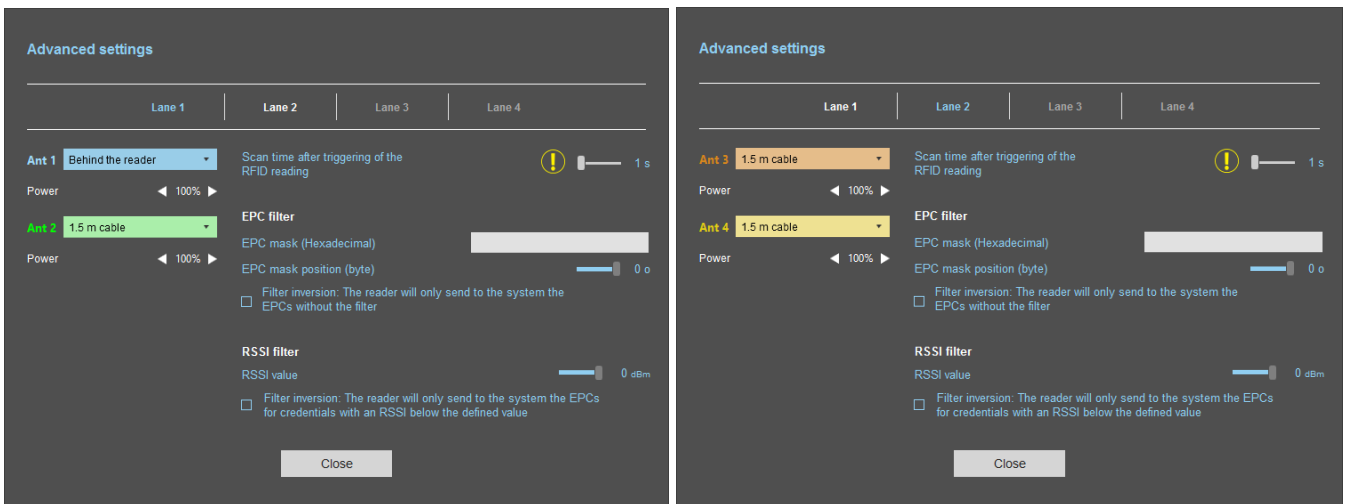

EPC filter


Example:

Code EPC Tag 1: AAAAABCD0000000000000001
 Code EPC Tag 2: AA02ABCD0000000000000002
 Code EPC Tag 3: AA02ABCD0000000000000003
 Code EPC Tag 4: AA02FFFF0000000000000003

1- EPC mask = AA AA and Offset = 0

Tag 1: AAAAABCD0000000000000001
 Tag 2: AA02ABCD0000000000000002
 Tag 3: AA02ABCD0000000000000003
 Tag 4: AA02FFFF0000000000000003


Only tag 1 is transmitted.

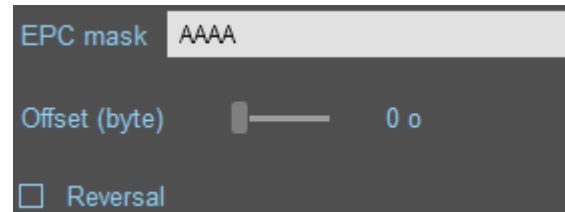

2- EPC mask = AA AA AA and Offset = 0

Tag 1: AAAAABCD0000000000000001
 Tag 2: AA02ABCD0000000000000002
 Tag 3: AA02ABCD0000000000000003
 Tag 4: AA02FFFF0000000000000003

No tag is transmitted.

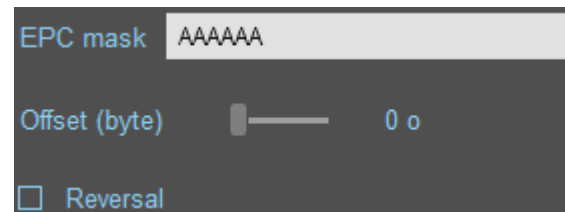

3- EPC mask = 01 and Offset = 11

Tag 1: AA AA AB CD 00 00 00 00 00 00 01
 Tag 2: AA 02 AB CD 00 00 00 00 00 00 02
 Tag 3: AA 02 AB CD 00 00 00 00 00 00 03
 Tag 4: AA 02 FF FF 00 00 00 00 00 00 03


Offset is represented in blue; the filter is done on byte 12.
 Only tag 1 is transmitted.



4- EPC mask = AB and Offset = 2


Tag 1: AA AA AB CD 00 00 00 00 00 00 01
 Tag 2: AA 02 AB CD 00 00 00 00 00 00 02
 Tag 3: AA 02 AB CD 00 00 00 00 00 00 03
 Tag 4: AA 02 FF FF 00 00 00 00 00 00 03

Tags 1, 2 and 3 are transmitted.

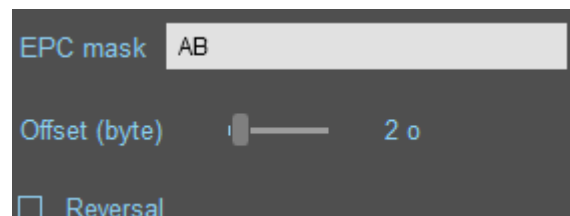

5- EPC mask = AB, Offset = 2 and Reversal

Tag 1: AA AA AB CD 00 00 00 00 00 00 00 00 01
Tag 2: AA 02 AB CD 00 00 00 00 00 00 00 00 02
Tag 3: AA 02 AB CD 00 00 00 00 00 00 00 00 03
Tag 4: AA 02 FF FF 00 00 00 00 00 00 00 00 03

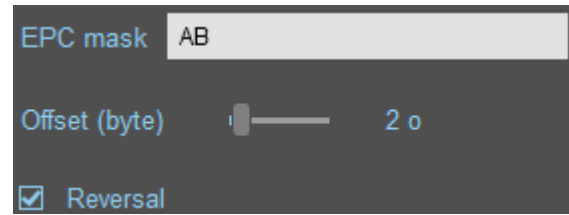

The screenshot shows a configuration window with the following settings:

- EPC mask: AB
- Offset (byte): 2
- Reversal:

Tags 1, 2 and 3 are not transmitted. Only tag 4 is transmitted.

⑦ Input/output settings

Input management

Reading mode selection: Continuous reading

Managing custom events triggered by reader inputs:

- No event
- Custom LED lighting
- Output customization

Buttons: Cancel, Next >>

Select the reading mode, the output settings depend on this mode.

Output management

Output type selection: Pull up to V+

Status of outputs:


	Open	Closed	Continuing during detection process
Output 1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 3	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 4	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>

Buttons: << Previous, Cancel, Confirm


Both types of output are Pull up to V+ or Open drain.

Status of outputs: select for each output the default state 'Open' or 'Closed' and if the state is maintained during the detection process.

a Reading mode = Continuous reading + No event

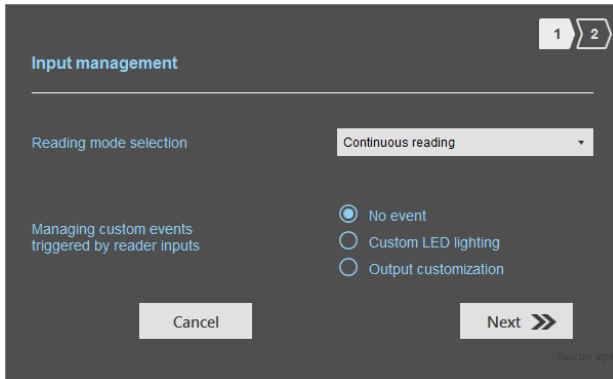


In this mode, the reader scan continuously.
There is no action on input activation.

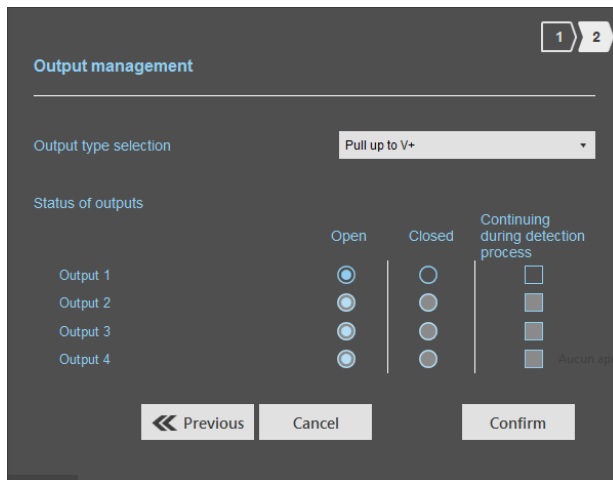

Select the output type and default state for output.

b Reading mode = Continuous reading + Customized LED lighting

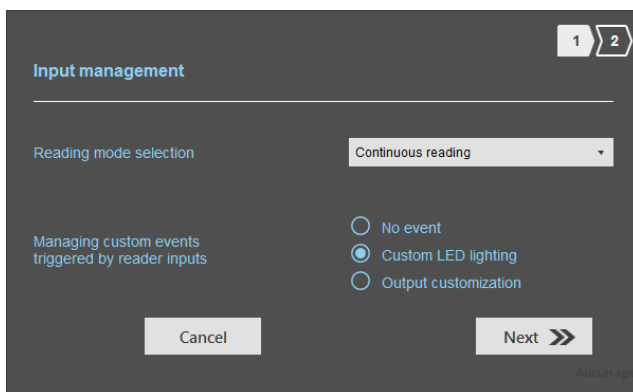


The LEDs are activated on 'Customized event' color during 1 second by Input.

Ex:

- On lane 1 there is one antenna, an action on Input1 activates the LED during 1 second.
- On lane 2 there are four antennas, an action on Input2 activates the LED on each antenna during 250 ms.




The LED 'Customized event' color is defined on step 6: Setting up light indicator.

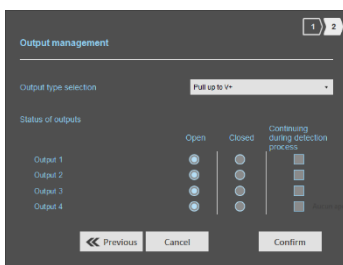


Nothing to do.

C Reading Mode = Continuous reading + Output customization

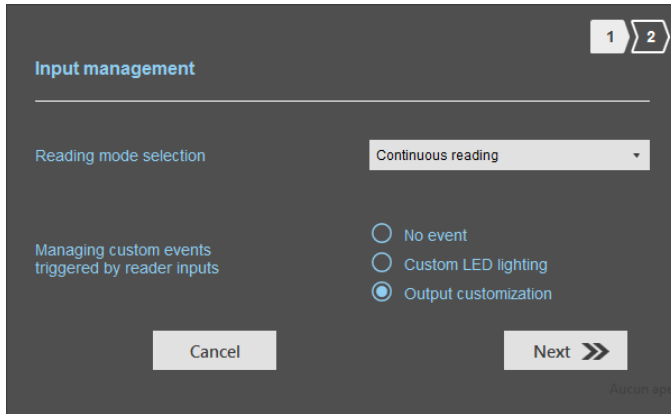


An action on Input toggles the corresponding output regardless of RF function of the reader.

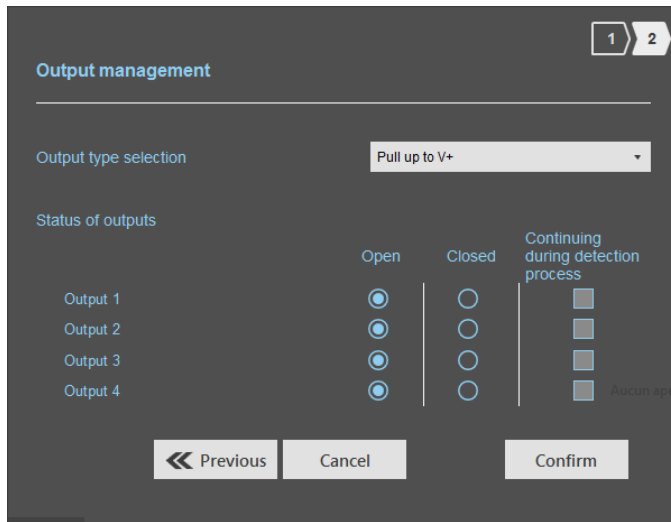


Select the output type and default state for output.


d Reading Mode = Activate all lanes

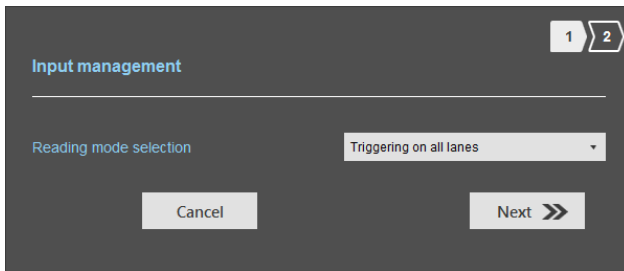

If an Input is activated (In1, In2, In3 or In4), the reader scans on all lanes set.

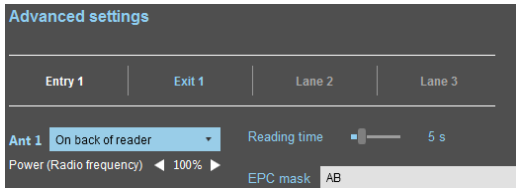


The duration of the reading is defined in 'Advanced settings'.

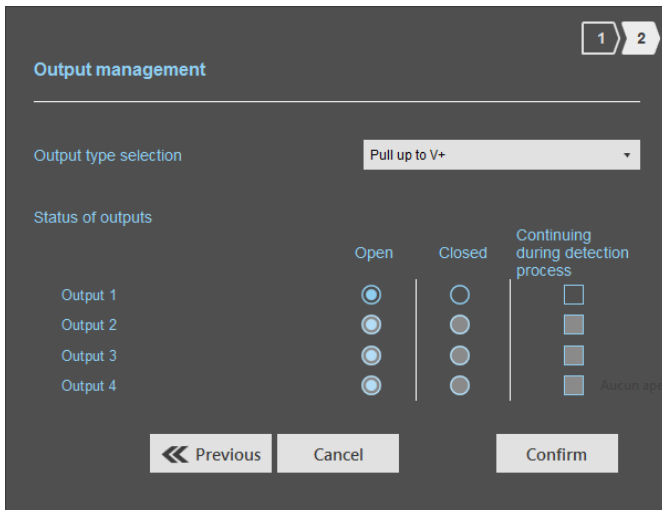


Select the output type and default state for output.


e Reading mode = Triggering on the lane with the event

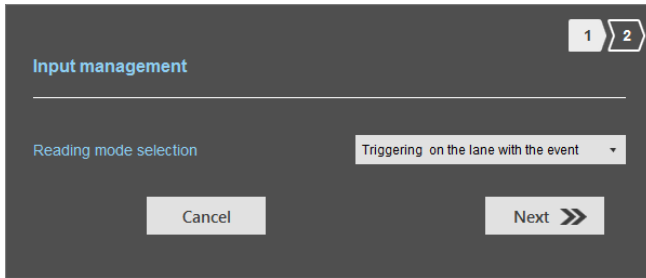

If an Input is activated, the reader scans on the corresponding lane.

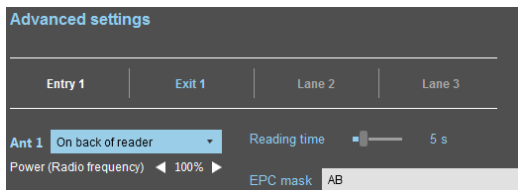

The reading duration is defined in 'Advanced settings'.

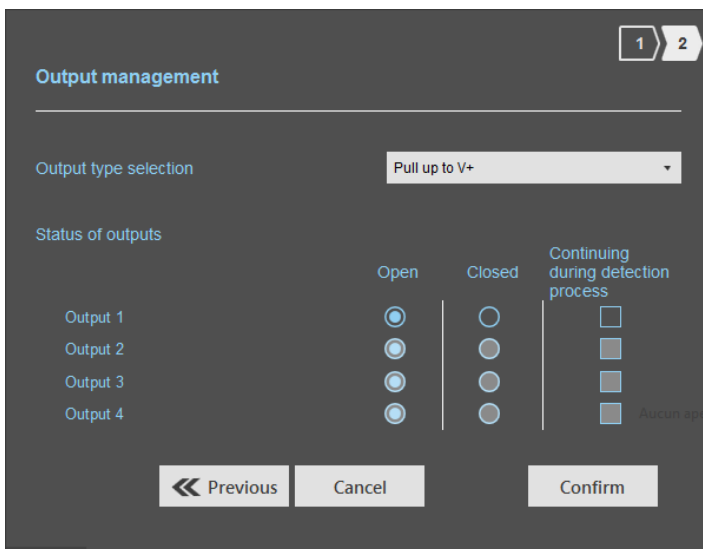


Select the output type and default state for output.

Summary table

Reading Mode	Input	Configurable Outputs states?	Maintain during detection available?	Output
a Continuous reading + No event	No action	Yes by lane	Yes by lane	<ul style="list-style-type: none"> - If 'Continuing during detection process' not activated: the output state toggles at the ascent. - If 'Continuing during detection process' activated: the output state toggles to the RF detection and remains in this state as long as, at each scan is at least one detection.
b Continuous reading + Custom LED lighting	Custom LED lighting for all antennas / lane	No	No	In this mode the Outputs are not usable.
c Continuous reading + Output customization	An action on an Input toggles the corresponding output.	Yes	No	The output state is only linked to a user action on the input.
d Triggering on all lanes	An action on any input activates the reading on all configured lanes.	Yes by lane	Yes	- If 'Continuing during detection process' not activated: the output state toggles at the ascent during the ascent time of the identifier (physically on the BUS + 200ms).
e Triggering on the lane with the event	An action on Input x activate the scan on lane x.	Yes by lane	Yes	<ul style="list-style-type: none"> - If 'Continuing during detection process' activated: the output state toggles to the RF detection and remains in this state as long as, at each scan is at least one detection.

Note: as long as the action is detected on the input, the output remains toggled.

Step 6- SPECTRE Read Only - Setting up light indicator

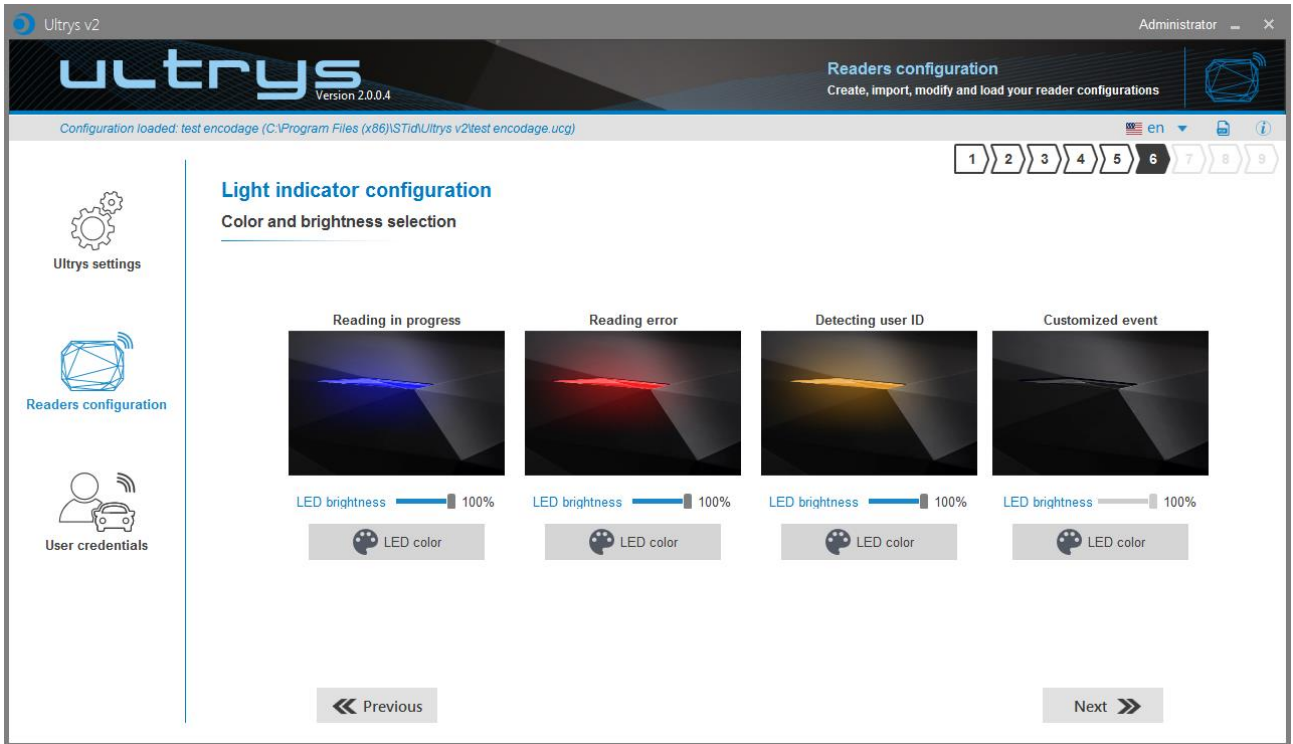

Reading in progress:

This LED lights when the RF is on.

After initializing reader sequence, this LED must be lit on the selected color.

Reading error:

This LED lights when the RF is bad, in this case the reader can't read the tag.

- Check the antenna connection
- Check the antenna cable

Detecting user ID:

This LED lights when a tag is detected by the antenna.


Customized event*:

By default, there is no color.


LED brightness:

The LED brightness can be adjusted by step of 10% (from 10% to 100%)


LED color:

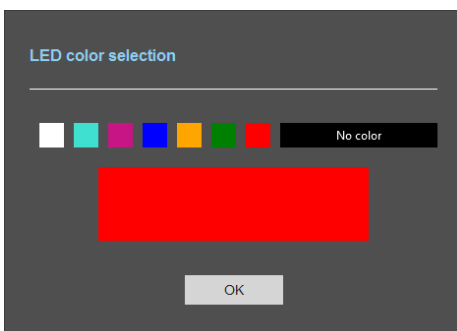

*The LED 'Customized event' only appears if 'Reading Mode' = Continuous reading + custom LED lighting

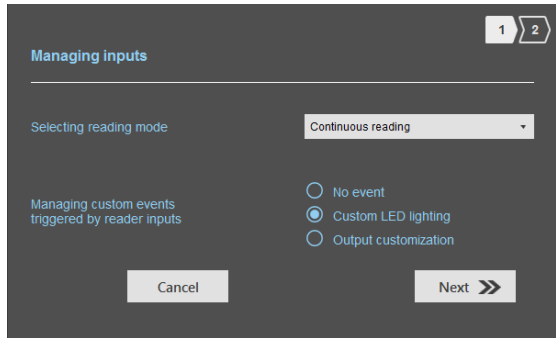

Default display:

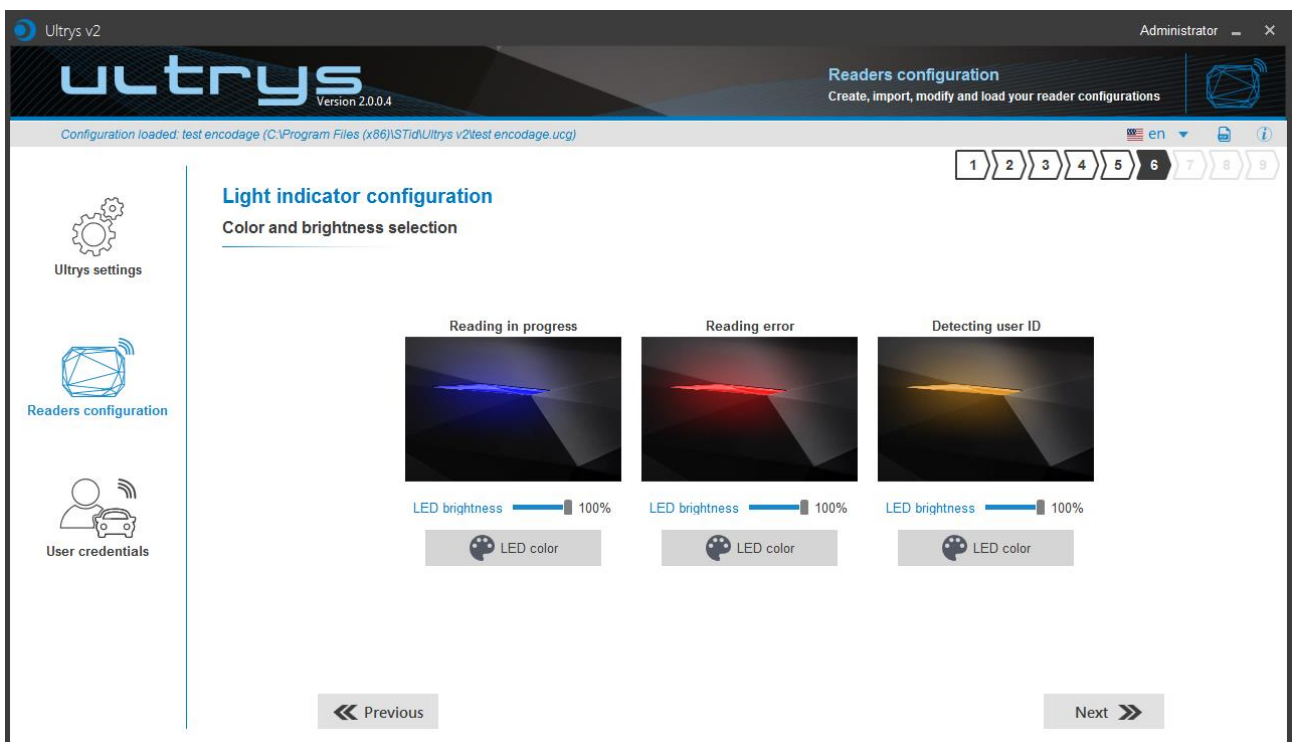

Step 7- SPECTRE Read Only - Communication protocol

1 **Communication protocol**

Authenticated encryption of EPC data (Secure mode)

User ID security (EPC)

Private key definition (16 bytes)

C06A8B4BC4554F0D5E043D456D137109

The EPC can be encrypted and signed before being written in the tag.

The reader will decrypt and authenticate the EPC before sending it on its output media.


Only an EPC correctly decrypted and authenticated will produce an output data, otherwise the reader will remain mute.

Notes:


- Only UHF tags compatible with “FAST ID” feature and having at least 128 bits of EPC can be decrypted and authenticated by the SPECTRE Access reader. The chips compatible with secure encoding are: Monza X, Monza R6P, Monza 4D, this chip is present into
 - TLTA-W53M-943_S
 - TLTA-W75B-943_S
 - IronTag 206
 - CCTW490_AN
- **The secure mode is not accessible if an EPC mask has been set in ‘Advanced settings’.**

Note: After setting an EPC security key, if you return to step 5 with the Previous button, and you set an EPC filter, then returning to step 7, the "EPC ID Security" checkmark is displayed. in gray, the key field is still accessible but not taken into account.

② The displays depend on the Ultrys version chosen in step 3.

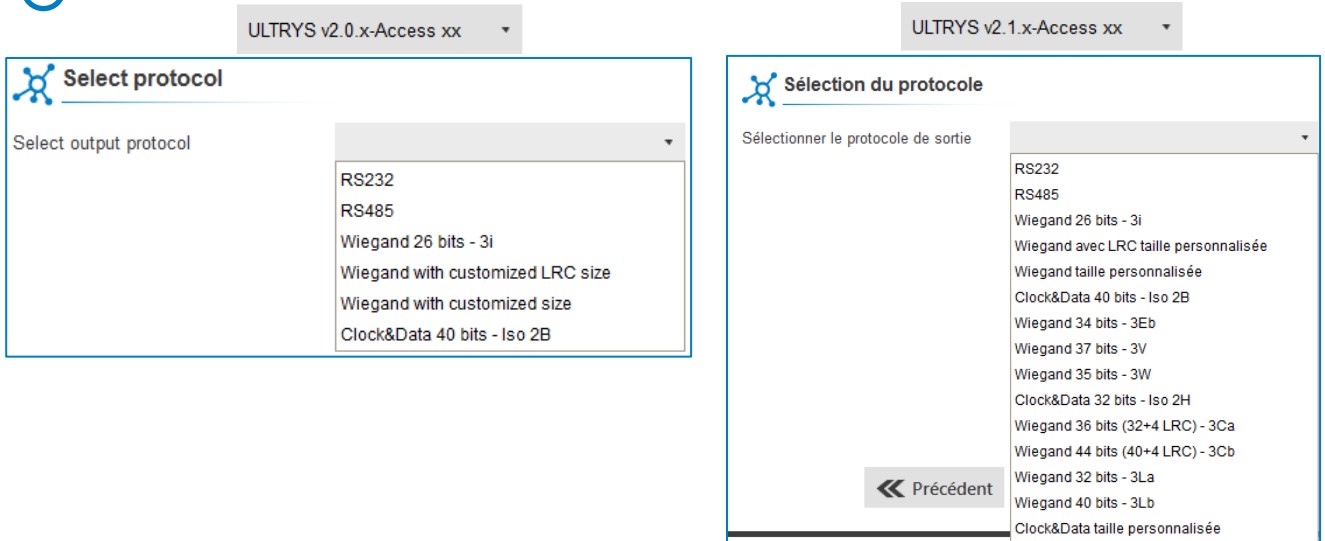

RS232 / RS485

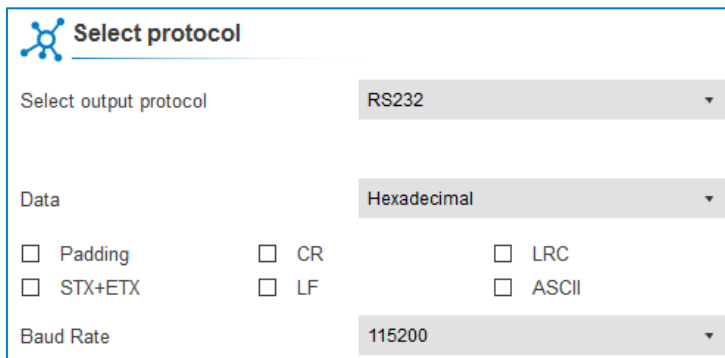

Serial frame:


**Doubled if the ASCII option is*

1 byte	X bytes	1 byte	1 byte	1 byte	1 byte
STX	Data*	LRC	CR	LF	ETX

activated.


Data	Data sent in decimal or hexadecimal format.
Padding	Add on the frame leading zeros. If this option is not activated, the leading zeros won't be sent.
STX+ETX	Add STX (0x02) and ETX (0x03) in the frame.
CR	Carriage return (0x0D).
LF	Line feed (0x0A).
LRC	Checksum byte by XORing of all previously characters without the STX.
ASCII	If this option is activated, the <u>Data</u> will be sent in ASCII mode.
Baud Rate	9600, 19200, 38400, 57600 or 115200 bauds.

Wiegand 26 bits- 3i

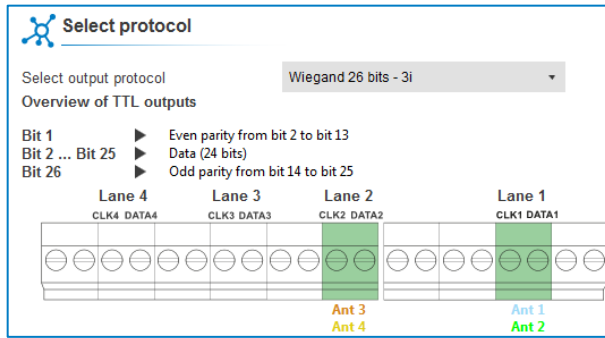


Note: the graphic indicating the lanes, depends on the configuration of the number of antennas/lanes.


Wiegand with LRC customized size

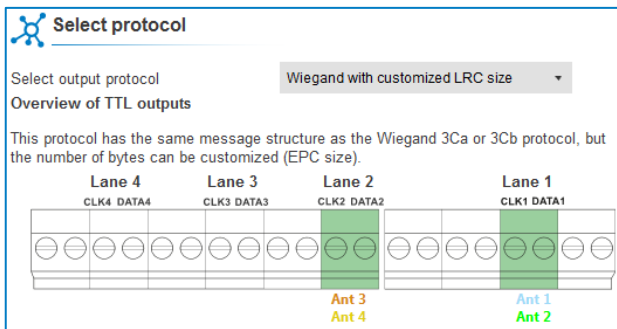

Wiegand customized size

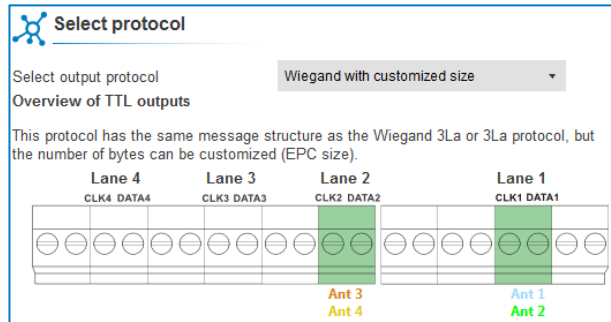

Decimal Clock&Data – Iso 2B

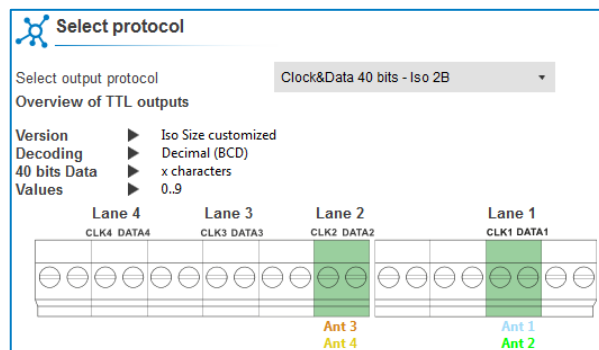

3 EPC size (bytes) 30

Protocol	Size in plain mode	Size in secure mode
RS232 / RS485	1b up to 62b	1b up to 6b
Wiegand 26 bits	Fixed to 3b	Fixed to 3b
Wiegand with LRC custom size / Wiegand custom size	1b up to 16b	1b up to 6b
Decimal Clock&Data – Iso 2B	1b up to 7b	1b up to 6b

4 EPC code feedback format Mode 1 (Standard)

Format details Mode 3

- Mode 1 (Standard)
- Mode 2 (Standard reversed)
- Mode 3
- Mode 4

There are 4 modes to feedback the EPC.

Example: EPC data: AA BB CC DD EE xx xx ... VV WW XX YY ZZ with 'EPC size' fixed to 4bytes.

- Mode 1 : EPC feedback = WW XX YY ZZ
- Mode 2 : EPC feedback = ZZ YY XX WW
- Mode 3 : EPC feedback = AA BB CC DD
- Mode 4 : EPC feedback = DD CC BB AA

5 **Filtering**


Time between same user ID being read twice 6 s

The reader emits the credential code present in the field only once during this time.


This time is adjustable from 0 to 30 seconds.

Clock&Data ISO2B protocol

Chronograms

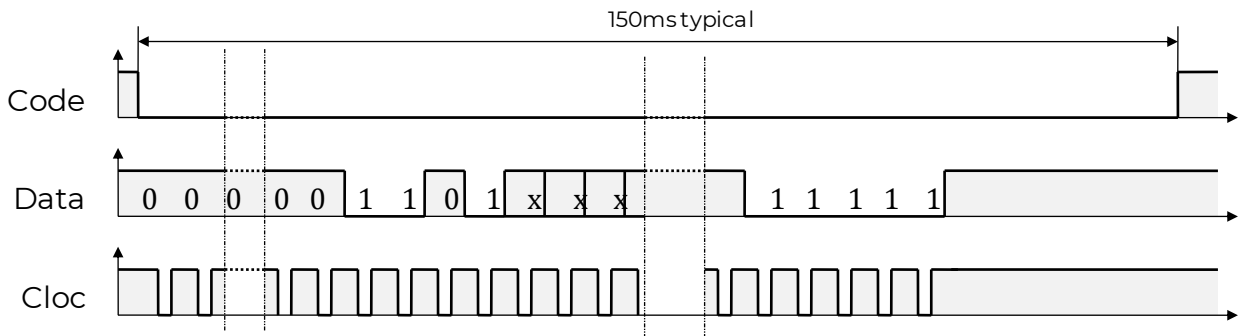

Clock details

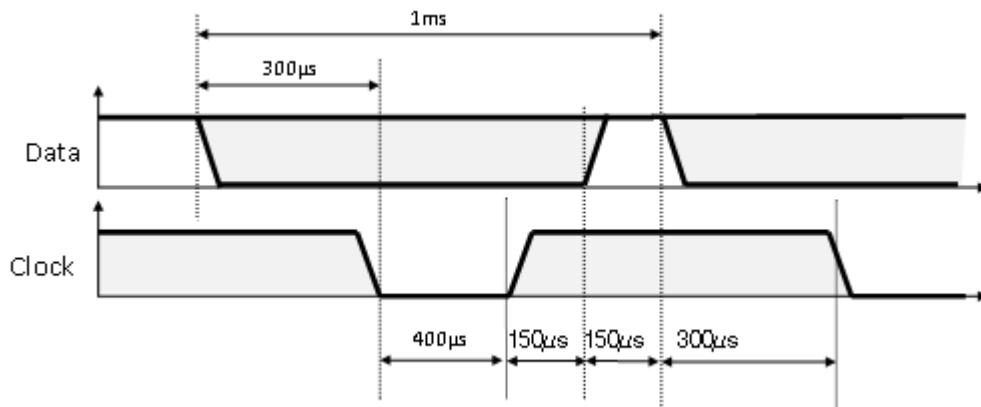

Message structure

Leading zeroes	Start Sentinel	Data	End Sentinel	LRC	Trailing zeroes
----------------	----------------	------	--------------	-----	-----------------

Message description

The frame is made of a first series of 16 zero followed by synchronization characters of 5 bits (4 bits, LSB first, plus 1 parity bit). It ends the frame with trailing zero without a clock. The message consists of the following:

- Start Sentinel:* 1 character 1011b (0x0B) – parity bit 0. Transmission 1101 0
- Data:* According to EPC size: 3 up to 17 decimal characters
- End Sentinel:* 1 character 1111b (0x0F) - parity bit 1. Transmission 1111 1
- LRC:* 1 control character, which is the « XOR » of all characters.


Example Clock&data size 5 bytes:

For a hexadecimal user code of « 0x187E775A7F », the output code will be: « 0105200966271 ». The frame sent by reader will be:

000...	1101 0	0000 1	1000 0	0000 1	1010 1	...	0110 1	0100 0	1110 0	1000 0	1111 1	1111 1	000...
	B	0	7	0	5	2 0 09 6	6	2	7	1	F	F	
Zero	S.S	Char.1	Char.2	Char.3	Char.4	Char.	Char.10	Char.11	Char.12	Char.13	E.S	LRC	Zero

Wiegand Protocols

Chronograms

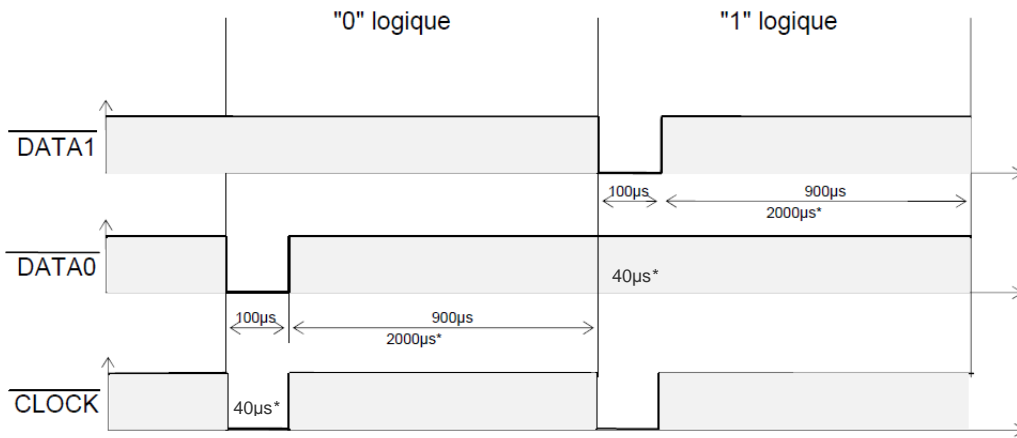

* variant 3i timings

Wiegand 3i protocol

Variant	Decoding	24 bits data	Values
3i	Hexadecimal	6 characters	0 to F

Message structure

Bit 1	Bit 2 ... Bit 25	Bit 26
Even parity from bit 2 to bit 13	Data (24 bits)	Odd parity from bit 14 to bit 25

Message description

The frame consists of 26 bits as follows:

- First parity: 1bit even parity of next 12 bit
- Data: 6 hexadecimal characters 'MSB first'
- Last parity: 1bit odd parity of previous 12 bits

Example: for the hexadecimal code « 0x0FC350 », the frame sent will be:

0	0000	1111	1100	0011	0101	0000	1
	0	F	C	3	5	0	
Parity	Char.1	Char. 2	Char. 3	Char. 4	Char. 5	Char. 6	Parity

Wiegand 3CB protocol

Bit 1 ... Bit 40	Bit 41... Bit 44
Data « MSB first »	LRC

Message description

The frame consists of 44 bits as follows:

Data: 10 hexadecimal characters « MSB first »
 LRC: 1 control char, all characters « XORed »

Example: for the hexadecimal code « 0x01001950C3 », the frame sent will be:

0000	0001	0000	0000	0001	1001	0101	0000	1100	0011	0011
0	1	0	0	1	9	5	0	C	3	3
Char.1	Char.2	Char.3	Char.4	Char.5	Char.6	Char.7	Char.8	Char.9	Char.10	LRC

Wiegand 3CA protocol

Bit 1 ... Bit 36	Bit 37... Bit 36
Data « MSB first »	LRC

Message description

The frame consists of 36 bits as follows:

Data: 8 hexadecimal characters « MSB first » (32 bits)
 LRC: 1 control char, all characters « XORed »

Example: for the hexadecimal code « 0x001950C3 », the frame sent will be:

0000	0000	0001	1001	0101	0000	1100	0011	0010
0	0	1	9	5	0	C	3	2
Char.1	Char.2	Char.3	Char.4	Char.5	Char.6	Char.7	Char.8	LRC

Wiegand 3LA protocol

Same as « Wiegand 3CA » WITHOUT LRC.

Wiegand 3LB protocol

Same as « Wiegand 3CB » WITHOUT LRC.

Wiegand 3Eb protocol

Bit 1	Bit 2 ... Bit 33	Bit 34
Even parity from bit 2 to bit 17	Data (32 bits)	Odd parity from bit 18 to bit 33

Message description

The frame consists of 34 bits as follows:

First parity: 1bit even parity of next 16 bit
Data: 8 hexadecimal characters 'MSB first'
Last parity: 1bit odd parity of previous 16 bits

Wiegand 3V protocol

Bit 1	Bit 2 ... Bit 36	Bit 37
Even parity from bit 2 to bit 19	Data (35 bits)	Odd parity from bit 19 to bit 36

Message description

The frame consists of 37 bits as follows:

First parity: 1bit even parity of next 18 bit
Data: 8 hexadecimal characters 'MSB first'
Last parity: 1bit odd parity of previous 18 bits

Example

Hexadécimal code « 0x 0F3129DD3B », the frame will be :

1	111	0011	0001	0010	1001	1101	1101	0011	1011	0
	7	3	1	2	9	D	D	3	B	
Parity	Char	Char	Char	Char	Char	Char	Char	Char	Char	Parity
	1	2	3	4	5	6	7	8	9	

Wiegand 3W protocol

Bit 1-2	Bit 3 ... Bit 34	Bit 35
2 Even parity	Data (32 bits)	Odd parity

Step 4- SPECTRE OSDPTM - Antenna type selection

The OSDP SPECTRE reader only works with new SPECTRE antennas (ANT_UHF2).

Step 4 does not exist in the OSDP Wizard.

Step 5- SPECTRE OSDPTM - Installation configuration



① Name the lane

Maximum 10 characters.

For example, Entry1.

②③ Add / Delete lane

Use 'Add /Delete lane' to configure the number of lanes you will use in your application.

The default setting is one antenna on the first lane.

For more information about the possible combination please refer to the document [NA_SPECTRE](#).

In OSDP the lane number corresponds to the osdp Reader Number:



Multi-lane OSDP management

To know on which lane does the credential detection "osdp_RAW response" come from or on which lane we have to send the "osdp_LED command", the system needs to manage the "Reader Number" byte expected by the OSDP V2.1.7 protocol.

Reader Number" byte definition

Reader Number" byte = 0 => "First Reader" (Lane 1)

Reader Number" byte = 1 => "Second Reader" (Lane 2)

Reader Number" byte = 2 => "Third Reader" (Lane 3)


Reader Number" byte = 3 => "Fourth Reader" (Lane 4)

Close

④ Add / Remove antenna on lane

Set the number of antennas on the corresponding lane.

When an antenna is added, the RF port to which the antenna has to be connected appears on the reader with corresponding color to help the installation.

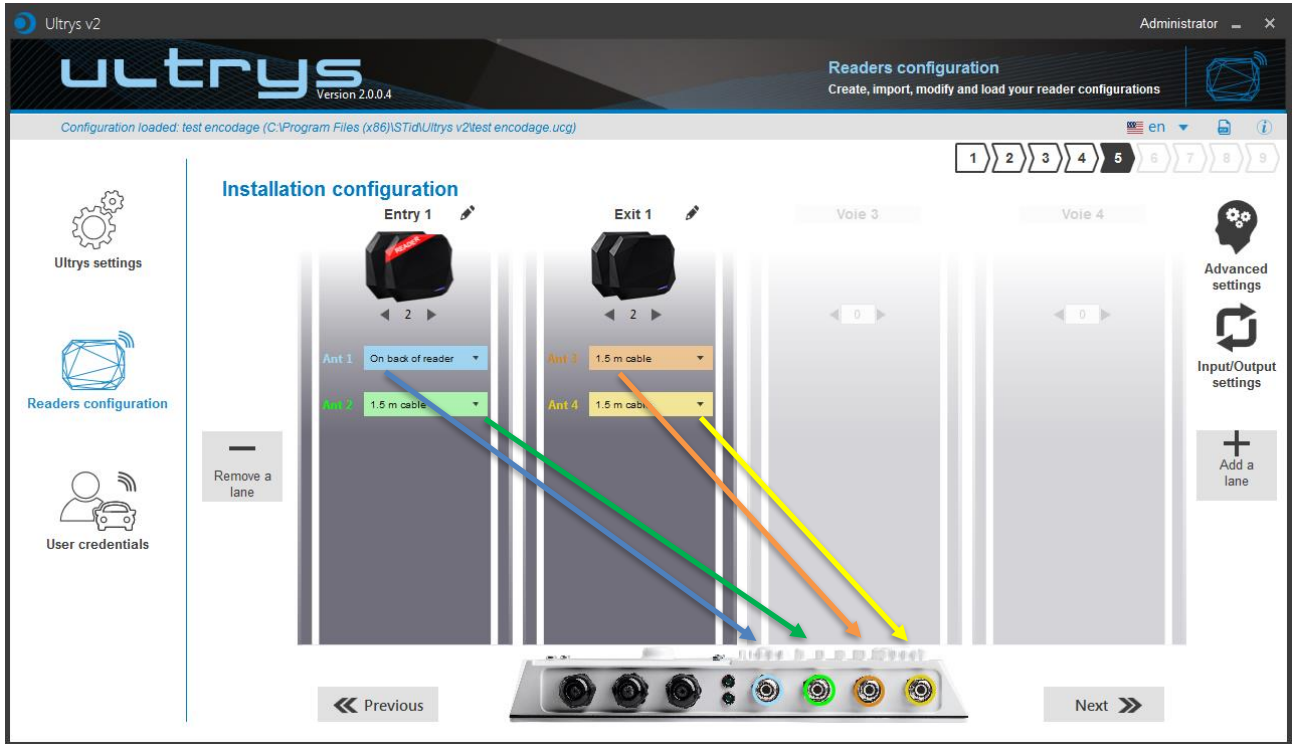


RF ports are assigned in order to add the antennas in the configuration wizard.

When an antenna is removed from the configuration, the RF port connection for other antennas does not change.

Example: Ant 2 deleted from lane 1 and added to lane 2.




5 Select the cable length for each antenna

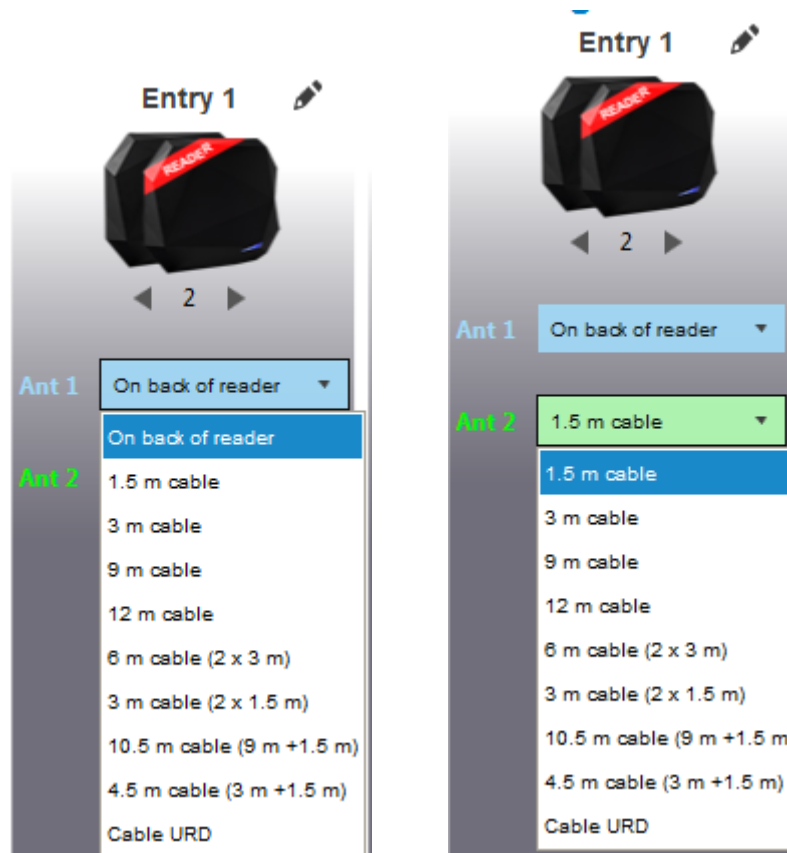

For each antenna, select the cable length you would like to use between antenna and reader.

Only the first Antenna of the lane 1 can be lean against the reader.

⑥ Advanced settings

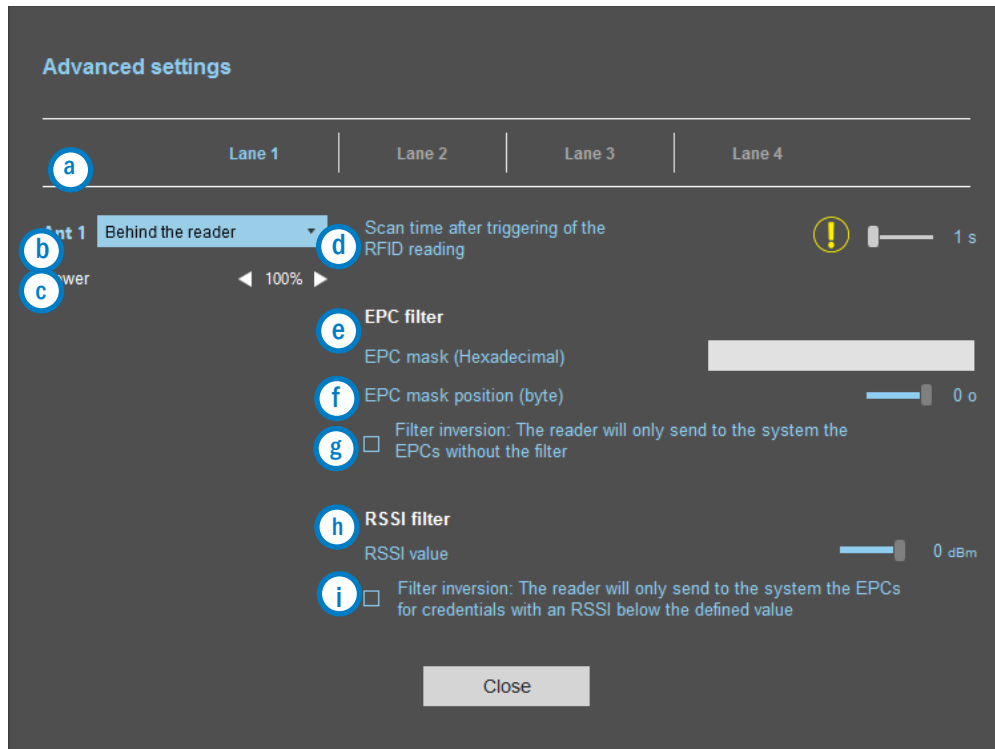


- a** Select the lane to configure. The lanes selected in installation setup are blue. When a lane is selected in Advanced parameters it is written in white.
- b** Select / Change the cable length between the antenna and the reader.
- c** Adjust the power of each antenna (from 10% to 100%) to adjust the reading distances.
- d** Adjust the timing for a scan (reading) by step of 1 second (max 30s). This setting is taking into account only if *Input type selection* is set to *Activating all lanes* or *Activating the event lane*.
- e** **The EPC filter is not available in Secure Mode.**
Enter the value for EPC Mask, max 62 hexadecimal bytes.
- f** Adjust the value for offset EPC mask in bytes (0 to 65535). It depends on the EPC Mask length.
- g** Filter inversion not selected: only tags with an EPC value corresponding to the EPC mask value will be provided to the user.
Filter inversion selected: only tags with an EPC value different from the EPC mask value will be provided to the user.
- h** RSSI (Received Signal Strength Indication) is a measure of the power in reception of the tag response. The value returned by the reader is proportional to the amplitude of the reception signal
Adjust the RSSI value (-110dBm to 0dBm). 0dBm deactivates the RSSI filter.
- i** Filter inversion not selected: only tags with an RSSI greater than or equal to the specified value will be provided to the user.
Filter inversion selected: only tags with an RSSI smaller or equal to the specified value will be provided to the user.



Ex: RSSI filter = -49f=dBm + Reversal not selected
 A tag that will have a RSSI value of -20dBm will be sent back,
 A tag that will have a RSSI value of -60dBm will not be sent back.

Scan time, EPC filter and RRSI filter settings are the same for antennas on the same lane. The cable length and RF power antenna are set for each antenna.

Example 1: 4 antennas on lane 1.

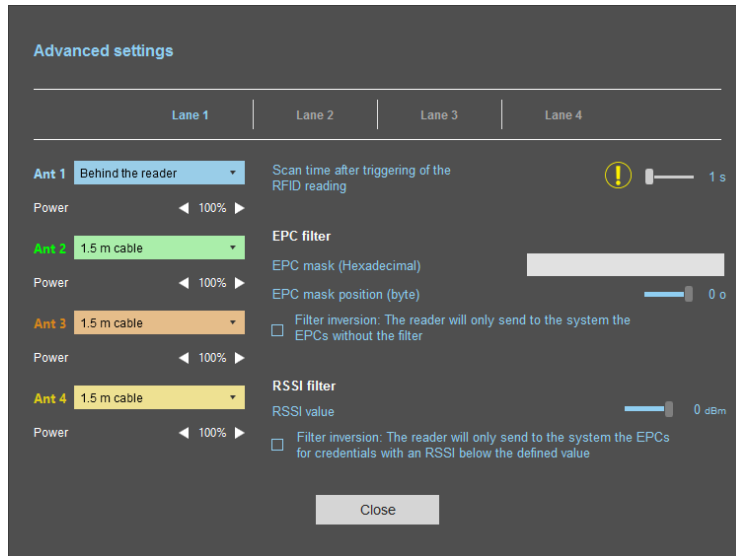

Example 2: 2 antennas on lane 1 and 2 antennas on lane 2.

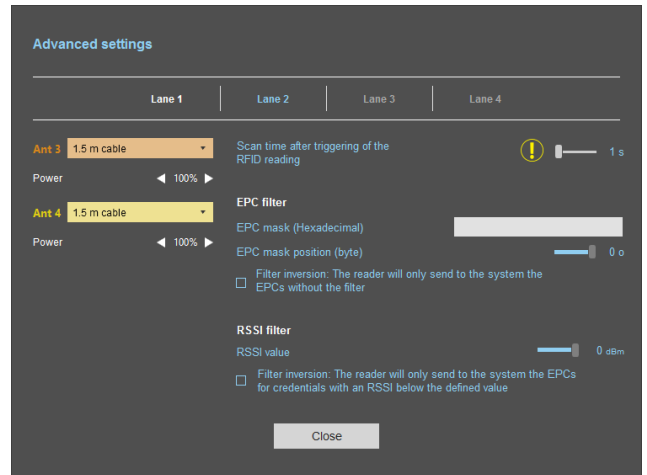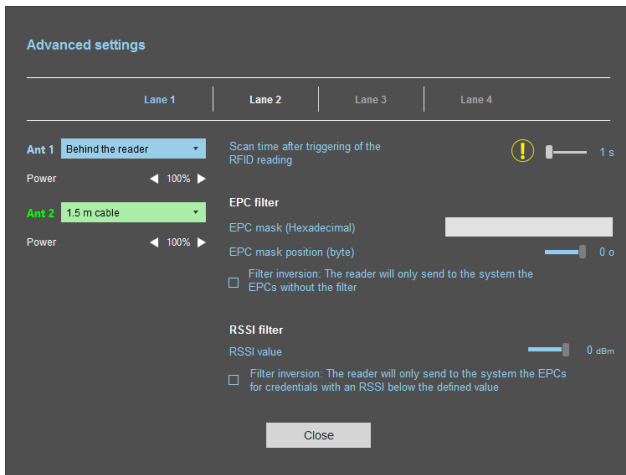

EPC filter


Example:

Code EPC Tag 1: AAAAABCD0000000000000001
 Code EPC Tag 2: AA02ABCD0000000000000002
 Code EPC Tag 3: AA02ABCD0000000000000003
 Code EPC Tag 4: AA02FFFF0000000000000003

1- EPC mask = AA AA and Offset = 0

Tag 1: AAAAABCD0000000000000001
 Tag 2: AA02ABCD0000000000000002
 Tag 3: AA02ABCD0000000000000003
 Tag 4: AA02FFFF0000000000000003


Only tag 1 is transmitted.

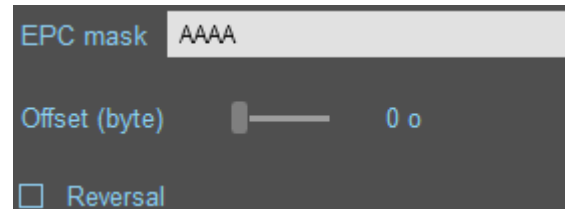

2- EPC mask = AA AA AA and Offset = 0

Tag 1: AAAAABCD0000000000000001
 Tag 2: AA02ABCD0000000000000002
 Tag 3: AA02ABCD0000000000000003
 Tag 4: AA02FFFF0000000000000003


No tag is transmitted.

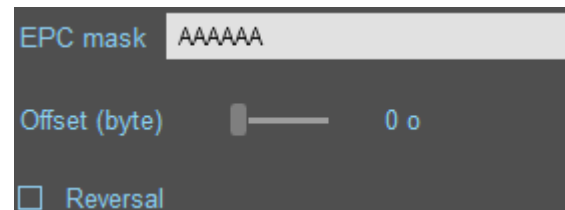

3- EPC mask = 01 and Offset = 11

Tag 1: AA AA AB CD 00 00 00 00 00 00 01
 Tag 2: AA 02 AB CD 00 00 00 00 00 00 02
 Tag 3: AA 02 AB CD 00 00 00 00 00 00 03
 Tag 4: AA 02 FF FF 00 00 00 00 00 00 03


Offset is represented in blue; the filter is done on byte 12.
 Only tag 1 is transmitted.

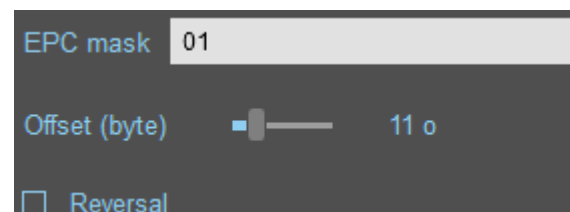

4- EPC mask = AB and Offset = 2


Tag 1: AA AA AB CD 00 00 00 00 00 00 01
 Tag 2: AA 02 AB CD 00 00 00 00 00 00 02
 Tag 3: AA 02 AB CD 00 00 00 00 00 00 03
 Tag 4: AA 02 FF FF 00 00 00 00 00 00 03

Tags 1, 2 and 3 are transmitted.

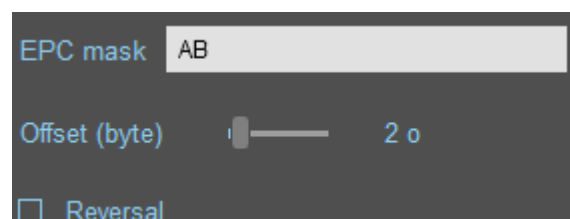

5- EPC mask = AB, Offset = 2 and Reversal

Tag 1: AA AA AB CD 00 00 00 00 00 00 00 00
01
Tag 2: AA 02 AB CD 00 00 00 00 00 00 00 00
02
Tag 3: AA 02 AB CD 00 00 00 00 00 00 00 00 03
Tag 4: AA 02 FF FF 00 00 00 00 00 00 00 00 03

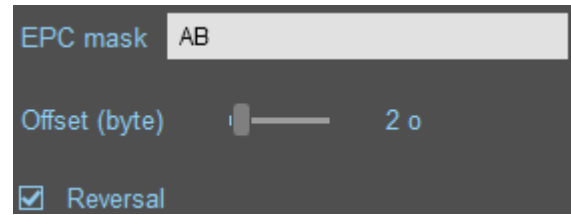

The screenshot shows a configuration window with the following settings:

- EPC mask: AB
- Offset (byte): 2
- Reversal:

Tags 1, 2 and 3 are not transmitted. Only tag 4 is transmitted.

⑦ Input/output settings

1
2

Input management

Reading mode selection Continuous reading ▾

Cancel
Next >>

1
2

Output management

Output type selection Pull up to V+ ▾

Status of outputs


	Open	Closed
Output 1	<input checked="" type="radio"/>	<input type="radio"/>
Output 2	<input checked="" type="radio"/>	<input type="radio"/>
Output 3	<input checked="" type="radio"/>	<input type="radio"/>
Output 4	<input checked="" type="radio"/>	<input type="radio"/>

<< Previous
Cancel
Confirm


Both types of output are Pull up to V+ or Open drain.

Status of outputs: select for each output the default state 'Open' or 'Closed'.

a Reading Mode = Continuous reading

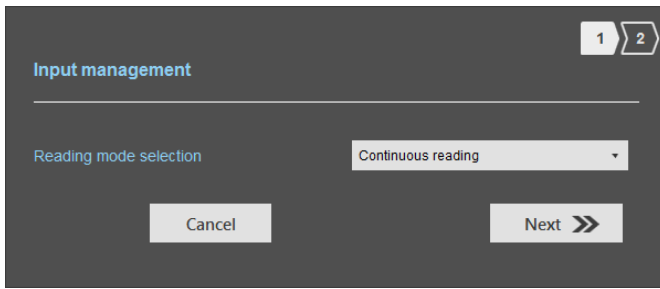


In this mode, the reader scan continuously.

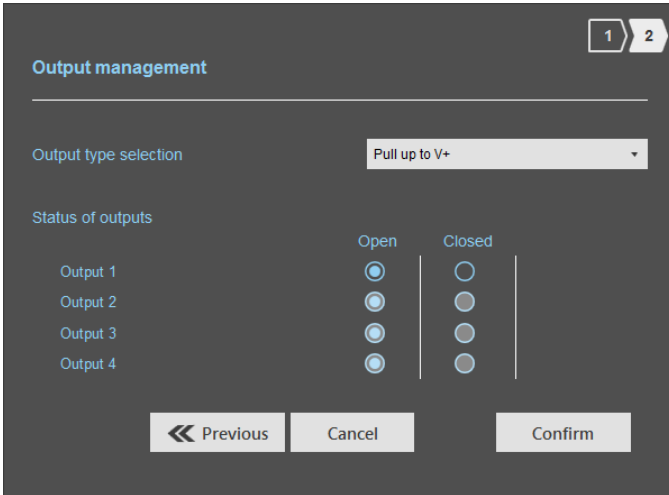

Select the output type and default state for output.


b Reading Mode = Activate all lanes

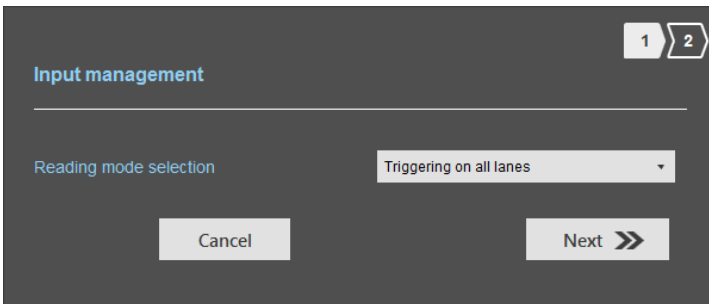

If an Input is activated (In1, In2, In3 or In4), the reader scans on all lanes set.




The duration of the reading is defined in 'Advanced settings'.

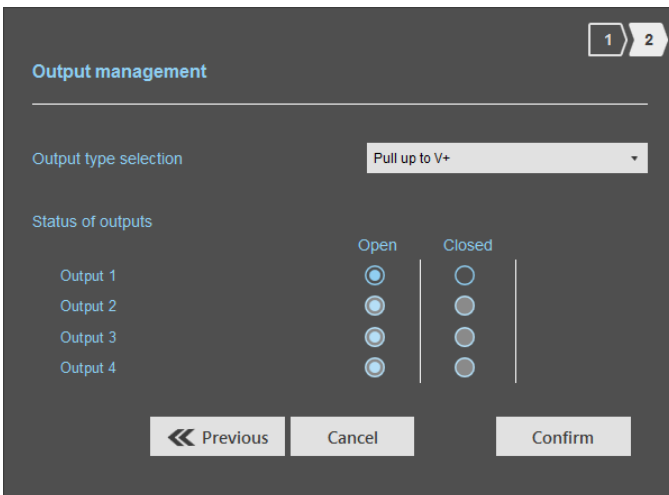

Select the output type and default state for output.


c Reading mode = Triggering on the lane with the event

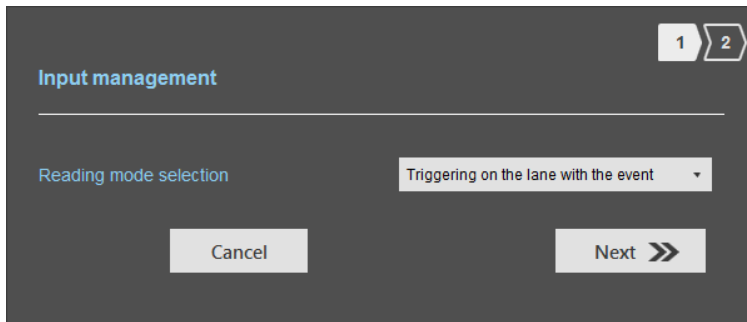

If an Input is activated, the reader scans on the corresponding lane.



The duration of the reading is defined in 'Advanced settings'.

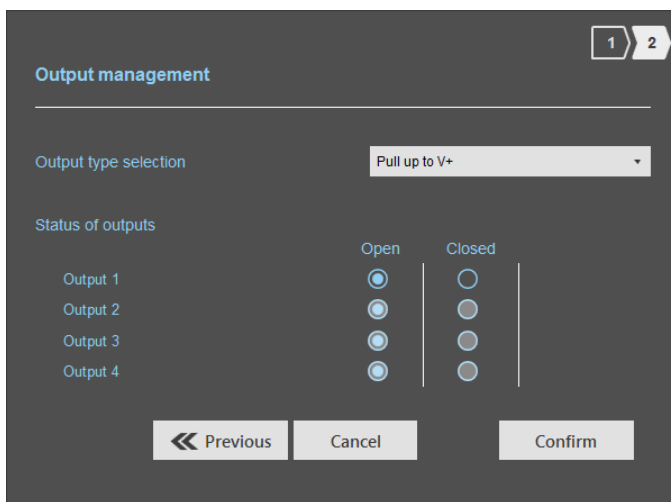

Select the output type and default state for output.

Summary table

Reading Mode	Input	Configurable Outputs states?	Output
a Continuous reading	No action	Yes by lane	The output state toggles at the ascent.
b Triggering on all lanes	An action on any input activates the reading on all configured lanes.	Yes by lane	The output state toggles at the ascent during the ascent time of the identifier (physically on the BUS + 200ms).
e Triggering on the lane with the event	An action on Input x activate the scan on lane x.	Yes by lane	

Step 6- SPECTRE OSDPTM - Setting up light indicator




Detecting user ID:



This LED lights when a tag is detected by the antenna.

Warning: An osdp_LED command cancels this color.

LED color:

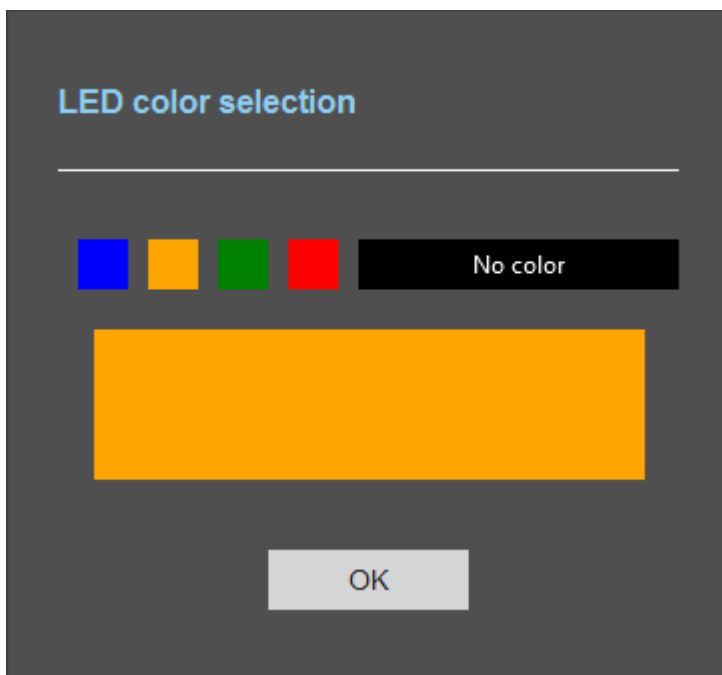

Step 7- SPECTRE OSDP™ - Communication protocol

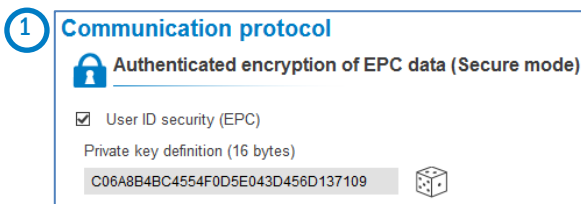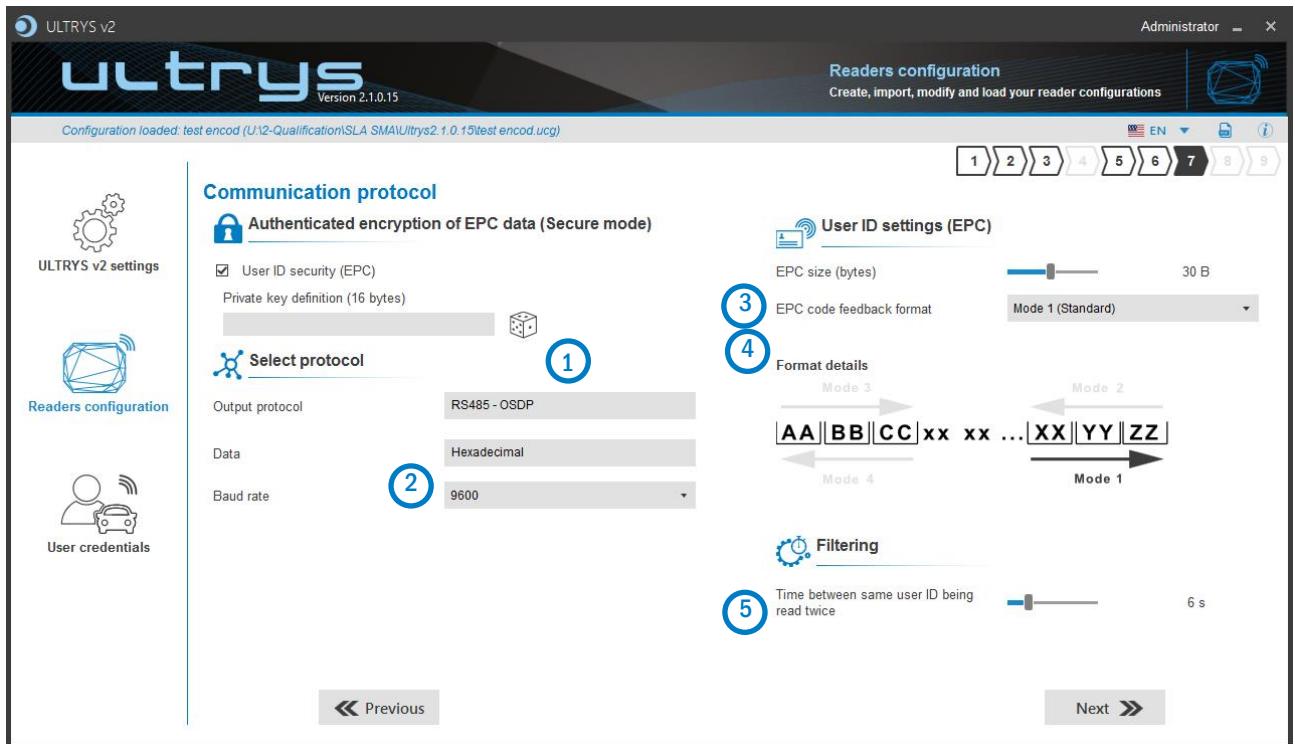

The EPC can be encrypted and signed before being written in the tag.

The reader will decrypt and authenticate the EPC before sending it on its output media.

Only an EPC correctly decrypted and authenticated will produce an output data, otherwise the reader will remain mute.

Notes:

- Only UHF tags compatible with “FAST ID” feature and having at least 128 bits of EPC can be decrypted and authenticated by the SPECTRE Access reader.
The chips compatible with secure encoding are: Monza X, Monza R6P, Monza 4D, this chip is present into
 - TLTA-W53M-943_S
 - TLTA-W75B-943_S
 - IronTag 206
 - CCTW490_AN
- **The secure mode is not accessible if an EPC mask has been set in ‘Advanced settings’.**

Note: After setting an EPC security key, if you return to step 5 with the Previous button, and you set an EPC filter, then returning to step 7, the "EPC ID Security" checkmark is displayed in gray, the key field is still accessible but not taken into account.

2 **Select protocol**

Output protocol: RS485 - OSDP

Data: Hexadecimal

Baud rate: 9600

9600

9600

19200

38400

57600

115200

The only modifiable parameter is the baud rate.

3 EPC size (bytes) 30

Protocol	Size in plain mode	Size in secure mode
RS485	1b up to 62b	1b up to 6b

4 EPC code feedback format: Mode 1 (Standard)

Format details: Mode 3

Mode 1 (Standard)

Mode 2 (Standard reversed)

Mode 3

Mode 4

There are 4 modes to feedback the EPC.

Example: EPC data: AA BB CC DD EE xx xx ... VV WW XX YY ZZ with 'EPC size' fixed to 4bytes.

- Mode 1 : EPC feedback = WW XX YY ZZ
- Mode 2 : EPC feedback = ZZ YY XX WW
- Mode 3 : EPC feedback = AA BB CC DD
- Mode 4 : EPC feedback = DD CC BB AA

5 **Filtering**

Time between same user ID being read twice 6 s

The reader emits the credential code present in the field only once during this time.

This time is adjustable from 0 to 30 seconds.

Step 4- ATX Read only / OSDP™ - Antenna type selection

The ATX reader only works with antenna embedded(ANT_UHF2).

Step 4 does not exist in the ATX Wizard.

Step 5- ATX Read only / OSDP™ - Installation configuration




① Name the lane

Maximum 10 characters.

For example, Entry1.

② Paramètres avancés

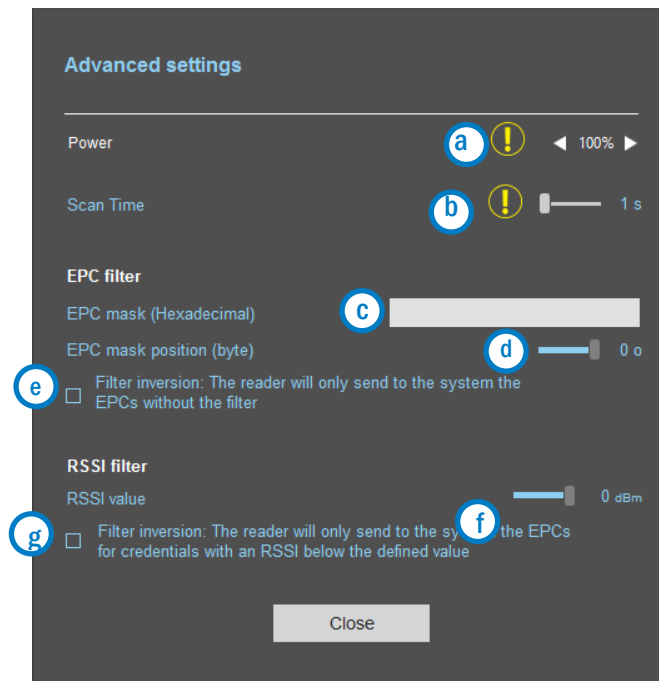

- a** Adjust the power of each antenna (from 10% to 100%) to adjust the reading distances. The power transmitted depends on the type of regulation, limited to 1800mw ERP for ETSI and 1200mw ERP for FCC, New Zealand and Australia. No limitation for Morocco.
- b** Adjust the timing for a scan (reading) by step of 1 second (max 30s). This setting is taking into account only if *Input type selection* is set to *Activating all lanes* or *Activating the event lane*.
- c** **The EPC filter is not available in Secure Mode.**
Enter the value for EPC Mask, max 62 hexadecimal bytes.
- d** Adjust the value for offset EPC mask in bytes (0 to 65535). It depends on the EPC Mask length.
- e** Filter inversion not selected: only tags with an EPC value corresponding to the EPC mask value will be provided to the user.
Filter inversion selected: only tags with an EPC value different from the EPC mask value will be provided to the user.
- f** RSSI (Received Signal Strength Indication) is a measure of the power in reception of the tag response. The value returned by the reader is proportional to the amplitude of the reception signal Adjust the RSSI value (-110dBm to 0dBm). 0dBm deactivates the RSSI filter
- g** Filter inversion not selected: only tags with an RSSI greater than or equal to the specified value will be provided to the user.
Filter inversion selected: only tags with an RSSI smaller or equal to the specified value will be provided to the user.

Ex: RSSI filter = -49f=dBm + Reversal not selected
 A tag that will have a RSSI value of -20dBm will be sent back,
 A tag that will have a RSSI value of -60dBm will not be sent back.

Scan time, EPC filter and RSSI filter settings are the same for antennas on the same lane. The cable length and RF power antenna are set for each antenna.

EPC filter


Example:

Code EPC Tag 1: AAAAABCD0000000000000001
 Code EPC Tag 2: AA02ABCD0000000000000002
 Code EPC Tag 3: AA02ABCD0000000000000003
 Code EPC Tag 4: AA02FFFF0000000000000003

1- EPC mask = AA AA and Offset = 0

Tag 1: AAAAABCD0000000000000001
 Tag 2: AA02ABCD0000000000000002
 Tag 3: AA02ABCD0000000000000003
 Tag 4: AA02FFFF0000000000000003


Only tag 1 is transmitted.

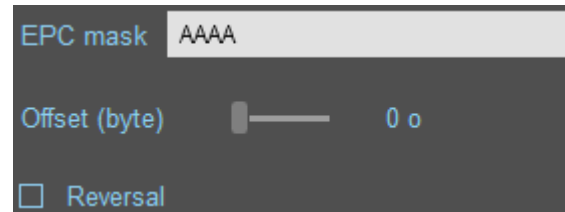

2- EPC mask = AA AA AA and Offset = 0

Tag 1: AAAAABCD0000000000000001
 Tag 2: AA02ABCD0000000000000002
 Tag 3: AA02ABCD0000000000000003
 Tag 4: AA02FFFF0000000000000003

No tag is transmitted.

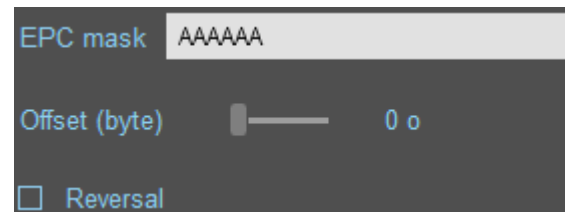

3- EPC mask = 01 and Offset = 11

Tag 1: AA AA AB CD 00 00 00 00 00 00 01
 Tag 2: AA 02 AB CD 00 00 00 00 00 00 02
 Tag 3: AA 02 AB CD 00 00 00 00 00 00 03
 Tag 4: AA 02 FF FF 00 00 00 00 00 00 03


Offset is represented in blue; the filter is done on byte 12.
 Only tag 1 is transmitted.



4- EPC mask = AB and Offset = 2


Tag 1: AA AA AB CD 00 00 00 00 00 00 01
 Tag 2: AA 02 AB CD 00 00 00 00 00 00 02
 Tag 3: AA 02 AB CD 00 00 00 00 00 00 03
 Tag 4: AA 02 FF FF 00 00 00 00 00 00 03

Tags 1, 2 and 3 are transmitted.

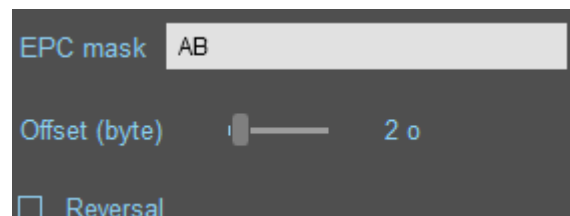

5- EPC mask = AB, Offset = 2 and Reversal

Tag 1: AA AA AB CD 00 00 00 00 00 00 00 00
01
Tag 2: AA 02 AB CD 00 00 00 00 00 00 00 00
02
Tag 3: AA 02 AB CD 00 00 00 00 00 00 00 00 03
Tag 4: AA 02 FF FF 00 00 00 00 00 00 00 00 03

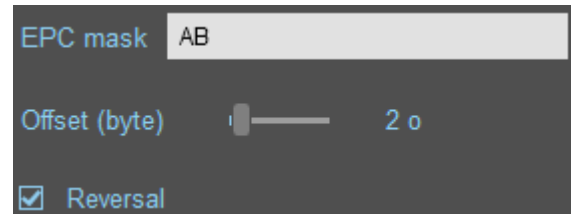

The screenshot shows a configuration window with the following settings:

- EPC mask: AB
- Offset (byte): 2
- Reversal:

Tags 1, 2 and 3 are not transmitted. Only tag 4 is transmitted.

③ Input/output settings ATX Read Only

Input management

Reading mode selection: Continuous reading

Managing custom events triggered by reader inputs:

- No event
- Output customization

Buttons: Cancel, Next >>

Select the reading mode, the output settings depend on this mode.

Output management

Output type selection: Pull up to V+

Status of outputs:

	Open	Closed	Continuing during detection process
Output 1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 3	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 4	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>

Buttons: << Previous, Cancel, Confirm

Both types of output are Pull up to V+ or Open drain.

Status of outputs: select for each output the default state 'Open' or 'Closed' and if the state is maintained during the detection process.

a Reading mode = Continuous reading + No event

In this mode, the reader scan continuously.
There is no action on input activation.

	Open	Closed	Continuing during detection process
Output 1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 3	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 4	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>

Select the output type and default state for output.


b Reading Mode = Continuous reading + Output customization

An action on Input toggles the corresponding output regardless of RF function of the reader.

	Open	Closed	Continuing during detection process
Output 1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 3	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 4	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>

Select the output type and default state for output.


C Reading mode = Triggering further to the event

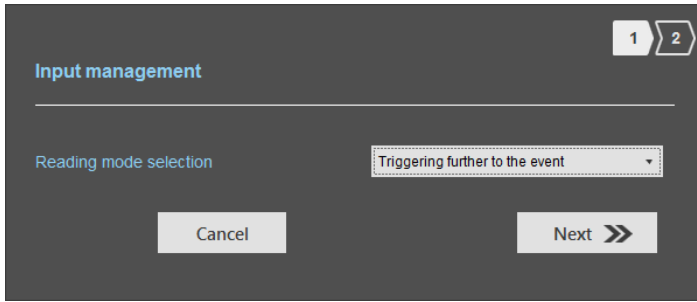

If an Input is activated, the reader scans on the corresponding lane.




The reading duration is defined in 'Advanced settings'.

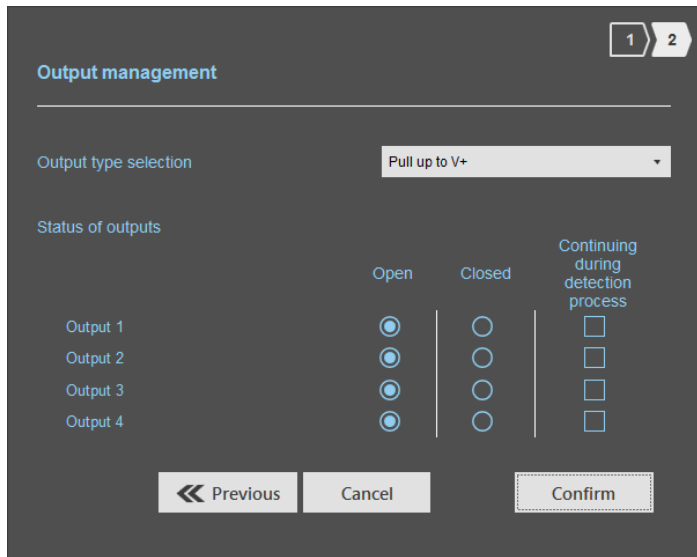

Select the output type and default state for output.

③ Input/output settings ATX OSDP™

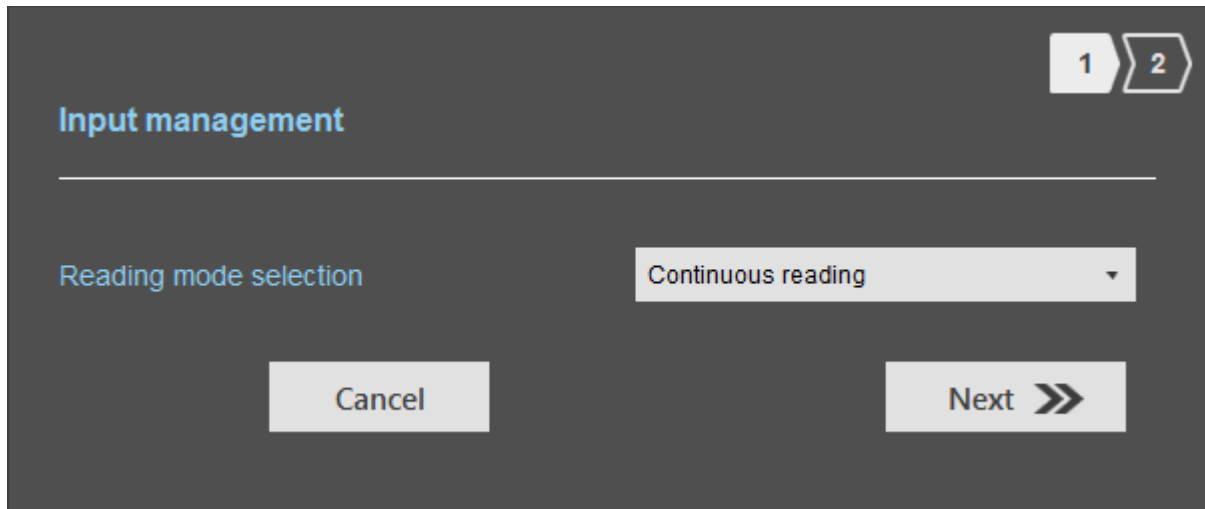


Input management

Reading mode selection: Continuous reading

Buttons: Cancel, Next >>

Progress indicator: 1 > 2

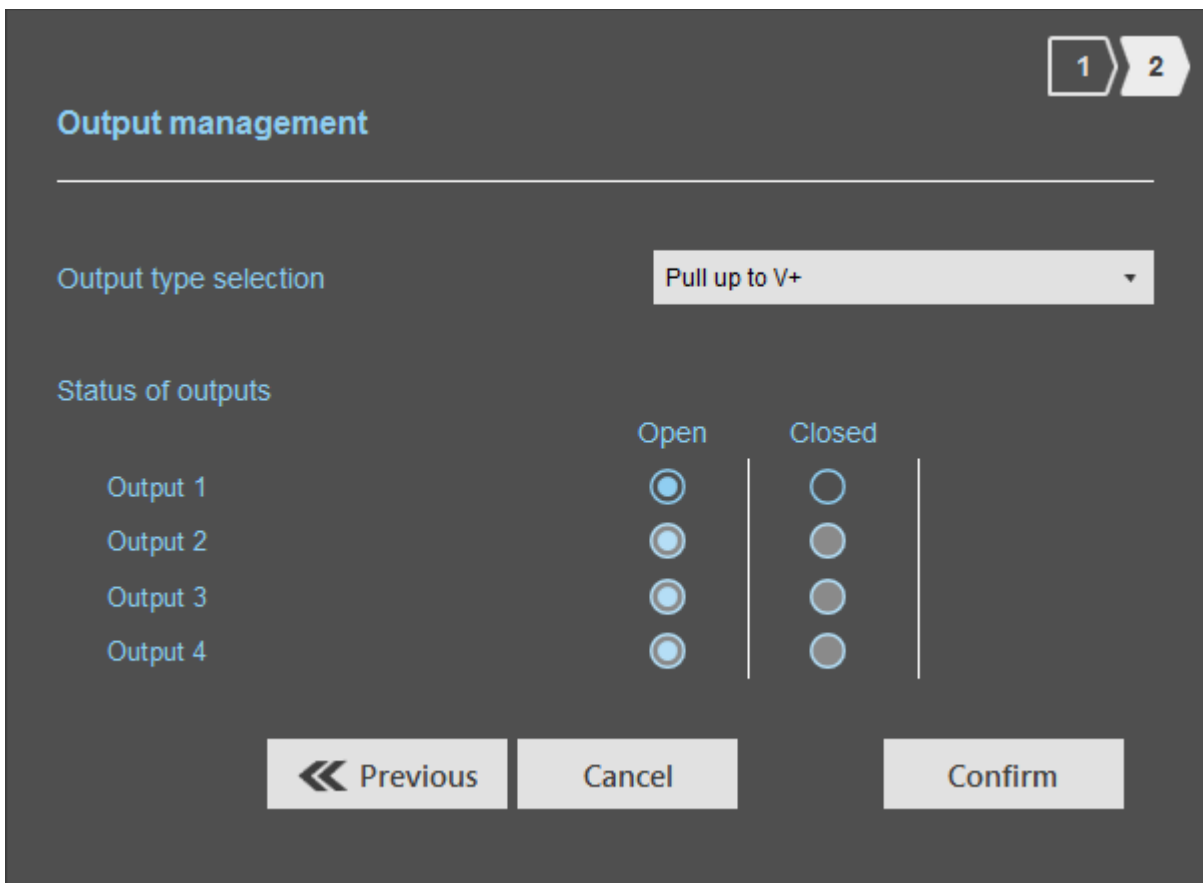

Output management

Output type selection: Pull up to V+

Status of outputs

	Open	Closed
Output 1	<input checked="" type="radio"/>	<input type="radio"/>
Output 2	<input checked="" type="radio"/>	<input type="radio"/>
Output 3	<input checked="" type="radio"/>	<input type="radio"/>
Output 4	<input checked="" type="radio"/>	<input type="radio"/>


Buttons: << Previous, Cancel, Confirm

Progress indicator: 1 > 2


Both types of output are Pull up to V+ or Open drain.

Status of outputs: select for each output the default state 'Open' or 'Closed'.

a Reading Mode = Continuous reading

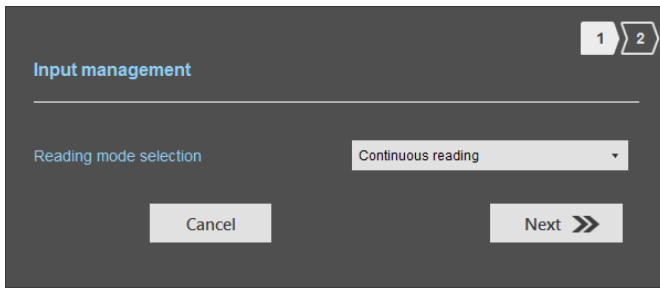


In this mode, the reader scan continuously.

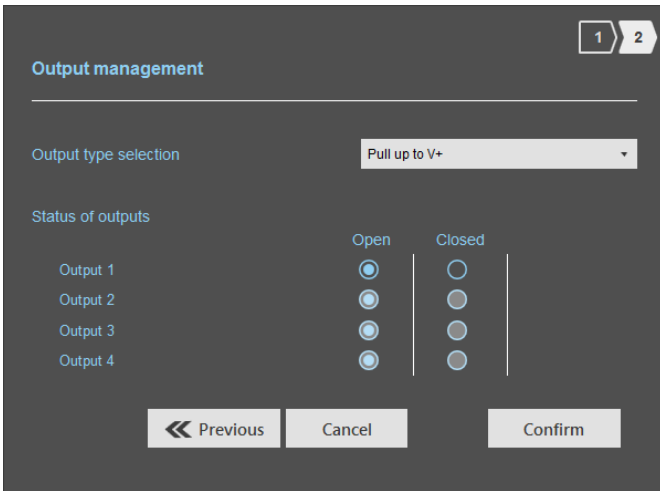

Select the output type and default state for output.


b Reading Mode = Triggering further to the event

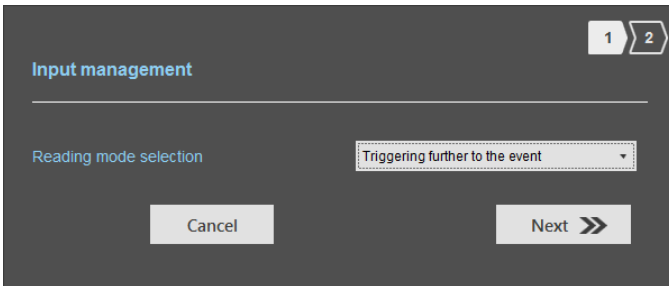

If an Input is activated (In1, In2, In3 or In4), the reader scans on all lanes set.



The duration of the reading is defined in 'Advanced settings'.

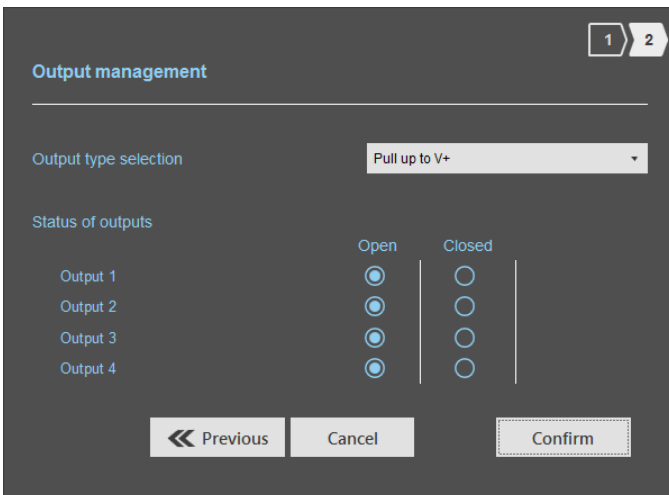

Select the output type and default state for output.

Summary table

Reading Mode	Input	Configurable Outputs states?	Output
a Continuous reading	No action	Yes	The output state toggles at the ascent.
b Triggering on all lanes	An action on Input activate the scan on lane.	Yes	The output state toggles at the ascent during the ascent time of the identifier (physically on the BUS + 200ms.

Step 6- ATX Read only / OSDPTM™ - Setting up light indicator

Step 6 does not exist in the ATX Wizard.

Step 7- ATX Read Only - Communication protocol

This step is identical to [»Step 7- SPECTRE Read Only - Communication protocol](#)

Step 7- ATX OSDPTM™ - Communication protocol


This step is identical to [»Step 7- SPECTRE OSDPTM™ - Communication protocol](#)

Step 4- ATX4 Read only / OSDP™ - Antenna type selection

The ATX reader operates with a built-in antenna

Step 4 does not exist in the ATX4 Wizard.

Step 5- ATX4 Read only / OSDP™ - Installation configuration

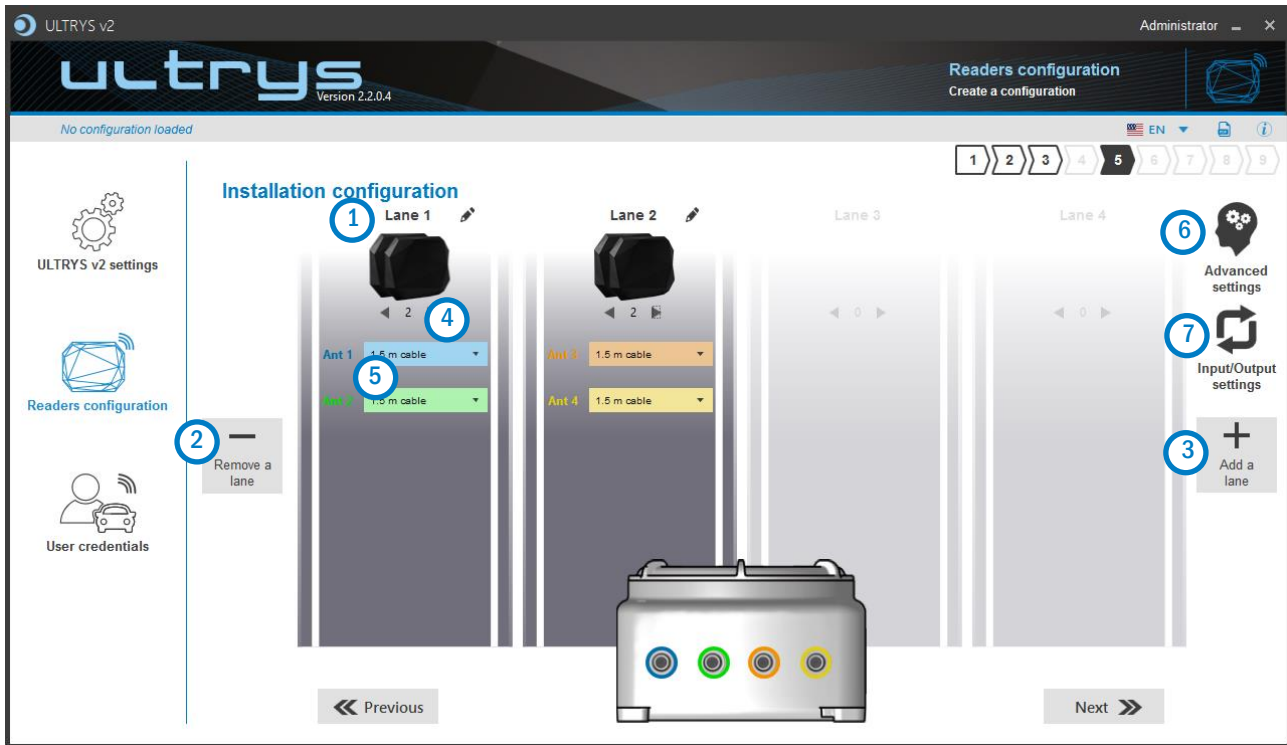

① Name the lane

Maximum 10 characters.

For example, Entry1.

②③ Add / Delete lane

Use 'Add /Delete lane' to configure the number of lanes you will use in your application.


The default setting is one antenna on the first lane.

For more information about the possible combination please refer to the document [NA_SPECTRE](#).

④ Add / Remove antenna on lane

Set the number of antennas on the corresponding lane.

When an antenna is added, the RF port to which the antenna has to be connected appears on the reader with corresponding color to help the installation.

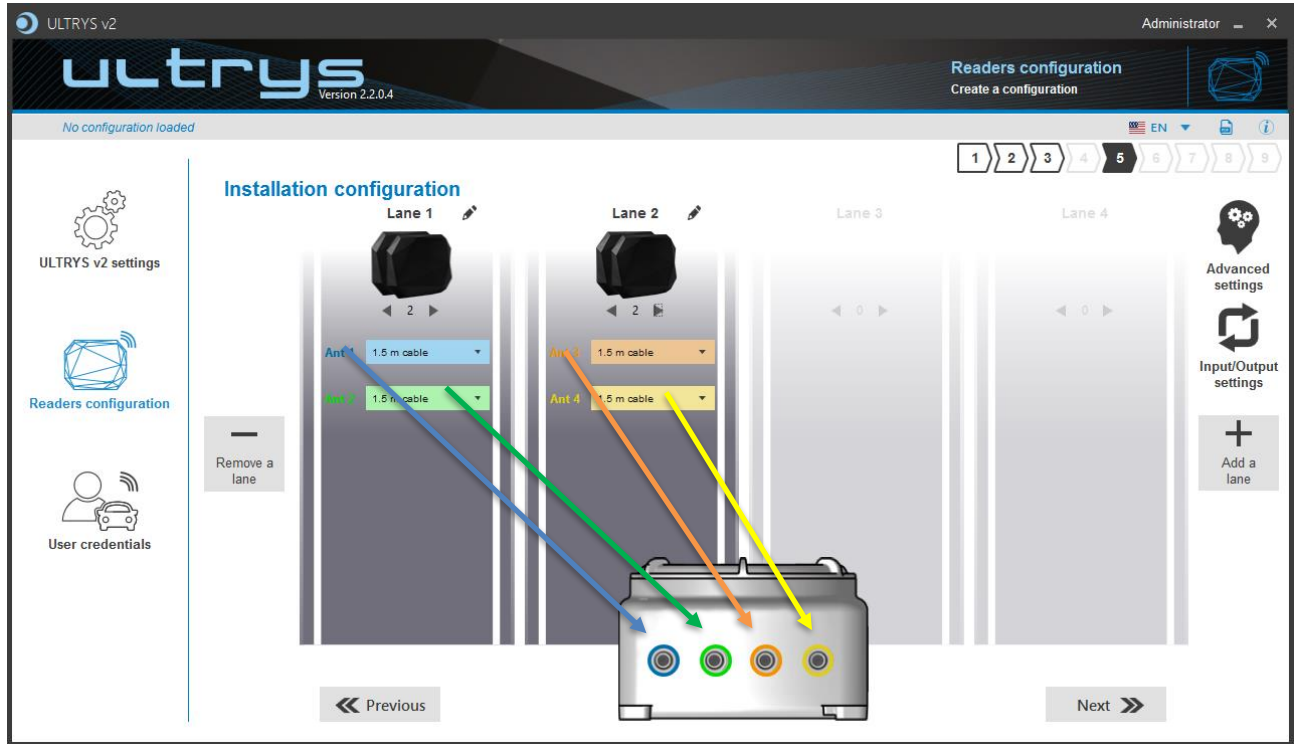


RF ports are assigned in order to add the antennas in the configuration wizard.

When an antenna is removed from the configuration, the RF port connection for other antennas does not change.

Example: Ant 2 deleted from lane 1 and added to lane 2.



⑤ Select the cable length for each antenna

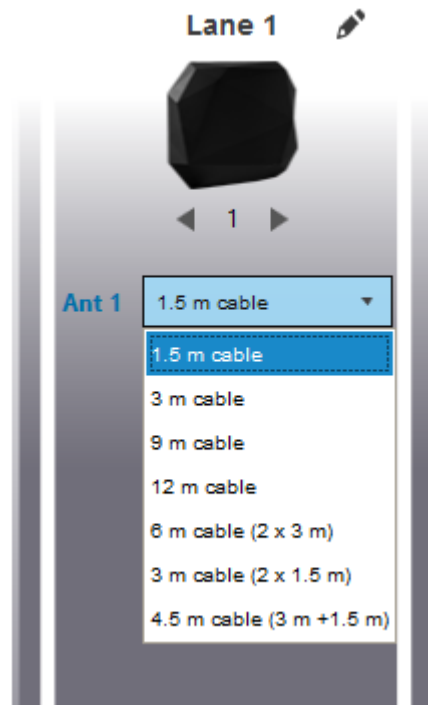

For each antenna, select the cable length you would like to use between antenna and reader.

⑥ Advanced settings

This advanced settings is identical to the advanced settings of the step: [Step 5- SPECTRE Read Only - Installation configuration](#)

⑦ Input/output settings ATX4 Read only

Input management

Reading mode selection: Continuous reading

Managing custom events triggered by reader inputs:

 No event

 Output customization

Buttons: Cancel, Next >>

Select the reading mode, the output settings depend on this mode.

Output management

Output type selection: Pull up to V+

Status of outputs	Open	Closed	Continuing during detection process
Output 1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 3	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 4	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>

Buttons: << Previous, Cancel, Confirm

Both types of output are Pull up to V+ or Open drain.

Status of outputs: select for each output the default state 'Open' or 'Closed' and if the state is maintained during the detection process.

a Reading mode = Continuous reading + No event

In this mode, the reader scan continuously.
There is no action on input activation.


Select the output type and default state for output.

b Reading Mode = Continuous reading + Output customization

An action on Input toggles the corresponding output regardless of RF function of the reader.

Select the output type and default state for output.


d Reading Mode = Triggering on all lanes

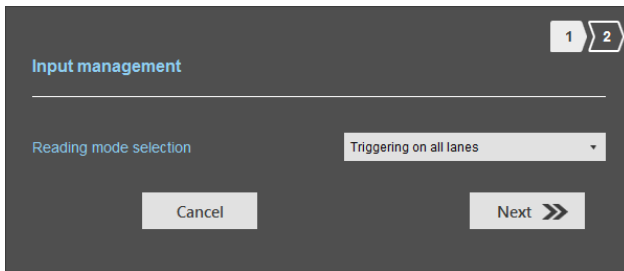

If an Input is activated (In1, In2, In3 or In4), the reader scans on all lanes set.




The duration of the reading is defined in 'Advanced settings'.

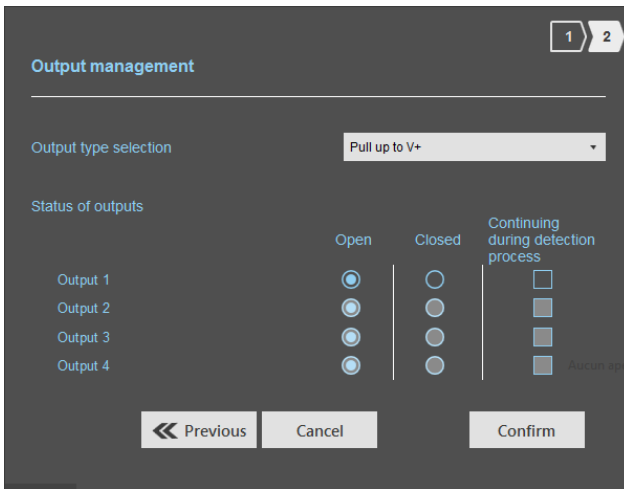

Select the output type and default state for output.


e Reading mode = Triggering on the lane with the event

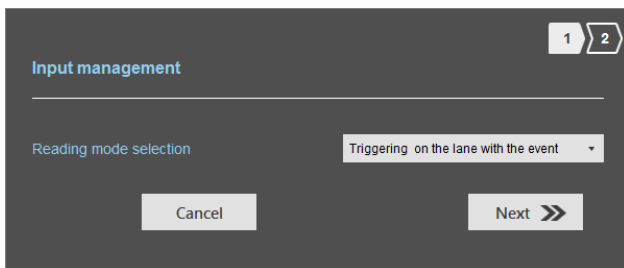

If an Input is activated, the reader scans on the corresponding lane.



The reading duration is defined in 'Advanced settings'.

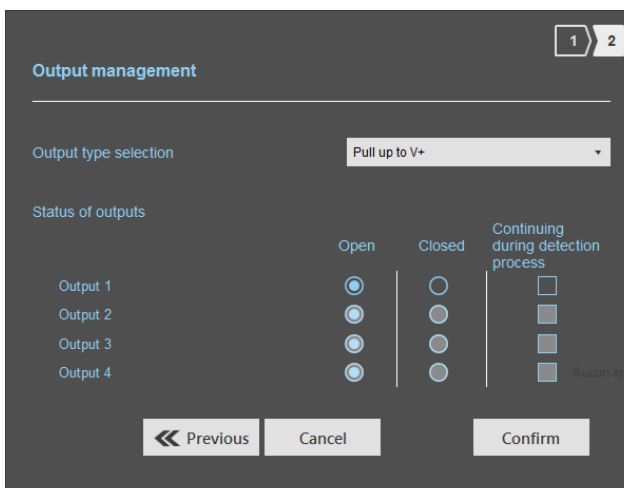

Select the output type and default state for output.

Summary table

Reading Mode	Input	Configurable Outputs states?	Maintain during detection available?	Output
a Continuous reading + No event	No action	Yes by lane	Yes by lane	<ul style="list-style-type: none"> - If 'Continuing during detection process' not activated: the output state toggles at the ascent. - If 'Continuing during detection process' activated: the output state toggles to the RF detection and remains in this state as long as, at each scan is at least one detection.
b Continuous reading + Output customization	An action on an Input toggles the corresponding output.	Yes	No	The output state is only linked to a user action on the input.
c Triggering on all lanes	An action on any input activates the reading on all configured lanes.	Yes by lane	Yes	<ul style="list-style-type: none"> - If 'Continuing during detection process' not activated: the output state toggles at the ascent during the ascent time of the identifier (physically on the BUS + 200ms). - If 'Continuing during detection process' activated: the output state toggles to the RF detection and remains in this state as long as, at each scan is at least one detection.
d Triggering on the lane with the event	An action on Input x activates the scan on lane x.	Yes by lane	Yes	<ul style="list-style-type: none"> - If 'Continuing during detection process' not activated: the output state toggles at the ascent during the ascent time of the identifier (physically on the BUS + 200ms). - If 'Continuing during detection process' activated: the output state toggles to the RF detection and remains in this state as long as, at each scan is at least one detection.

Note: as long as the action is detected on the input, the output remains toggled.

⑦ Input/output settings ATX4 OSDP™

1
2

Input management

Reading mode selection Continuous reading ▾

Cancel
Next >>

1
2

Output management

Output type selection Pull up to V+ ▾

Status of outputs


	Open	Closed
Output 1	<input checked="" type="radio"/>	<input type="radio"/>
Output 2	<input checked="" type="radio"/>	<input type="radio"/>
Output 3	<input checked="" type="radio"/>	<input type="radio"/>
Output 4	<input checked="" type="radio"/>	<input type="radio"/>

<< Previous
Cancel
Confirm


Both types of output are Pull up to V+ or Open drain.

Status of outputs: select for each output the default state 'Open' or 'Closed'.

a Reading Mode = Continuous reading

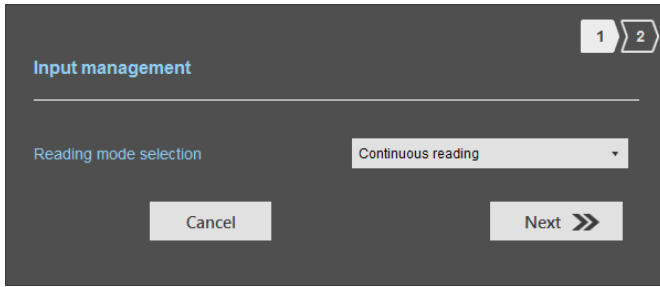


In this mode, the reader scan continuously.

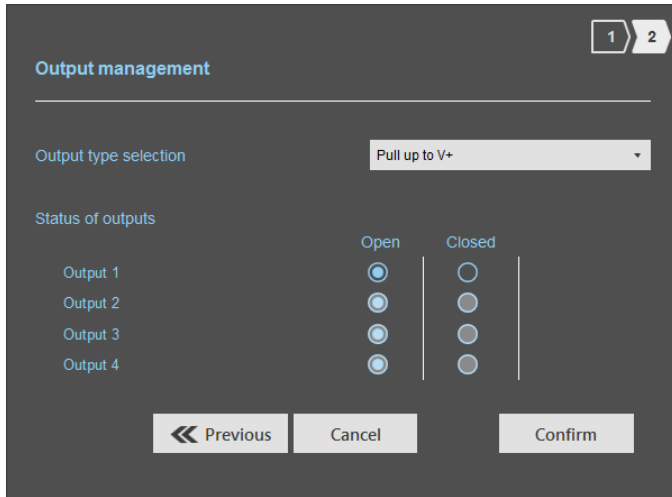

Select the output type and default state for output.


b Reading Mode = Triggering on all lanes

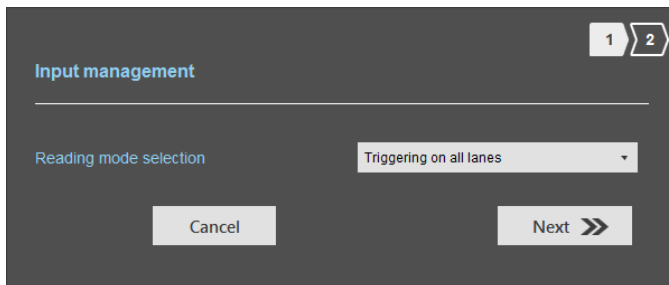

If an Input is activated (In1, In2, In3 or In4), the reader scans on all lanes set.




The duration of the reading is defined in 'Advanced settings'.

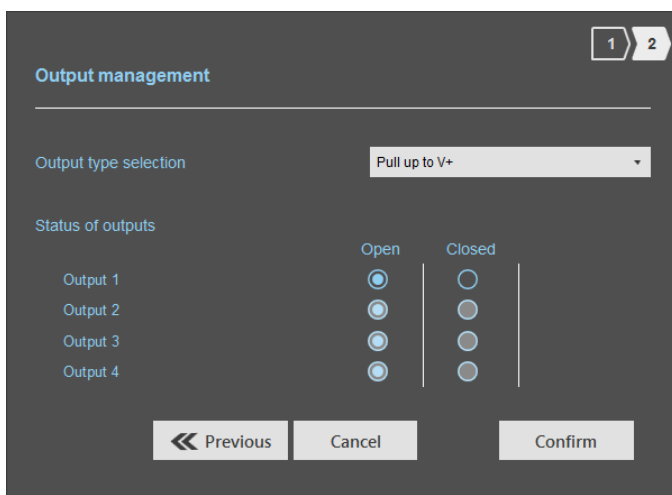

Select the output type and default state for output.


c Reading mode = Triggering on the lane with the event

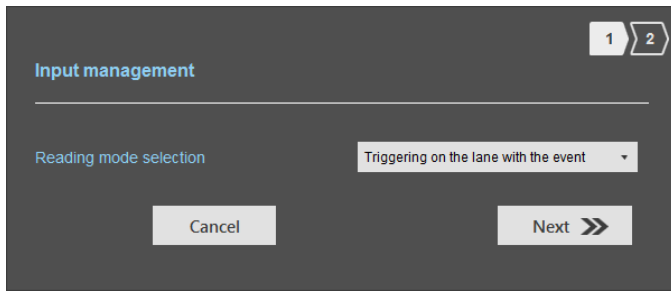

If an Input is activated, the reader scans on the corresponding lane.



The duration of the reading is defined in 'Advanced settings'.

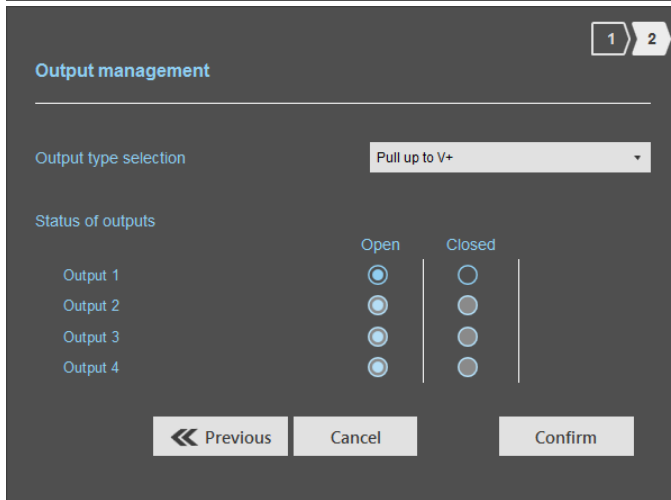

Select the output type and default state for output.

Summary table

Reading Mode	Input	Configurable Outputs states?	Output
a Continuous reading	No action	Yes by lane	The output state toggles at the ascent.
b Triggering on all lanes	An action on any input activates the reading on all configured lanes.	Yes by lane	The output state toggles at the ascent during the ascent time of the identifier (physically on the BUS + 200ms.
e Triggering on the lane with the event	An action on Input x activate the scan on lane x.	Yes by lane	

Step 6- ATX4 Read only / OSDP™ - Setting up light indicator

Step 6 does not exist in the ATX Wizard.


Step 7- ATX4 Read Only - Communication protocol

This step is identical to [▶▶Step 7- SPECTRE Read Only - Communication protocol](#)


Step 7- ATX4 OSDP™ - Communication protocol

This step is identical to [▶▶Step 7- SPECTRE OSDPTM - Communication protocol](#)


Step 8- User management

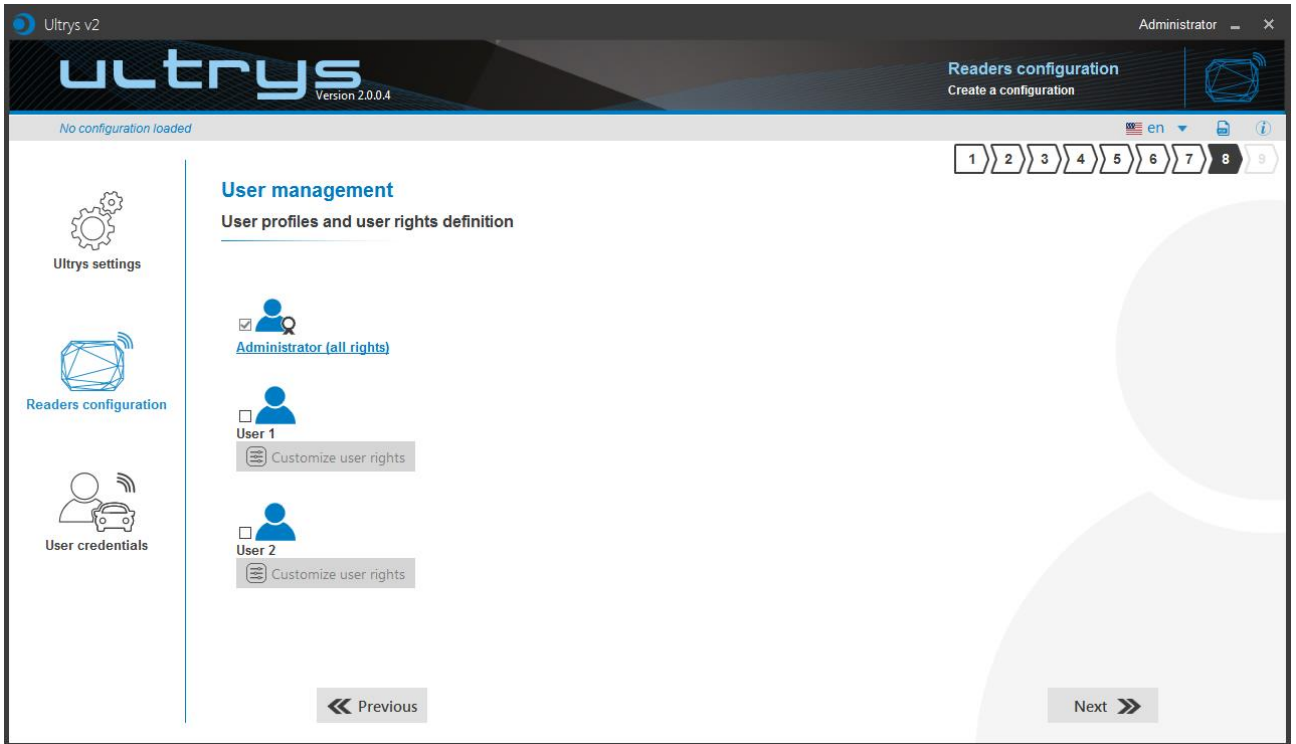


ULTRYS v2 allows to manage three different profiles by configuration file.

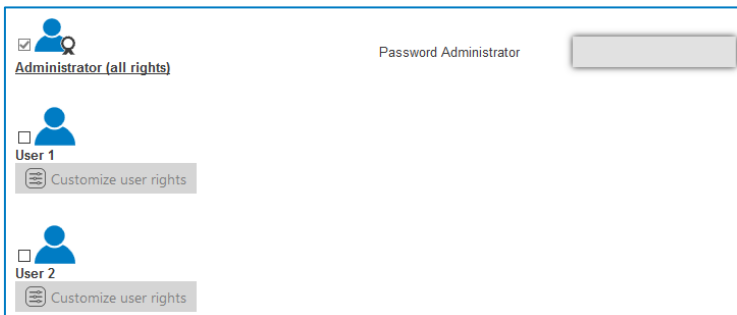

Define an Administrator password to protect the configuration file.

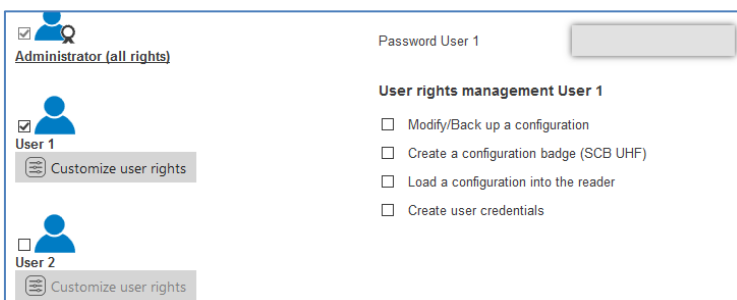


Define a User 1 password and select the corresponding rights.

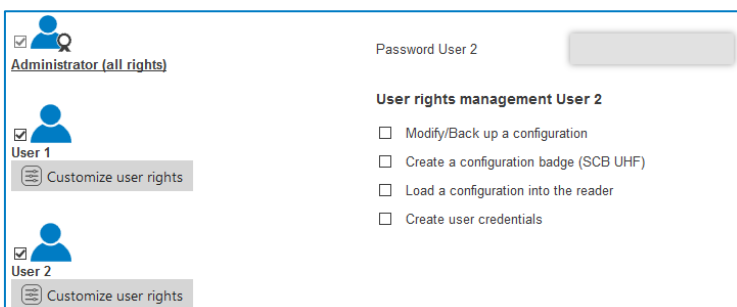

Define a User 2 password and select the corresponding rights.

Step 9- Configuration save and protect

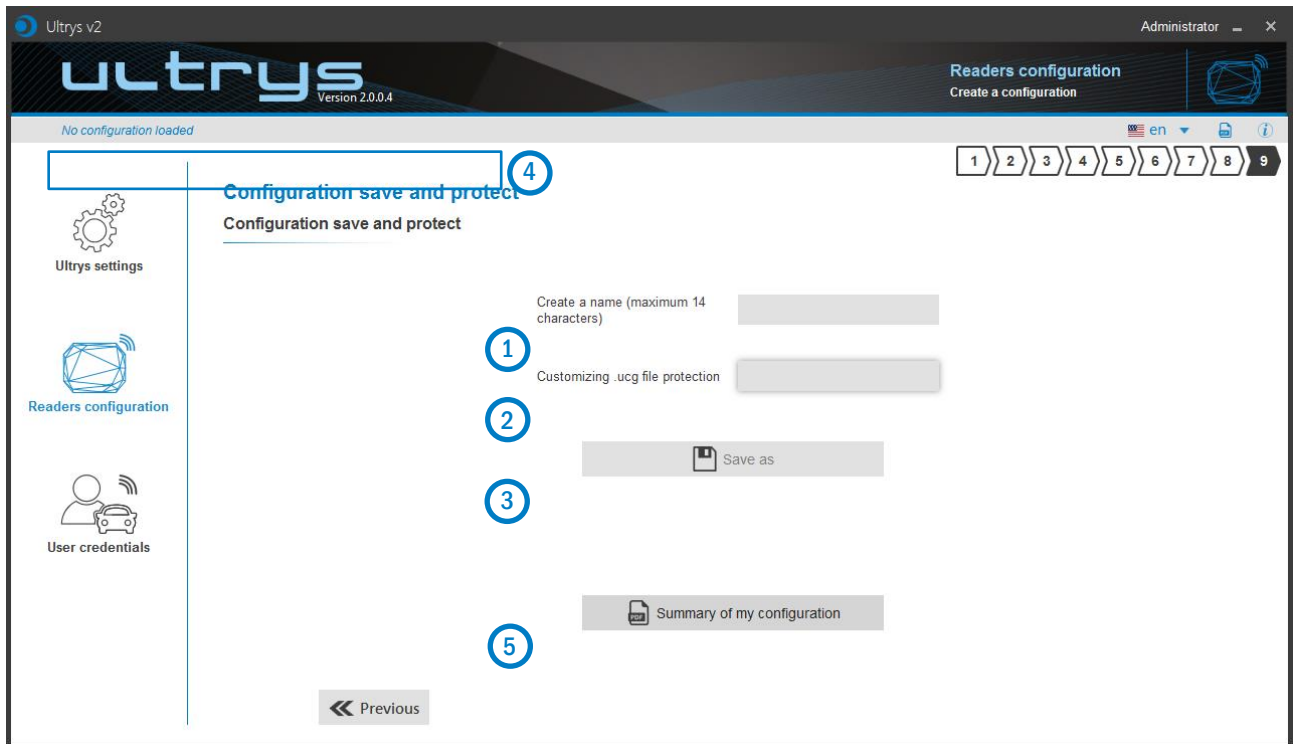

This step allows you to save the configuration file containing all the current configuration settings (keys, formats, reader...). You can select a location and password to protect the file.

① Choose a name to easily find the configuration. (example: Parking IN).

Note: the name of the configuration must be contained in the file name.

② To protect the configuration file, you can define a password. This password is different from Administrator password.

③ Select a directory and a file name to save.

④ The name and location of 'Configuration Loaded' indicates now the chosen name and location.

If you choose a file name that does not contain the name of the configuration, ULTRYS does not take into account the specified name or directory. It saves the file with the configuration name on the Desktop.

5 Get a summary of the configuration created

Summary of configuration settings

This document contains all the configuration settings needed to install the reader and antennas on-site. For further information on installation, please refer to the [Quick Guide](#) and [Installation manual](#).

#Configuration details
 Configuration name: Parking IN
 Created on: 2/25/2019 9:48
 Updated on: 2/25/2019 10:00

#Regulation of frequency bands
 Frequency bands / Countries: France - ETSI
 Duty cycle: 0.975
 Channels (MHz): 867.5, 868.9, 866.3, 865.7
 ERP: 2000 mW

#Reader + antenna configuration
 Reader: Spectre Reader Access
 Antenna: Spectre antenna

Installation overview

Output	Open	Closed	Continuing during detection process
Output 1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 3	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Output 4	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>

Light indicator settings

Indicator	LED brightness	LED color
Reader (data)	100 %	Blue
Reader (motion)	100 %	Red
Defective user ID	100 %	Orange

#Communication protocol

Secure mode
 Selected output protocol: Wiegand 26 bits - 3s

Bit 1: Even parity from bit 2 to bit 13
 Bit 2 - Bit 25: Data (24 bits)
 Bit 26: Odd parity from bit 14 to bit 25

Overview of TTL outputs:

 

Lane 4	Lane 3	Lane 2	Lane 1
OUT DATA	OUT DATA	OUT DATA	OUT DATA
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Print: allows printing of configuration information on a network, local or virtual printer (PDF)


3.3 Open an existing configuration




3.3.1 Configuration file

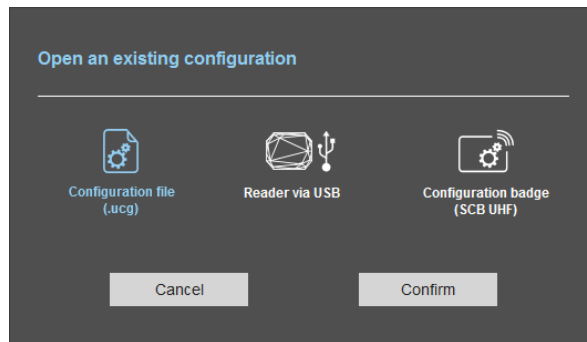

1- Select a configuration file .ucg on your PC or USB stick.

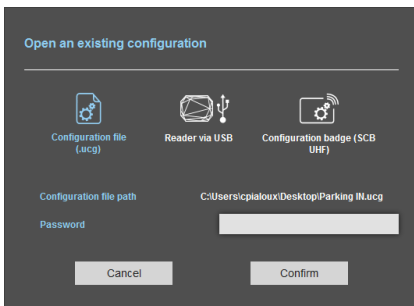


2- If the file has been protected for reading, enter the password and confirm.

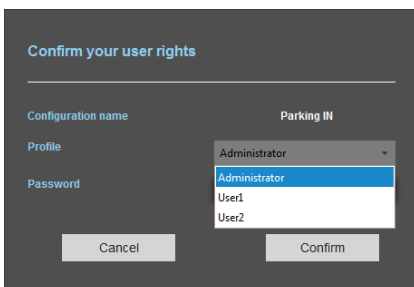


3- Select the profile to use and enter the corresponding password. Please confirm.




3.3.2 Reader via USB

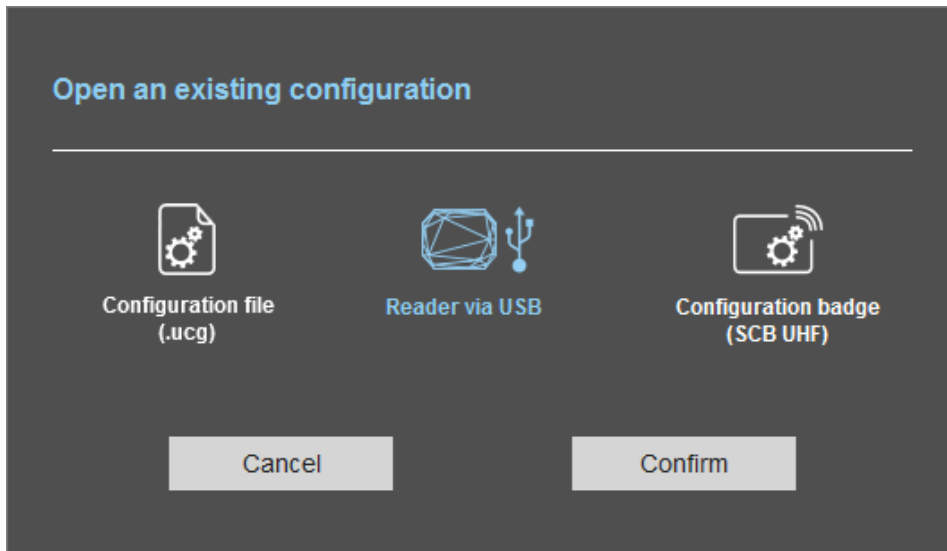

- 4- Connect the SPECTRE reader via USB cable provided.
- 5- Configure the communication parameters.
- 6- Please confirm.

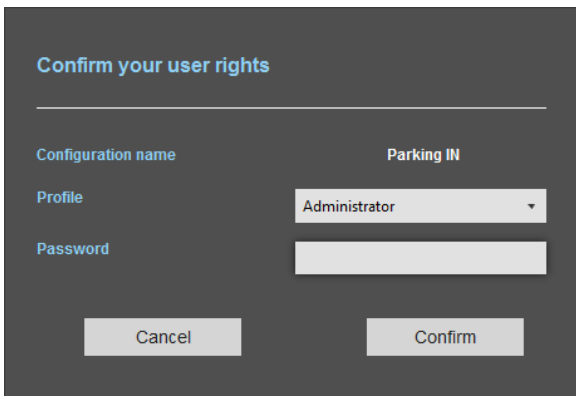


- 7- Select the profile to use and the corresponding password. Please confirm.

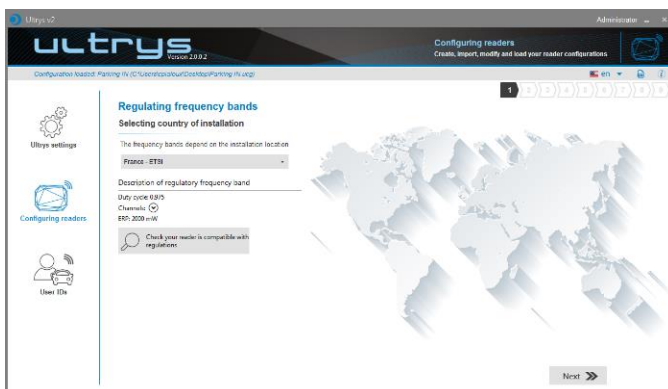


- 8- ULTRYS v2 then displays the configuration wizard with all settings loaded from the reader.



3.3.3 Configuration badge (SCB/OCB UHF)

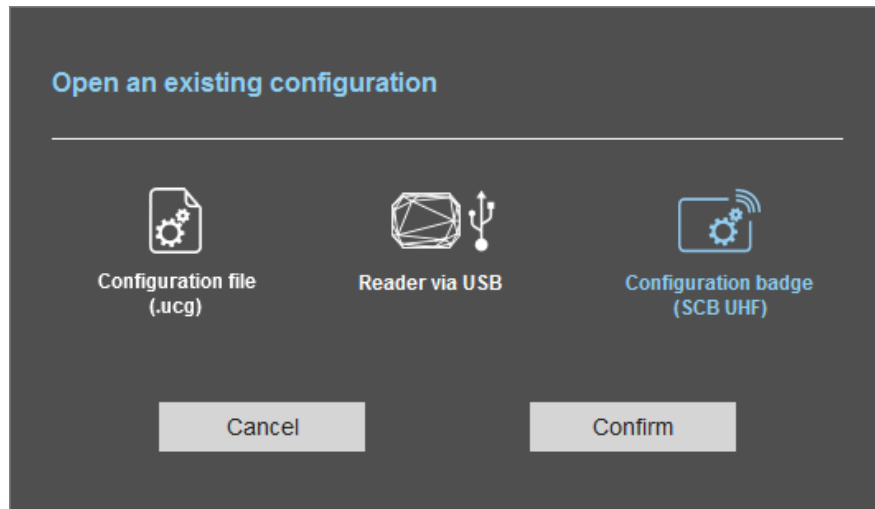

- 1- Connect an UHF encoder (STR or GAT Desk).
- 2- Configure the communication settings.
- 3- Present the SCB/OCB UHF to the encoder.
- 4- Please confirm.

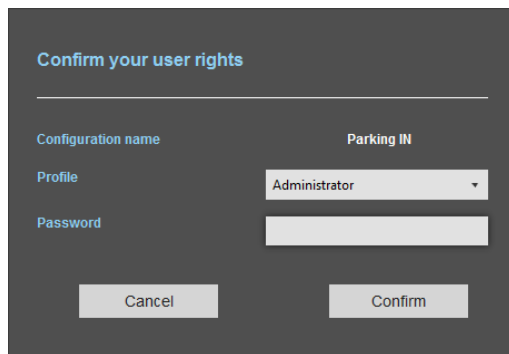


- 5- Select the profile to use and the corresponding password. Please confirm.




- 6- ULTRYS then displays the configuration wizard with all settings loaded from the SCB/OCB UHF.

3.4 Load the configuration into the reader

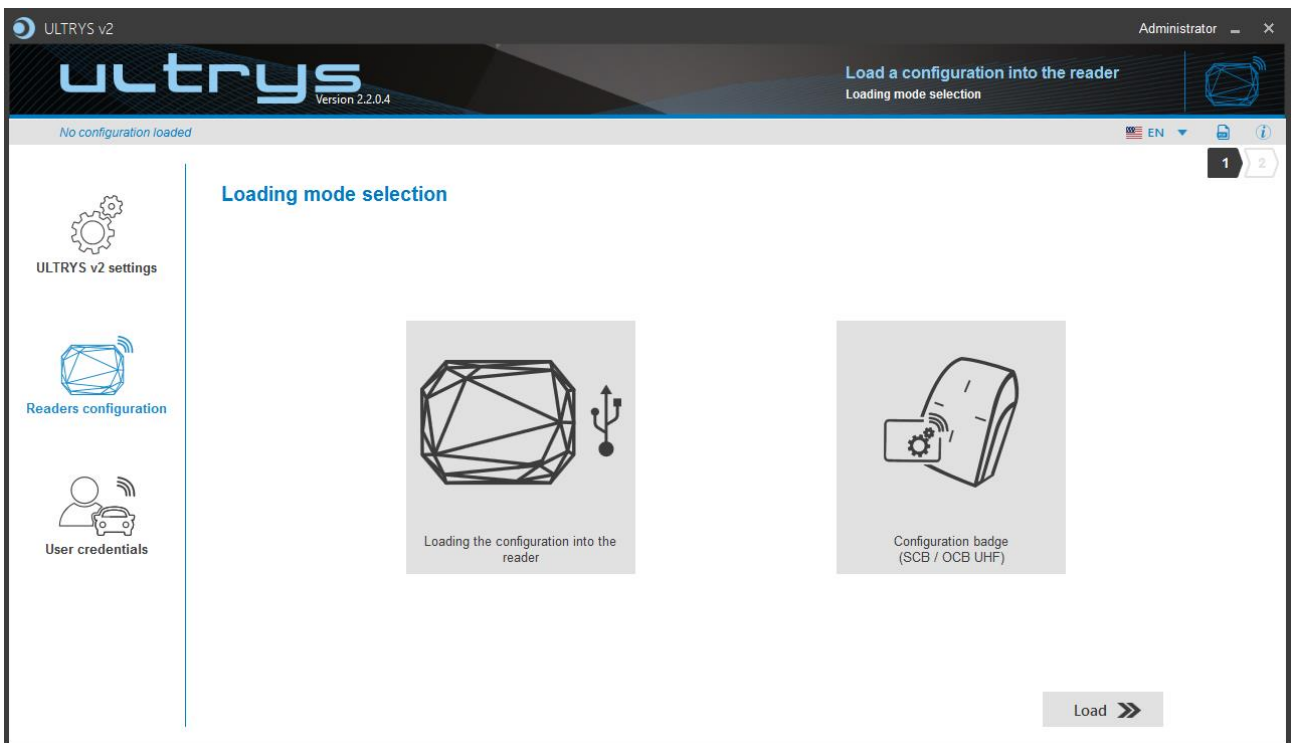


3.4.1. Loading the configuration into the reader

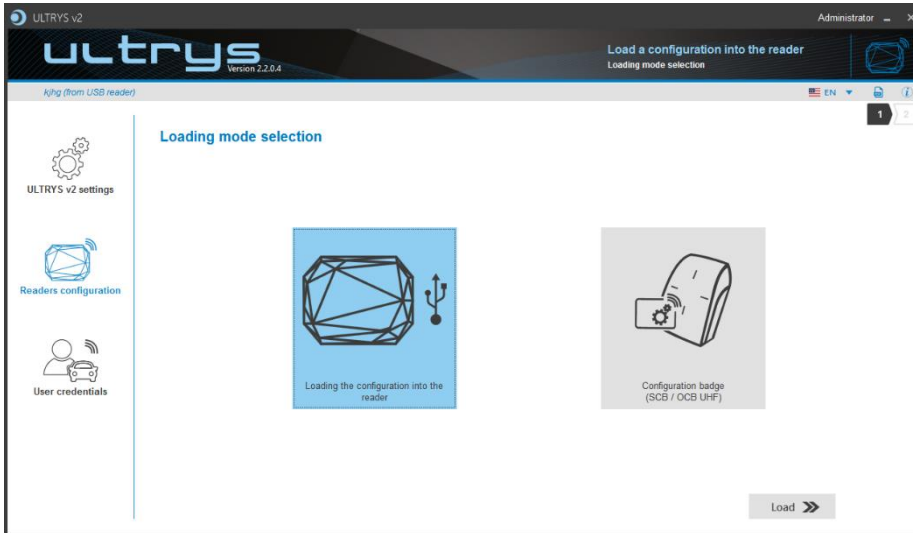


- 1- Connect a reader via USB cable.
- 2- Configure the communication settings.


3- Configure the latency of com port to 1

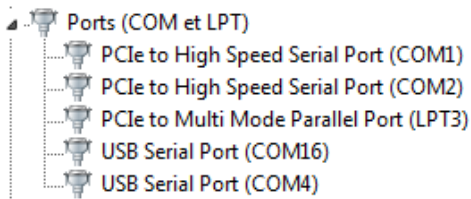


Double click on the good COM port number.

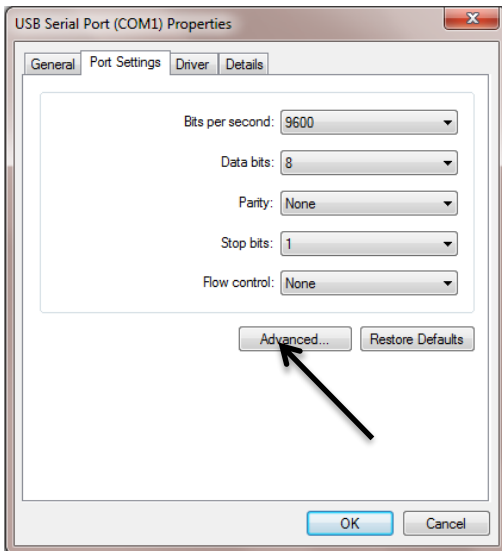


Open Advanced...

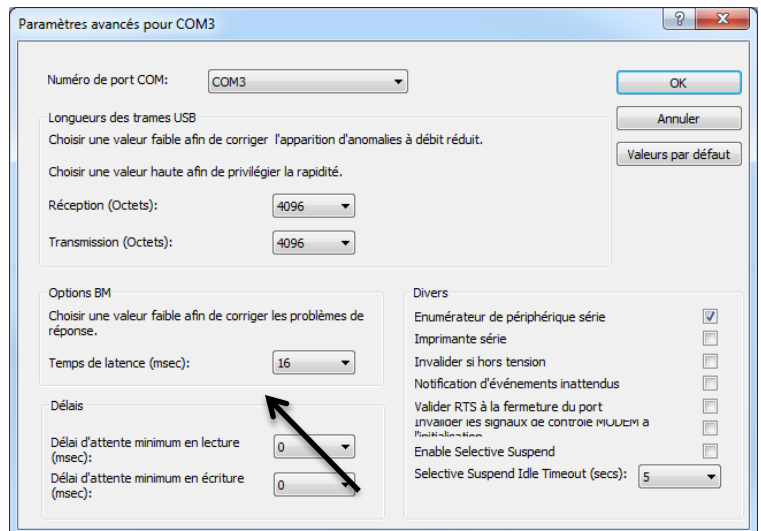


Put Latency on "16"

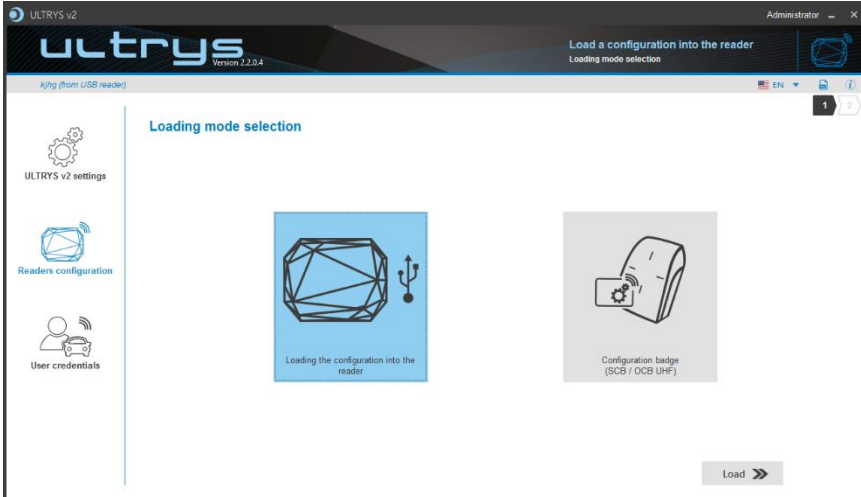


4- Load.

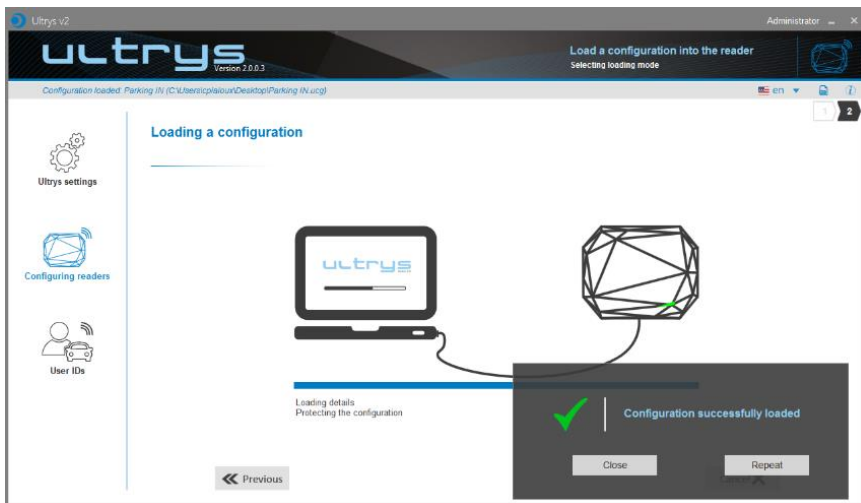


5- Close. ULTRYS v2 then displays the home page.

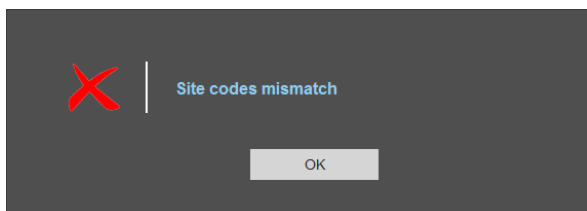


Error the site code of the SPECTRE reader is not the same in configuration file.

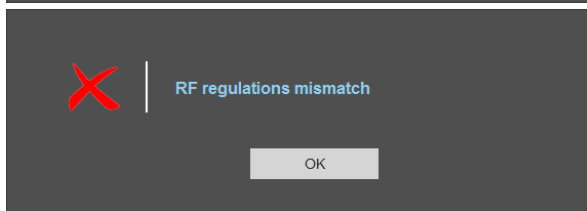

The selected RF regulation is not compatible with the reader.

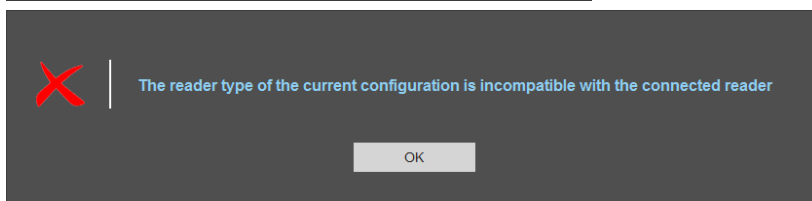


The reader type of the current configuration is not compatible with the connected reader. Change reader type in Step 3.

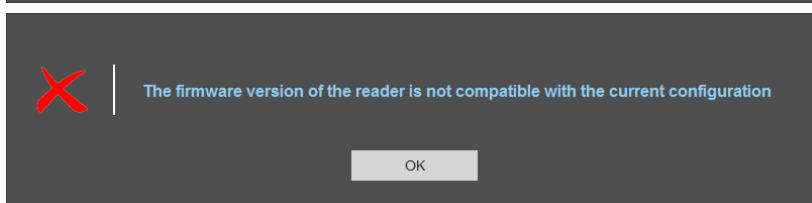


The firmware version of the reader is not compatible with the current configuration. Change firmware version in Step 3.


3.4.2 Configuration card (SCB/OCB UHF)

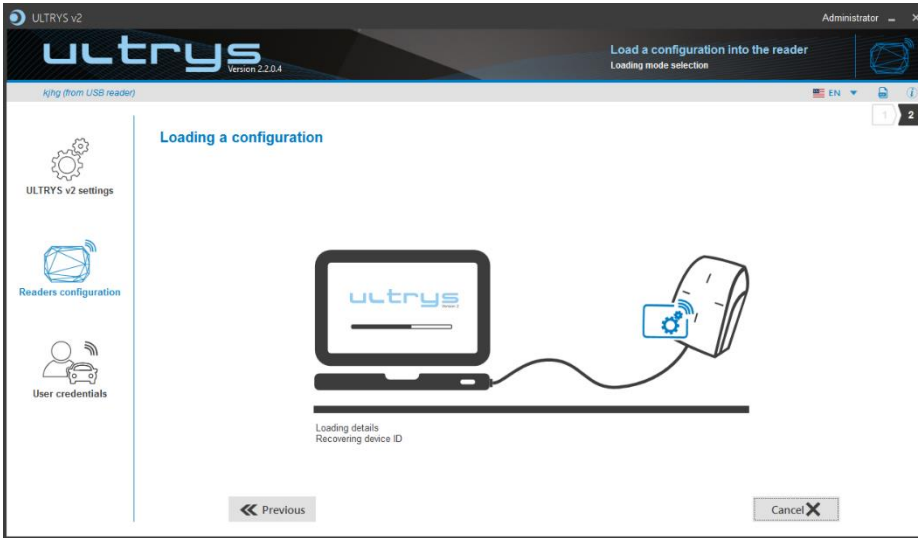

- 1- Connect an UHF encoder (STR, ARC UHF or GAT Desk).
- 2- Configure the communication settings.
- 3- Present a compatible SCB/OCB UHF card to the encoder.
- 4- Load.

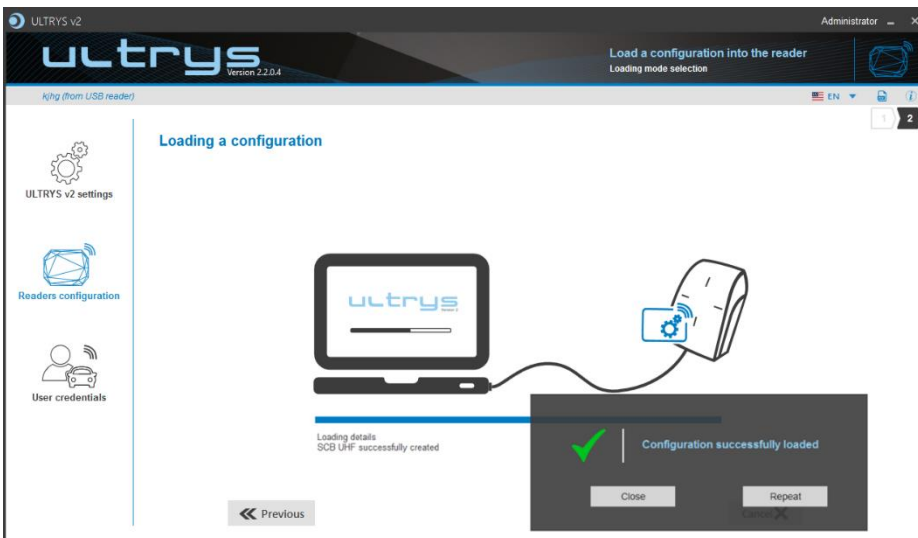

- 5- Close. ULTRYS v2 then displays the home page.

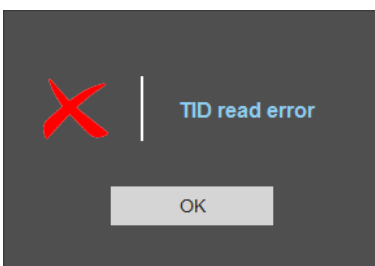

The tag presented to the encoder is not compatible to create a SCB/OCB UHF.

Note:

The UHF encoder uses a blue light signal to indicate that the writing of the configuration is in progress. A green light and an audible signal, emitted for 1 second, indicates that the configuration has been written correctly. A red light and an audible signal, emitted for 1 second, indicates a writing error.

4. User credentials

The user credentials encoding is done in three steps. To move from one step to another, you must click on “Next”.

 Step1	Configuration details loaded
 Step2	User ID definition
 Step3	Encoding tags

Step 1- Configuration details loaded

The screenshot shows the Ultrys v2 web interface. The main heading is "Creating user IDs" with a sub-heading "Configuration details loaded". A configuration details box contains the following information:

- Configuration name :
- Open with profile : Administrator
- Regulating frequency bands :
- Select protocol :
- EPC size (bytes) :
- Secure mode :
- EPC Filtering :

Below the box, there are several options and buttons:

- EPC filter
- [Check user ID information before encoding](#)
-
-
-

This is a close-up of the configuration details box from the previous screenshot. It shows the following configuration parameters:


- Configuration name : Parking IN
- Open with profile : Administrator
- Regulating frequency bands : France - ETSI
- Select protocol : Wiegand 26 bits - 3i
- EPC size (bytes) : 3
- Secure mode : Disabled
- EPC Filtering :
- Lane 1 : EPC mask : / Offset (byte) : 0
- Lane 2 : EPC mask : / Offset (byte) : 0
- Lane 3 : EPC mask : / Offset (byte) : 0
- Lane 4 : EPC mask : / Offset (byte) : 0

Check the configuration loaded is the correct one to use or open the configuration to use.





Caution: If the authenticated encryption of EPC data has been enabled in the configuration, make sure the tag is compatible with this option by performing the tag autodiagnosis.

If a non-compatible tag is still encoded in secure mode it will not be read by the Spectre reader.

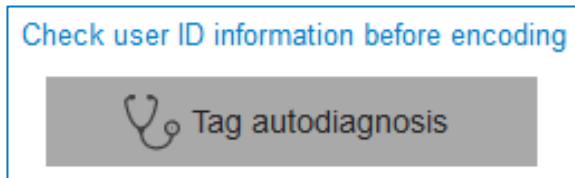

It indicates the UHF chip type and if it is compatible with secure encoding.

Examples:

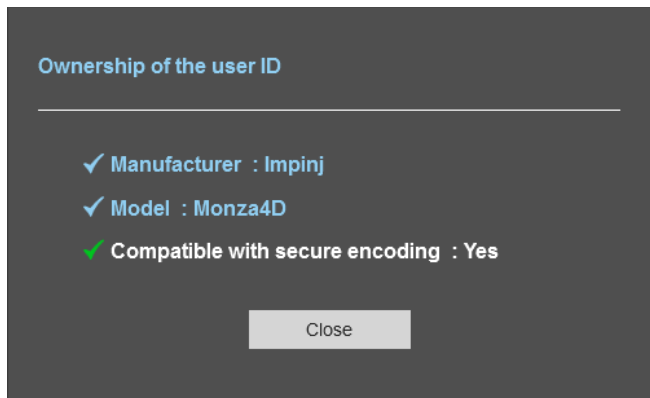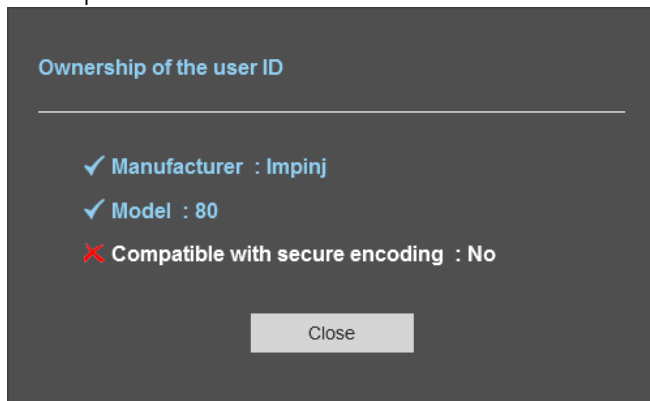




The chips compatible with secure encoding are: Monza X, Monza R6P, Monza 4D, those chips are present into the following credentials:

- TLTA-W75B-943_S (TeleTag V4-UHF FastID Programmable Removable Windshield tag-Broadband)
- TMSW94B3361 (IronTag 360-360 Flexible on-metal tag-Broadband-Impinj MonzaX2K-Black)
- CCTW490_AN (UHF EPC1 Gen2 Impinj Monza 4 programmable ISO Prox card)
- ETA-W75B-574BE10 (ETA v2 – Self destroying programmable adhesive label).




If an EPC filter has been set in the 'Advanced settings', select 'EPC Filter' and the corresponding lane to encode automatically the value of the EPC filter into the user credential.

Example:

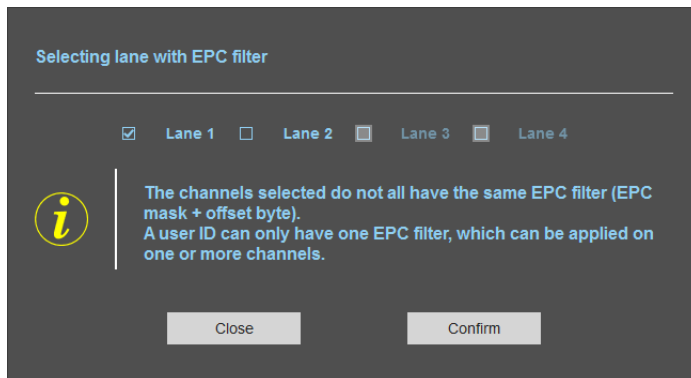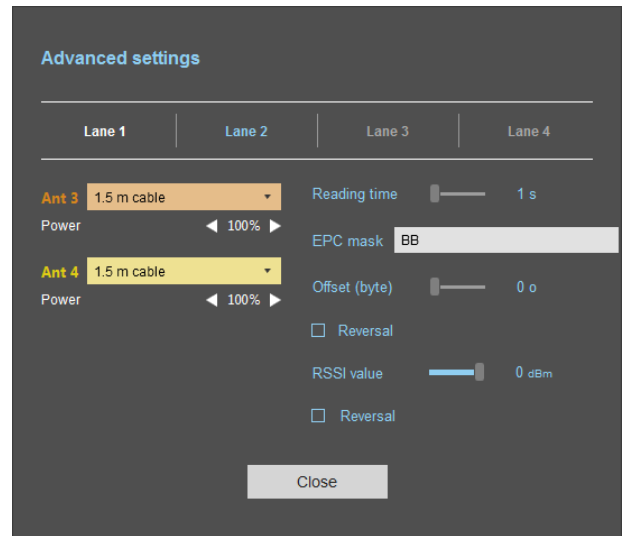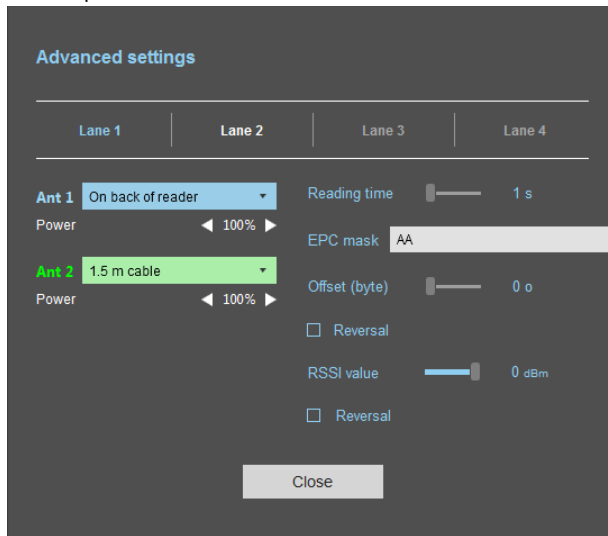

In this example, if the lane 1 is selected, the user credential will be encoded with the EPC filter AA.


Step 2- User ID definition

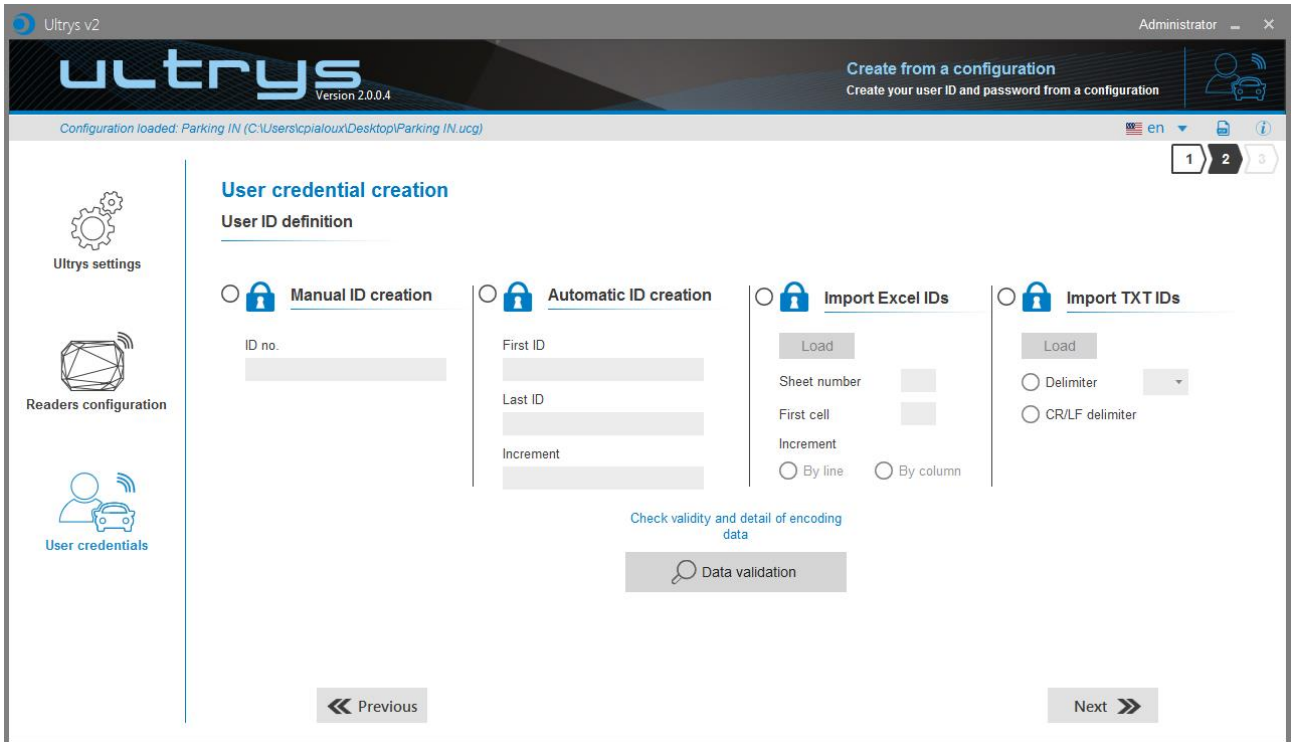

It is possible to enter the user IDs in four ways (described below).


Warning, credentials encoding depend on the reading EPC mode and EPC filter.

ID size is constrained by the protocol defined in the menu « *Config* ». If the data is it is not respected in the input fields, then the software will complete with « 0 » (by default MSB).


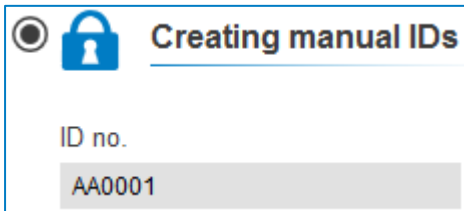


Enter directly the ID value in the field and click Next.

Use to encode a single tag or a specific value.

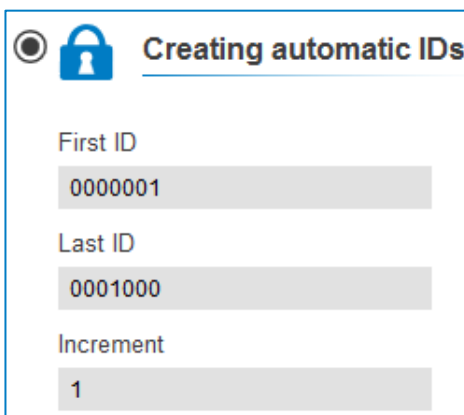

  Fill in each corresponding field, the beginning, the end and the increment to generate the list of user IDs to encode.





Importing Excel IDs

Load C:\Users\...
Desktop
UserIDs.xlsx


Sheet number

First cell

Increment


By line By column

This mode allows you to import lists in Excel format to be used for the user IDs programming.

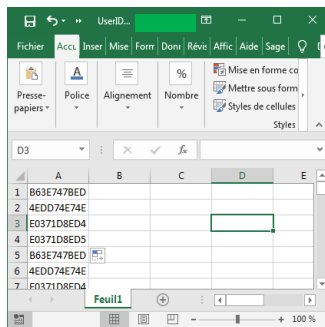

Check validity and detail of encoding data

Validating data

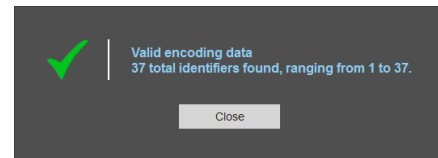


Importing TXT IDs

Load

Delimiter

CR/LF delimiter

 
This mode allows you to import lists in Text format to be used for programming the user IDs.




Select the correct Delimiter or CR/LF.




Step 3- Encoding tags

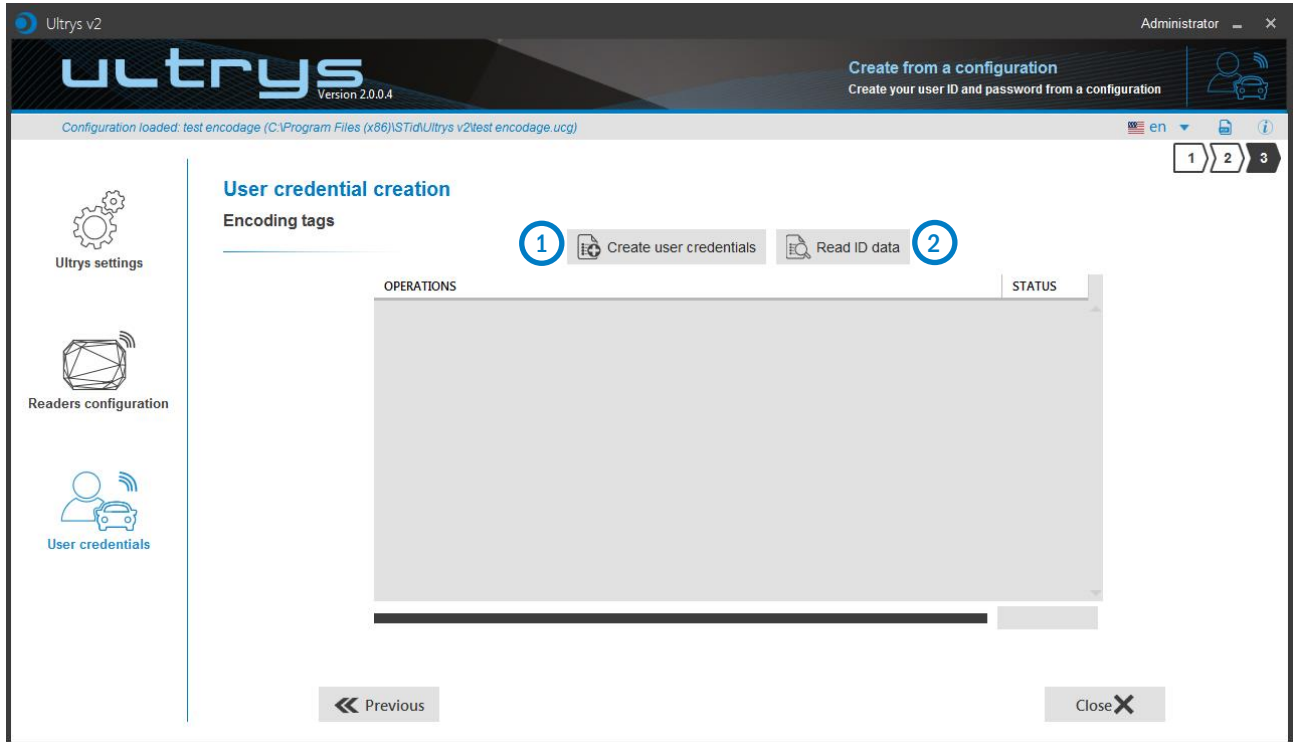

1 Present the user credential which you would like to encode to the encoder and click on this button.

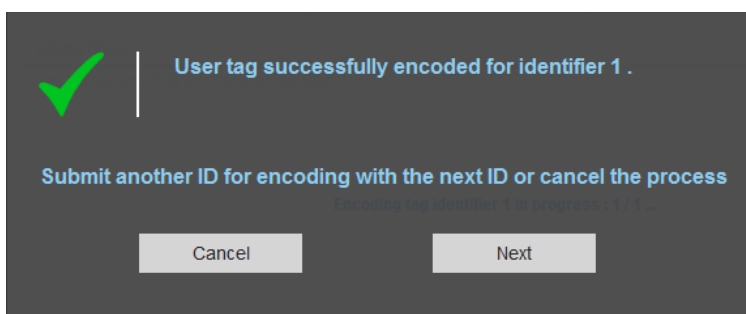

2 The credential data reading is written on Operations windows.

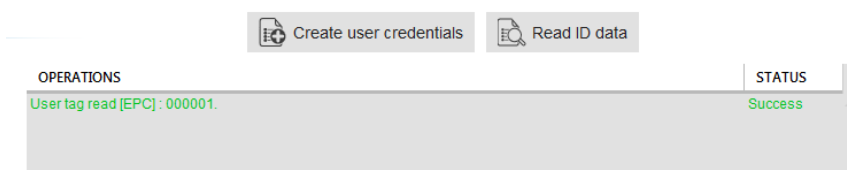



Using the EPC code feedback format and EPC filter





The feedback modes allow the full compatibility with existing credential.

To encode the credential we would prefer standard mode (mode 1).

1- Encoding the value 1122334455 on 5 bytes without EPC  **Manual ID creation** [filter.](#)

ID no.

1122334455

Settings	Value encoded by ULTRYS v2	Value ascended by the SPECTRE
EPC size (bytes)  5 0 EPC code feedback format Mode 1 (Standard) ▼	0000000000000001122334455	1122334455
EPC size (bytes)  5 0 EPC code feedback format Mode 2 (Standard reversed) ▼	0000000000000001122334455	5544332211
EPC size (bytes)  5 0 EPC code feedback format Mode 3 ▼	112233445500000000000000	1122334455
EPC size (bytes)  5 0 EPC code feedback format Mode 4 ▼	112233445500000000000000	5544332211

2- Encoding the value 1122334455 on 5 bytes with EPC 'AA'.

Manual ID creation [filter](#)

EPC filter

Select the lane

Selecting lane with EPC filter

Voie 1 Voie 2 Voie 3 Voie 4

The channels selected do not all have the same EPC filter (EPC mask + offset byte). A user ID can only have one EPC filter, which can be applied on one or more channels.

Close Confirm

ID no.
1122334455

Settings	Value encoded by ULTRYS v2	Value ascended by the SPECTRE
EPC mask AA Offset (byte) 0 o		
EPC size (bytes) 5 o EPC code feedback format Mode 1 (Standard)	AA00000000000001122334455	1122334455
EPC size (bytes) 5 o EPC code feedback format Mode 2 (Standard reversed)	AA00000000000001122334455	5544332211
EPC size (bytes) 5 o EPC code feedback format Mode 3	AA2233445500000000000000	AA22334455
EPC size (bytes) 5 o EPC code feedback format Mode 4	AA2233445500000000000000	55443322AA
EPC mask AA Offset (byte) 7 o		
EPC size (bytes) 5 o EPC code feedback format Mode 1 (Standard)	00000000000000AA22334455	AA22334455
EPC size (bytes) 5 o EPC code feedback format Mode 3	11223344550000AA00000000	1122334455

3- Encoding the value 1122334455 on 5 bytes in secure

Manual ID creation [mode](#)

ID no.
1122334455

	Encoded value on 16 bytes encrypted.	Value ascended by the SPECTRE
<input checked="" type="checkbox"/> User ID security (EPC) Private key definition (16 bytes) 676AB9819CD0523B1D01BD448545A9E2	789C9B12C733B3657EF030CE17F250BE	1122334455



5. REVISION

Date	Version	Description
04/03/2019	2.0	Creation.
15/11/2019	2.1	OSDP reader added
03/06/2020	2.2	Add ATX/ ATX4 READ ONLY/OSDP™

Headquarters / EMEA

13850 Gréasque, France
Tel.: +33 (0)4 42 12 60 60

PARIS-IDF Office

92290 Châtenay-Malabry, France
Tel.: +33 (0)1 43 50 11 43

STid UK Ltd. LONDON

Hayes UB11 1FW, UK
Tel.: +44 (0)192 621 7884

STid UK Ltd.

Gallows Hill, Warwick CV34 6UW, UK
Tel.: +44 (0)192 621 7884

NORTH AMERICA Office

Irving, Texas 75063-2670, USA
Tel.: +1 469 524 3442

LATINO AMERICA Office

Cuauhtémoc 06600 CDMX, México
Tel.: +521 (55) 5256 4706



info@stid.com

www.stid-security.com