NETWORK CAMERA

USER'S MANUAL



WARNING

RISK OF ELECTRIC SHOCK DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

COMPLIANCE NOTICE OF FCC:

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

WARNING: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

The information in this manual is believed to be accurate as of the date of publication. We are not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.

The software included in this product contains some Open Sources. You may obtain the complete corresponding source code from us. See the Open Source Guide on the software CD (OpenSourceGuide. OpenSourceGuide.pdf) or as a printed document included along with the User's Manual.

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product (Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Important Safeguards

1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

6. Placing and Accessories

Do not place this equipment on an wall or ceiling that is not strong enough to sustain the camera. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

Do not place this equipment in an enclosed space. Sufficient ventilation is required to prevent an increase in ambient temperature which can cause malfunction or the risk of fire.

7. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company.

8. Power Cord

Operator or installer must remove power and TNT connections before handling the equipment.

9. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges. If thunder or lightning is common where the equipment is installed, use a surge protection device.

10. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

11. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

12. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

13. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or the plug has been damaged.
- B. If liquid is spilled, or objects have hit the equipment.
- C. If the equipment has been exposed to rain or water.
- D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
- E. If the equipment has been dropped, or the cabinet damaged.
- F. When the equipment exhibits a distinct change in performance — this indicates a need for service.

14. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

15. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

16. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

17. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

18. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.



WARNING: IR (Infrared Radiation) is emitted from this product. Do NOT stare at the IR LED.

Table of Contents

Chapter 1 — Introduction	1
In This Manual Features Typical Applications Remote Monitoring Remote Recording Webcasting	1 2 2 3 5
Chapter 2 — Installation	7
Package Contents Dimensions Illustrated Parts List Cable Assembly Factory Reset Mounting	7 7 8 .10 .10
Chapter 3 — Remote Setup	. 11
Quick Setup System General Date/Time	. 12 . 12 . 12 . 13
Network IP Address DVRNS Port/QoS	. 14 . 15 . 16 . 17 . 18
Security IEEE 802.1X Video	.20 .21 .22 .23
Camera Streaming Webcasting MAT Privacy Masking	. 23 . 28 . 29 . 30 . 31
Audio	. 32 . 32 . 33
Alarm Out Email Remote Callback	. 33 . 34 . 35

Audio Alarm	
FTP Upload	
Event	
Motion Detection	
Trip-Zone	40
Audio Detection	
Tampering	43
System Event	
Chapter 4 — WebGuard	45
Appendix	
Map of Screens (Remote Setup)	
Troubleshooting	
Specifications	
Index	55

Chapter 1 — Introduction

In This Manual

This manual is intended for users of the network camera and includes instructions for using and managing the camera on the network.

Features

This network camera compresses live video and transmits the video over Ethernet connections. The camera can be accessed, configured and managed by using the INIT (Integrated Network Installation Tool) program. It has a built-in web server, WebGuard, allowing you to monitor live video remotely using a web browser. The remote programs provided with the camera also allow remote management, monitoring, searching and recording. This camera offers the following features:

- · Multistream for live monitoring and recording
- H.264 and M-JPEG compression algorithm
- · Four levels of video compression and various video compression resolutions
- Two-way audio communication (audio supported model only)
- · Pre- and post-event buffering and video stream buffering to enhance reliability of network recording
- · Remote monitoring via web browser or remote software
- · Automatic HTML code generation for webcasting on a user's website
- Up to 10 simultaneous connections to the camera for remote monitoring
- Enhanced security using IP address filtering, HTTPS, SSL and IEEE 802.1X functions and password protected multiple user levels
- · Network bandwidth limit and MAT functions to use network bandwidth efficiently
- Convenient network connection using the UPnP (Universal Plug and Play) function and built-in mDNS (Multicast DNS) protocol
- Support of the ONVIF protocol (Core specification version 1.02)
- · Digital WDR (Wide Dynamic Range) to adjust the image display in high contrast conditions
- Slow shutter to reduce the minimum illumination requirements
- · Day and night functionality with the built-in IR-cut filter changer
- Motion detection by PIR (Passive Infrared) sensor (alarm supported model only)
- · Optical zoom functionality with an optical zoom lens
- · Auto focus functionality
- · Convenient firmware upgrades via the network connection
- · Firmware duplication and autorecovery functions to enhance system stability
- · Management of multiple cameras via Ethernet connections
- · Event detection functions: motion, trip-zone, tampering
- Power sources: 12 VDC, PoE (Power over Ethernet)
- NTSC or PAL programmable video output
- Built-in heater allowing operation in a sub-zero temperature (only for audio supported model using 12 VDC power)

NOTES:

- In this manual, a "remote system" refers to a PC that the remote program (iNEX Basic or WebGuard) is running.
- Remote monitoring and recording through multistream are available by using the iNEX Basic program provided with the camera.









Chapter 2 — Installation

Package Contents

- Network Camera
- Installation CD (INIT/iNEX Basic software and User's Manual)
- Quick Reference Guide
- · Camera Sun Shield
- · Mounting Bracket and Screws



Illustrated Parts List



- ① Lens
- ② IR LED
- ③ Body
- ④ Stand
- ⑤ Bottom Cover
- 6 Mounting Bracket
- ⑦ Cable Assembly
- In Sun Shield Screw Hole

- Lens: Optical zoom lens is installed.
- IR LED: The sensor in the bottom middle of IR LEDs detects low illumination and the IR LEDs are lit at night or under low lighting conditions. The PIR (Passive Infrared) sensor in the upper middle of IR LEDs detects motions by detecting infrared radiation changes at night or under low lighting conditions (alarm supported model only). The motion detection by the PIR sensor activates alarm out according to the settings of Alarm Out (Remote Setup > Event Action > Alarm Out), and the white LEDs which are at the left and right middle of IR LEDs are lit while the alarm out is activated.
- Body: The cables are connected through the stand.
- Stand: Allows you to adjust the camera angle and lens' rotation angle. Twist the setscrews counterclockwise and move the camera to the desired direction. Once it is set, twist the setscrews clockwise to lock it.
- Bottom Cover: Allows you to mount the camera to the wall or ceiling using the mounting bracket provided with the camera.
- Mounting Bracket: Allows you to mount the camera to the wall or ceiling.
- Cable Assembly: See below.
- Sun Shield Screw Hole: Allows you to screw the sun shield to the camera.

Cable Assembly



- ① BNC Video Out (yellow cable)
- Power In (red cable)
- ③ Network Port

Alarm Supported Model



- ① BNC Video Out (vellow cable)
- 2 Power In (red cable)
- ③ Network Port
- ④ Alarm Out

Audio Supported Model



- ① Audio Out (black cable)
- (white cable)
- ③ BNC Video Out (vellow cable)
- ④ Power In (red cable)
- Network Port
- Audio Out (black cable): Connect to an amplifier (Line-out). The camera does not have amplified audio output, so you will need a speaker with an amplifier.
- Audio In (white cable): Connect to an audio source (Line-in).
- BNC Video Out (yellow cable): Connect to a monitor. This is intended for video preview while adjusting the camera.
- Power In (red cable): Connect to the power adapter (12 VDC).
- Network Port: Connect a Cat5 cable with an RJ-45 connector. You can change the settings, manage • the camera, upgrade the software or monitor video remotely via the network connection. Refer to the INIT User's Manual for details about network connection setup. When using a PoE switch, the camera can be supplied with power over Ethernet cable (Refer to the PoE switch manufacturer's manual for details).
- · Alarm Out: Connect an alarm-out device to the NO (Normally Open) and COM (Common) connectors. NO is a relay output which sinks 0.3A @ 125 VAC and 1A @ 30 VDC.

NOTE: Camera surveillance may be prohibited by laws that vary by region. Check the laws in your area before using this product for surveillance purposes.

CAUTIONS:

- The camera restarts after the power adaptor is disconnected from the camera when switching the power source from 12 VDC to PoE.
- The network connector is not designed to be connected directly with cable or wire intended for outdoor use.

WARNING: ROUTE POWER CORDS SO THAT THEY ARE NOT A TRIPPING HAZARD. MAKE CERTAIN THE POWER CORD WILL NOT BE PINCHED OR ABRADED BY FURNITURE. DO NOT INSTALL POWER CORDS UNDER RUGS OR CARPET. USE THE POWER CORD THAT HAS A GROUNDING PIN. IF YOUR POWER OUTLET DOES NOT HAVE A GROUNDING PIN RECEPTACLE. DO NOT MODIFY THE PLUG. DO NOT OVERLOAD THE CIRCUIT BY PLUGGING TOO MANY DEVICES INTO ONE CIRCUIT.

Factory Reset

This will only be used on the rare occasions that you want to return all the settings to the original factory settings. Refer to the INIT User's Manual for details on remote factory resetting.

CAUTION: When performing a Factory Reset, you will lose any settings you have saved.



- 1. Screw the camera sun shield to the camera using the screw and rubber provided with the camera.
- 2. Screw the mounting bracket to the wall or ceiling by using screws provided with the camera.
- 3. Screw the bottom cover to the mounting bracket by using screws provided with the camera.
- 4. Adjust the camera angle by bending the stand.
- 5. Connect external devices, network and power adapter.
- 6. Apply power.

WARNING: You might need to reinforce the wall or ceiling. If the wall or ceiling is not strong enough to support the camera, the camera might fall damaging the camera or causing injuries.

Chapter 3 — Remote Setup

Remote Setup allows you to change all settings of a camera. Run the INIT program, select a camera and click the Setup icon on the Main screen. Select Remote Setup from the Setup menu and the Remote Setup screen appears. You can also display the Remote Setup screen by selecting a camera, clicking the right mouse button and selecting Remote Setup on the Main screen.

DINIT - Integrated N	etwork	Installation Setu IP Add	p v	Test	• 0	Reset -	Management	• ×
No 1 2 3 4	Nam	Remote WebGu Apply : Make S	e Setup Iard Setup File Setup File	IP Ad	ldress	MAC Address	Version (HW/SW)	E
emote Setup System Network Video ► System ► Network ► Video ► Zvent Action ► Event			QUICK SE System Network Video	TUP / OVERVIE IP Address DNS Server Mirroring Streaming Compression Resolution Resolution Firame Rate	English 2012/10/11 GMT-05:00 DHCP 0.0.0.0 0.0.0.0 Default Rec H.264 1280X720 Standard CBR 30.00 ps	5 18:59:10 Eastern Time (US cord St Off None None None None None None	& Canada) (DST) Off None None None None None	
			L			OK	Cancel	Apply

NOTE: You can also change the settings by using remote programs.

Clicking a menu on the left side of the Remote Setup screen displays the current settings for that menu on the right side of the screen. Clicking a submenu under each menu allows you to change the settings. Clicking the OK button closes the Remote Setup screen and applies the changes.

iote Setup

▼ Quick Setup System Network Video

Quick Setup

and video settings.

System

You can change a camera's system information, import or export all settings, and add users or groups.

The Quick Setup allows you to change a camera's basic system, network

General

emote Setup

Quick Setup ▼ System General Date/Time User/Group

▼ System	SYSTEM / GENERAL
General Date/Tme Use/Goup ▶ Network ▶ Video ▶ Event Action ▶ Event	Language English Name Note HW Version SW Version Miscelaneous ONV/IF Protocol I On
	Setup Load Default Setup Import Setup Export Setup

- Language: Choose the language to be used during remote setup.
- Name: Enter the camera name (up to 31 characters including spaces).
- Note: Enter additional information about the camera. •
- · HW Version, SW Version: These fields display the camera's hardware and software versions.
- Miscellaneous:

- ONVIF Protocol: Check the box to enable the ONVIF protocol. The ONVIF protocol is available only for users belonging to the default user groups (Administrator, Operator, User). When you have connected to the camera by using the ONVIF protocol, only the currently enabled streams or events are supported and you cannot change it. There may be some more settings that cannot be changed, too. If you want to change those settings, connect to the camera by using the INIT program.
- · Setup:
 - Load Default Setup...: Click to return all settings except date/time to the original factory settings. You can select whether or not network settings will be included when the setup is applied. Refer to the Network setup for details of the network settings.
 - Import Setup...: Click to apply the settings saved as a .dat file format to the camera. A setup
 screen appears allowing you to select the setup file. You can select whether or not to include
 network settings (except DVRNS setting) when the setup is applied. Refer to the Network
 setup for details of the network settings.
 - Export Setup...: Click to save the current camera settings as a .dat file format. A setup screen appears allowing you to name the setup file.

NOTES:

- The Load Default Setup and Import Setup functions are permitted only to the users in the Administrator group.
- Do NOT check the Include Network Setup box when the network settings of the setup file are
 used in another camera. Otherwise, the connection to the camera might not be made properly.
- If the IP address, admin port number or SSL settings are changed during Setup, Remote Setup closes after saving the changes.

Date/Time

Remote Setup	x
Remote Setup ♥ Quick Setup ♥ System General Data/Tme User/Group ▶ Network ▶ Video ▶ Video ▶ Event Action ▶ Event	SYSTEM / DATE/TIME Date/Time Date 2012/10/15 * Format * Time 18:59:14 * Format * Time Zone GMT-05:00 Eastern Time (US & Canada) * V Use Dayloght Saving Time
	Apply Time Sync Automatic Sync Time Server Use DVRNS Interval Interval Run as Server
	OK Cancel Apply

- Date/Time: Change the system date/time, date/time format and time zone. Turn daylight-saving time on or off by checking the box. Clicking the Apply button applies the changes immediately.
- · Time Sync
 - Automatic Sync: Check the box to automatically synchronize the time with a time server. Enter the IP address or the domain name of the time server and set the time interval for synchronization. If the time server uses the DVRNS function, selecting the Use DVRNS box allows you to enter the name instead of the IP address or the domain name of the time server.
 - Run as Server: Check the box to run the camera as a time server.

NOTE: If you want to use a domain name instead of the IP address of the time server, the DNS server must be set up properly when setting *Network – IP Address* setup. If you want to use a name instead of the IP address or the domain name of the time server, the DVRNS function must be set up properly when setting the *Network – DVRNS* setup.

<pre>VQUCK SetUP System Date/Time Use/Group Network ▷ Videa ▷ Event Action ▷ Event</pre>	SYSTEM / USER/GROUP	
	User/Group Administrator - admin - Operator - User	Add Group Add User Edit Remove
	Allow Anonymous Login	

User/Group

- User/Group: Click the buttons to change the settings for a group or a user allowed controlling the camera remotely.
 - Add Group: Click to add a group. Enter the group name and set authority levels for the group to control the camera remotely.
 - Add User: Click to add a user. Enter the user name and select the group that the user will belong to. Enter the password to be assigned to the user.
 - Edit: Select a group and click the button to change authority levels assigned to the group, or select a user and click the button to change the user's password.
 - Remove: Select a group or user and click the button to delete the group or user.

- Allow Anonymous Login: Check the box to use the webcasting feature. Refer to the Video Webcasting setup for details.
- Allow Anonymous PTZ Control: Check the box to allow controlling zoom of the lens remotely on a website by using the webcasting feature.

NOTES:

- Only users belonging to the Administrator group can make User/Group changes.
- There is no default password for the *admin* user in the *Administrator* group.
- The default groups (Administrator, Operator, User) cannot be edited or deleted. The same authority levels are assigned to the user groups in the ONVIF protocol.
- · The authority levels that can be assigned are:
 - Upgrade: The user can upgrade the software.
 - Setup: The user can set up the system.
 - Color Control: The user can control brightness, contrast, hue and saturation for cameras.
 - Alarm-Out Control: The user can reset the output during an alarm (alarm supported model only).
 - PTZ Control: The user can control zoom of the lens.
 - System Check: The user can view and check the remote system status.

Network

Remote Setup

Quick Setup
 System
 P Address
 DVRNS
 Port/QoS
 Bandwidth Control
 Security

IEEE 802.1X

You can change the network settings, set up the DVRNS and security functions and control the network bandwidth.

IP Address

Remote Setup						×
▼ Quick Setup ▼ System	NETWORK / IP ADDRESS					
▼ Network IP Address	Туре	DHCP			•	
DVRNS Port/QoS	IP Address	0.	0	0	. 0	
Bandwidth Control Security	Gateway	0.	0	0	. 0	
IEEE 802.1X Video	Subnet Mask	0.	0	0	. 0	
 Event Action Event 	DNS Server	0.	0	0	. 0	From DHCP
				OK		Cancel Apply

- Type: Select the type of network configuration. Remote Setup closes after saving the changes.
 - Manual: Select when the camera is using a static IP address for network connection, and set up LAN parameters manually.
 - DHCP: Select when the camera is networked via DHCP (Dynamic Host Configuration Protocol). Click the OK button, and a temporary IP address is automatically assigned to the camera. The camera periodically will be issued a new IP address automatically.
 - ADSL: Select when the camera is networked via ADSL. Enter the ID and password for ADSL connection, and click the OK button. A temporary IP address is automatically assigned to the camera. The camera periodically will be issued a new IP address automatically.
- DNS Server: Enter the IP address of the DNS server. If you set up the DNS server, the domain
 name of the server can be used instead of the IP address during the DVRNS, time or SMTP server
 setup. Ask your Internet service provider for the IP Address of the DNS Server. When the camera
 is networked via DHCP, selecting From DHCP automatically assigns the IP address of the DNS
 server. The assigned IP address is displayed the next time it is connected.

NOTES:

- Ask your network provider for details about the network connection type and connection information for the camera or the IP address of the DNS server.
- If the camera is configured for a DHCP or ADSL network, it is best to use the DVRNS function because the camera IP address might change frequently.

DVRNS

Remote Setup	x
▼ Quick Setup ▼ System	NETWORK / DVRNS
Vetwork IP Address DVRNS Port/QoS	DVR Name Service
Bandwidth Control Security IEEE 802.1X	Port 10088 (10000 ~ 12000)
 Event Action Event 	Camera Name Check Help Desk
	OK Cancel Apply

Check the DVR Name Service box to use the DVRNS function.

- DVRNS Server: Enter the IP address or domain name of the DVRNS server.
- Port: Set up the port number of the DVRNS server.
- Use NAT: Check the box when the camera uses a NAT (Network Address Translation) device for network connection.
- Camera Name: Enter the camera name to be registered on the DVRNS server. Check whether
 or not the name is available by clicking the Check button.
- Help Desk: Choosing the OK button registers the camera on the DVRNS server. Proper DVRNS settings will display the help desk information of the DVRNS server.

NOTES:

- The DVRNS (DVR Name Service) function allows the camera to use dynamic IP addresses for remote connection. When using this function, you can access the camera remotely by using the camera name instead of its IP address. For the DVRNS function to work properly, the camera should be registered on the DVRNS server, and the DVRNS server settings in the INIT program for the camera should match the settings registered on the DVRNS server. Any changes on the DVRNS server might cause improper operation.
- When LAN settings are changed, set up the DVRNS settings after saving your LAN changes by clicking the OK button.
- You will need to get the IP address or domain name of the DVRNS server from your network administrator. You can use the domain name instead of IP address if you set up the DNS server during the IP Address setup.

NOTES:

- When using a NAT (Network Address Translation) device, refer to the NAT manufacturer's instructions for the proper network settings.
- The camera name you entered in the Camera Name field should be checked by clicking the Check button, otherwise the DVRNS changes will not be saved. When entering no name or a name already registered on the DVRNS server, an error message displays. If a camera name includes the #, \, or % characters, connections to the camera using a WebGuard program might fail.

Port/QoS

Remote Setup						×
▼ Quick Setup ▼ System	NETWORK / PORT/QOS					
▼ Network IP Address		Use	Port		DSCP	
DVRNS Port/OoS	Admin	\checkmark	8200	÷ 0	×	
Bandwidth Control Security	Watch	\checkmark	8016	0	×	
IEEE 802.1X	Record	\checkmark	8017	0	* *	
Event Action	WebGuard	V	80	0		
PEVenc	RTSP	V	554	÷ 0	*	
			Use HTTPS			
			🗹 Use UPnP		Check	
			(
			ОК		Cancel	Apply

- Use, Port: Check the box to enable and enter the port number. Admin, Watch and Record
 ports are set to use by default and you cannot change it. Checking the WebGuard or RTSP box
 allows you to connect to the camera by using the WebGuard program or media players, such
 as VLC Player, supporting RTSP (Real-Time Streaming Protocol) service. Remote Setup closes
 after saving the changes (Admin port number only).
- DSCP: Enter the DSCP value to set up the QoS (Quality of Service) level for each port. It decides
 order of priority to use network bandwidth for each port. The higher the DSCP value, the higher
 the QoS level and order of priority when allocating network bandwidth. When the DSCP value
 is set to 0, the QoS level is not set up. For this function to work properly, the network environment
 should support DSCP. Ask your network administrator for details.
- Use HTTPS: Check the box to enhance the security of WebGuard pages by using the HTTPS protocol when running the WebGuard program.

Use UPnP: Check the box to connect to the camera without manually setting up port forwarding
on the NAT device when the camera uses a NAT (Network Address Translation) device for
network connection. The UPnP function must also be enabled in the NAT device for this function
to work. Refer to the NAT device User's Manual for details on enabling the UPnP function in
the NAT device. Clicking the Check button checks the current port settings. A success message
is displayed if all the current port numbers are available, and recommended port numbers are
displayed if any of the current port numbers are not available.

	UPnP Check			<u> </u>	
	Recommended Port Nun	nbers			
	Admin	8200			
	Watch	8016			
	Record	8017			
	WebGuard	12088	->	10019	
	RTSP	554	->	81	
I					
		Apply		Cancel	

Clicking the Apply button applies the recommended port numbers.

NOTES:

- Do NOT use the same port number for more than one function. If you do, the camera cannot be connected with the remote programs.
- You can access the camera and monitor live video images using media players, such as VLC Player, supporting RTSP service. You should open all ports for UDP protocol or an RTSP port for TCP protocol if the camera uses a NAT (Network Address Translation) device for network connection or if the firewall is enabled. This function might not be supported, depending on the type of media player, and some media players might not play video properly depending on network conditions or compression or resolution of images for streaming. You can access video as follows:
 - Access from a PC: Start the media player and enter "*rtsp://*user:Password@IP address:RTSP port number/*trackID=* 'stream number'' (the number for the primary stream is 1, for the secondary stream is 2, and for the tertiary stream is 3)
 (e.g. *rtsp://admin:@10.0.152.35:554/trackID=1* (user: *admin*, password: no password, camera IP address: 10.0.152.35, RTSP port number: 554, stream: primary))
 - Access from mobile devices: Start web browser on the mobile device and enter "http://IP address:WebGuard port number/" (https instead of http if the Use HTTPS box is checked).
 For this connection to work, the WebGuard and RTSP port numbers must be set up properly.

CAUTIONS:

- When changing the port settings, you must change the port settings on remote programs too.
- When using the HTTPS protocol, the ONVIF protocol might not work.

Bandwidth Control

Remote Setup	x
▼ Quick Setup ▼ System	NETWORK / BANDWIDTH CONTROL
V Network	Network bandwidth limit
DVRNS	100 Mbps
Bandwidth Control	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
Security IEEE 802.1X	
 Video Event Action 	
▶ Event	
	OK Cancel Apply

You can control the network bandwidth by limiting the network bandwidth of the camera depending on the network traffic.

Check the **Network bandwidth** limit box and set the desired maximum bandwidth. When the network is busy with traffic, the camera cannot use more than the maximum bandwidth.

NOTE: When limiting the network bandwidth, the frame rate might decrease to lower than the frame rate set during the *Video – Streaming* setup.

Security

Remote Setup		x
 ♥ Quick Setup ♥ System ♥ Network IP Address 	INETWORK / SECURITY Image: Prefixed and the second seco	<u> </u>
DVRNS Port/QoS Bandwidth Control Security IEEE 802.1X	Aldress Add Add Remove	
Event Action Event	Deny Lst Type IP Address Add Denyust Add Denyust Add Denyust Denyust	
	Remove Al	
	Type Standard 🗸	
	OK Cancel Apply	

- IP Filtering: Check the box to use the IP filtering function. You can allow or block connections to the camera by designating IP addresses.
 - Add: Click the button to add IP addresses to the Allow List or Deny List to allow or block connection to the camera. Selecting the Host option allows you to add one IP address at a time. Selecting the Group option allows you to add continuous IP address numbers in one action by designating a range of IP addresses to add.
 - Remove, Remove All: Click the button to remove the selected IP address or all IP addresses from Allow List or Deny List.
- SSL: Check the box to use the SSL function. You can enhance the security of outgoing data
 from the camera by using the SSL (Secure Sockets Layer) protocol. When using the SSL function,
 the camera cannot be connected with a program or a system that does not support the SSL function.
 Remote Setup closes after saving the changes.

NOTES:

- If you want to use the time synchronization, DVRNS and Email sending functions, the connection
 of the IP addresses of the time server, DVRNS server and the SMTP server must be allowed
 when you set up the IP filtering function. Any connection to the camera from the IP address
 in *Deny List* will NOT be allowed.
- Using the SSL function might cause congestion in the system receiving data from the camera depending on the security level.
- This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (http://www.openssl.org/)

IEEE 802.1X

Remote Setup		x			
▼ Quick Setup ▼ System	NETWORK / IEEE 802.1X				
▼ Network IP Address	EEE 802.1X				
DVRNS Port/OoS	Certificates				
Bandwidth Control	CA Certificate	No CA certificate uploaded. Upload			
IEEE 802.1X	Client Certificate	No client certificate uploaded. Upload			
▶ Video ▶ Event Action	Client Private Key(and ce	No private key uploaded. Upload			
▶ Event	Private Key Password				
	Settings				
	EAP Type	EAP-MD5 V			
	EAPOL Version	1 -			
	EAP Identity				
	EAP Password				
		Cancel Apply			

Check the IEEE 802.1X box to use the IEEE 802.1X network connection authentication function.

- Certificates: Uploads a certificate or private key for network connection depending on the authentication type. Entering a private key password might be required depending on the authentication type.
- Settings: Sets up EAP (Extensible Authentication Protocol).
 - EAP Type: Select the type of authentication to be used for network connection authentication. The authentication type must be identical to the authentication type that the authentication server uses.
 - EAPOL Version: Select the EAP version.
 - EAP Identity, EAP Password: Enter the ID and password for the authentication.

NOTE: For the IEEE 802.1X network connection authentication function to work properly, the authentication server and AP should support the IEEE 802.1X authentication.

Video

Remote Setup

Quick Setup
▼ System
Network
▼ Video
Camera
Streaming
Webcasting
MAT
Privacy Masking

Camera

You can set up camera setting and features for streaming, webcasting, MAT and privacy masking.

Remote Setup	x
 Quick Setup System 	VIDEO / CAMERA
▶ Network ▼ Video	Image Sensor White Balance Exposure Day & Night Miscellaneous
Camera Streaming Webcasting MAT Privacy Masking ▶ Event Action ▶ Event	Mirroing Horizontal Vertical Pivot On @ Clockwse Counter clockwse
	Video Style PC Color 👻
	Backlight Compensation Off
	Sharpness 3 (Normal)
	Noise Filter 3 (Normal)
	OK Cancel Apply

Image Sensor: Click the tab to set up image sensor settings.

Mirroring: Check the Horizontal or Vertical box to flip images horizontally or vertically.

- Pivot: Set whether to enable or disable the pivot function. When the pivot function is enabled, images are rotated 90 degrees clockwise or counterclockwise. If vertical resolution is less than 320, this function is not supported. If you enable this function, you can monitor more efficiently long and narrow space such as hallways, corridors, etc.
- · Video Style: Select the video style between TV Color and PC Color.
- Backlight Compensation: Set whether to enable or disable the backlight compensation.
 - OFF: Disables the BLC function.
 - ON: When images are very bright overall due to backlight, subjects in front of bright backgrounds will be clearer under backlight circumstances.

- HSBLC (High Suppress Backlight Compensation): When a certain area of images is very bright in the screen due to backlight under low lighting conditions and it causes the other area to be very dark, this function provides the other area of images brightly and clearly by blocking the backlight in the certain area. For example, when car headlights block a license plate at night, this function allows you to recognize the license plate by blocking the headlight.
- Sharpness: Set the sharpness of images. The camera adjusts the edges in images to enhance the sharpness of images. The higher the value is, the sharper the images appear but it might cause increased image noise when the value is too high.
- Noise Filter: Set the degree of the noise filtration. This adjustment can be used to decrease noise in low light conditions. The higher the value is set, the less the noise there is. However, too high of a setting might cause overall image blurring.

Quick Setup	VIDEO / CAMERA
 > System > Network ▼ Video Camera Streaming Webcasting MAT Privacy Masking > Event Action > Event 	Image Sensor White Balance Exposure Day & Night Miscellaneous
	Manual Red Gan 1.68 Blue Gan 1.52

White Balance: Click the tab to set up white balance settings.

- Preset: Select the preset white balance value based on the conditions.
 - Auto: Select to adjust the white balance automatically. The system identifies the light source
 of where the camera is installed and sets up the proper white balance for the conditions.
 - INCANDESCENT ~ Fluorescent Cold: Select the type of light source of where the camera is installed to set the proper white balance for the conditions.
- Manual: Select to adjust the white balance manually. Adjust the Red and Blue gain. The higher the value, the stronger the color is.

Exposure: Click the tab to set up exposure settings.

Remote Setup	x
P Quick Setup P System Vetwork Video Camera Streaming Webcasting MAT Prizacy Masking Fevent Action Event	VIDEO / CAMERA Image Sensor White Balance Exposure Day & Night Miscellaneous AE Target Gain 0 (Normal) Local Exposure Off Anti-Ricker Off Shutter Speed Control @ Auto @ Manual 1/30 sec. 1/8000 sec.
	OK Cancel Apply

- AE Target Gain: Set the target gain for the exposure compensation. The camera compensates the exposure automatically based on the selected target gain. The higher the value is, the brighter the images are.
- Local Exposure: Set the local exposure. It provides images except the backlight area clearly
 when very dark and very bright areas exist simultaneously in the screen for backlight under low
 light conditions. For example, when car headlights block a license plate at night, you can recognize
 the license plate by blocking the headlight. The higher the value is, the clearer images are.
- Anti-Flicker: Set to the same frequency as the lighting when the AC power is used for the lighting such as a fluorescent lights. This reduces video flicker caused by the frequency differences (60 Hz for NTSC, 50 Hz for PAL).
- Slow Shutter: Set the slow shutter mode. Selecting a speed automatically decreases the electronic shutter speed during low light conditions so that images are displayed bright even though the lighting is dim.
- Shutter Speed Control: Set the shutter speed. This is enabled only when both the Anti-Flicker and Slow Shutter settings are set to Off.
 - Auto: Select to adjust the shutter speed automatically. The system identifies the light conditions
 of where the camera is installed and sets the proper speed for the conditions.
 - Manual: Select to adjust the shutter speed manually. Adjust the lowest and highest speed by using slider bars based on the light conditions of where the camera is installed.

NOTE: Selecting *Auto* for some functions sets up the functions automatically based on the conditions.

Day & Night: Click the tab to set up day & night settings.



- B&W Mode: When in the black and white mode, images are displayed in black and white and are clearer in low light conditions.
 - Off, On: Disables or enables the black and white mode.
 - Auto: Disables or enables the black and white mode automatically based on the conditions where the camera is installed.
 - Schedule: Sets up the black and white mode schedule. The black and white mode is enabled during the date and time scheduled as Nighttime and disabled during the rest. Set up or release Nighttime by selecting On or Off in the bottom and clicking or dragging the date and time area in the table. Selecting On or Off and clicking the Select All/Clear All button sets up or releases Nighttime for all dates and time.

Miscellaneous: Click the tab to set up other settings.

Remote Setup	x
Remote Setup	VIDEO / CAMERA Image Sensor White Balance Exposure Day & Night Miscelaneous Video Output NTSC Smart IR I00%
	OK Cancel Apply

- Video Output: Select the video signal for video output.
- Smart IR: Set the brightness of the IR LED.
 - Auto: Select to adjust the brightness automatically. The sensor in the middle of IR LEDs detects illumination.
 - $0\% \sim 100\%$: Set the brightness manually. The higher the value is set, the brighter it is.

Streaming

Remote Setup				×
▼ Quick Setup ▼ System	VIDEO / STREAMI	NG		
▼ Network ▼ Video		Primary	Secondary	Tertiary
Camera	Compression	H.264 •	-	
Webcasting	Resolution	1280X720 -	Ţ	Ţ
Privacy Masking	Quality	Standard 👻	Ţ	Ţ
 Event Action Event 	Bitrate Control	CBR 👻	Ţ	
	Frame Rate	30.00 ips 👻	-	
			Default Record Stream	Primary -
	Multi-View Streaming	1		
			Secondary	Tertiary
	Resolution	Setup	Off	Off
			ок с	ancel Apply

 Primary, Secondary, Tertiary: The camera supports multistream video (priority: Primary > Secondary > Tertiary). Set whether to enable or disable the streams. Some of the settings may change depending on the settings of streams of higher priority and the tertiary stream may not be available (see the table below).

Primary		Secondary		Tertiary	
Resolution	ips	Resolution	ips	Resolution	ips
1920x1080	30	704x480	30	-	-

- · Compression: Set up the compression of images for streaming.
- Resolution: Set the resolution of images for streaming. The resolution of the current stream cannot exceed that of a stream of higher priority.
- · Quality: Set up the quality of images for streaming.
- Bitrate Control: Set up the bitrate control mode for H.264 compression.
 - CBR (Constant Bitrate): Maintains the current bitrate regardless of the amount of motion.
 - VBR (Variable Bitrate): Adjusts the bitrate dynamically based on the amount of motion. The less motion there is, the less network congestion and the less storage consumption. The quality may not be as good when compared to the CBR mode.
- Frame Rate: Set the frame rate of images for streaming. The frame rate of the current stream cannot exceed that of a stream of higher priority if the resolution of the current stream is the same as that of the stream of higher priority.
- Default Record Stream: Select a stream to use for recording. If a recording stream is set up in a remote program, this setting may not be applied.
- Multi-View Streaming: It allows you to set up a streaming area to stream specific area of video (not supported for the primary stream). Click the Setup button and set up the streaming area.

Hulti-View Streaming - Hulti-	View Setup x
Secondary Tertiary	
I On	
Resolution Limit	1280X720
Resolution	
Current Resolution	Off
	OK Cancel

Checking the On box allows you to set up the streaming area.

- Resolution Limit: Displays the available maximum resolution of the streaming area.
- Resolution: Sets the streaming area. The streaming area is displayed in red on the screen above and you can adjust the area resolution or moves the area location by using the mouse drag and drop.
- Current Resolution: Displays the current resolution of the streaming area.

NOTE: Simultaneous connections to the camera might cause the frame rate to decrease due to the network bandwidth overload.

Webcasting

▼ System	VIDEO / WEBCASTING "Webcasting is used to provide video streaming service for those with dedicated web sites for customer service. "To provide this service, insert the HTML Code that is generated below in your web page or your web server. For more information, contact your web server administrator.			
Network Video Camera Streaming Webcasting MAT Privary Masking				
Event Action	HTML Code			
	Stream Primary Secondary Tertiary			

The camera can stream live video from the camera to a website.

- HTML Code: Copy the HTML Code that is displayed on the screen and paste it in your web
 page code.
- Stream: Select a stream to use for webcasting. Only the streams in use are available.

NOTE: To use the webcasting service, you must check the *Allow Anonymous Login* option during 3.2 System – User/Group setup.

MAT

▼ Quick Setup	VTDEO / MAT	
▼ System ▼ Network	MAT	
▼ Video		
Camera		
Webcasting	Sensitivity 3	
MAT		
Privacy Masking Event Action Fvent	Inactivity Period 10 sec.	
Lione	Frame Rate Primary 5.00 ips -	
	Secondary -	
	Tertiary 🚽	
	"Motion Adaptive Transmission reduces bandwidth overload and saves storage capacity by reducing the frame rate of the wideo during periods of nactivity. The user can select the period of sustained nactivity which triggers this function by adjusting "nactivity period". The frame rate returns to normal frame rate immediately upon detecting any motion.	

Check the MAT box to use the MAT (Motion Adaptive Transmission) function for video streaming and recording.

- Sensitivity: Set the motion sensitivity. The higher the number is, the more sensitive it is.
- Inactivity Period: Set the inactivity period. The camera will transmit or record images in Frame Rate set below until any change is detected after the inactivity period when no motion is detected during the preset inactivity period.
- Frame Rate: Select the frame rate to be applied when no motion is detected. This frame rate
 may change when the slow shutter mode is enabled in the Video Camera menu. The selected
 frame rate will be applied until any motion is detected after the inactivity period and will return
 to the normal frame rate set during the Stream setup immediately upon detecting any motion.

NOTE: The MAT (Motion Adaptive Transmission) function allows you to reduce bandwidth overload and to save storage capacity by reducing the frame rate when no motion is detected. The camera considers that no motion is detected when no change is detected between two consecutive images based on the sensitivity setting.

Privacy Masking

Remote Setup	x
▼ Quick Setup ▼ System	VIDEO / PRIVACY MASKING
▼ Network ▼ Vide Greaming Webcasting MAT Pricecy Masking ► Event Acton ► Event	Privacy Masking No. Name Privacy Masking Setup
	OK Cancel Apply

Check the Privacy Masking box to restrict monitoring of specific areas for privacy reasons. The privacy masking areas are displayed in the black color during monitoring.

• Privacy Masking Setup: Set up privacy masking areas (max. 16).

Privacy Masking - Privacy Masking Setup		x
	No. Name	
(4)	Delete	
OK		

- (Select) or (Clear): Click to select or clear a block for privacy masking area. You can select or clear the several blocks of an area using the mouse dragging.
- No. / Name: Displays a list of the preset privacy masking areas. The number indicates the number displayed in the privacy masking area. Clicking the empty space beside the number in the list allows you set up a name for the area. Clicking the Delete button deletes the area.

Audio

Remote Setup	You can set up audio in and out.
▼ Quick Setup ▼ System ▼ Network ▼ Video	NOTE: This is supported for the audio supported model only.
Audio Input/Output	
Input/Output	

Input/Output

Remote Setup		×
▼ Quick Setup ▼ System	AUDIO / INPUT/OUTPU	π
▼ Network ▼ Video ▼ Audio	Audio Code	G.711 u-Law
Input/Output Event Action Event	Volum	e
	Output	
	Volum	e
		OK Cancel Apply

- Audio CODEC: Select an audio codec.
- Input: Check the box to enable audio in and adjust the volume.
- Output: Check the box to enable audio out and adjust the volume.

NOTE: The camera does not have amplified audio output, so you need to use a speaker with an amplifier.

Event Action

ſ	Remote Setup	You can set up event actions to be taken when the camera detects events.
	▼ Quick Setup ▼ System ▼ Network ▼ Video	
	Event Action Alarm Out Email Remote Callback FTP Upload	

Alarm Out

emote Setup			x
▼ Quick Setup ▼ System	EVENT ACTION / ALARM OUT		
▼ Network	Alarm Out		
▼ Event Action	Dwell Time 5 sec.	¥	
Email	Schedule 00:00	~ 24:00	
Remote Caliback FTP Upload			
▶ Event			
		OK Cancel App	oly

Check the Alarm Out box to activate alarm out. The alarm out is associated with PIR sensor (Passive Infrared).

- Dwell Time: Select the alarm-out dwell time. An alarm out is activated for the preset dwell time after detecting an event.
- Schedule: Set up the period to enable alarm out. An alarm out can be activated only during this period.

NOTE: This is supported for the alarm supported model only. The PIR (Passive Infrared) sensor in the upper middle of IR LEDs detects motions by detecting infrared radiation changes at night or under low lighting conditions. The motion detection by the PIR sensor activates alarm out according to the settings of Alarm Out, and the white LEDs which are at the left and right middle of IR LEDs are lit while the alarm out is activated.

Email

Remote Setup			x
▼ Quick Setup ▼ System	EVENT ACTION / EMAIL]
▼ Network	Email		
▼ Video ▼ Event Action Alarm Out	SMTP Server]
Email	Port	25	
Remote Callback FTP Upload		Use SSL/TLS	
▶ Event	Authorities	TD	
	Authentication		
		Password	
	Sender		
	Recipient(s)		Add
	Recipient List		Remove
		OK Can	cel Apply

Check the Email box to send an email.

- SMTP Server, Port: Enter the IP address or domain name and port number of the SMTP server attained from your network administrator. You can use the domain name instead of the IP address if you set up the DNS server when setting up the network. Select Use SSL/TLS if the SMTP server requires SSL (Secure Sockets Layer) authentication.
- Authentication: Enter the ID and password if the SMTP server requires user authentication.
- Sender, Recipient: Enter the sender's and recipients' (max. 10) email address. An email address
 must include the "@" character to be a valid address.

Remote Callback

Remote Setup					x
▼ Quick Setup ▼ System	EVENT ACTION / R	EMOTE CALL	BACK		
▼ Network ▼ Video	Remote Calback				
▼ Event Action Alarm Out	IP Ad	ldress		Port (8000~12000)	
Remote Callback	1			8201	
FTP Upload	2			8201	
- Livene	3			8201	
	4			8201	
	5			8201	
	Retry 5		-		
				OK Cancel Apple	
				OK Caricel Apply	

Check the Remote Callback box to send a callback message to remote systems (Not supported for the WebGuard program).

- IP Address, Port: Enter the IP addresses and port numbers of the remote systems to send a message.
- Retry: Select the number of times to try sending a message if it fails to send.

Audio Alarm



Check the Audio Alarm box to sound by playing back an audio file.

List: Displays the audio file to be played back. You can add or delete an audio file (.wav) (16 bits/16 KHz encoded file only) by clicking the Add or Remove button. Selecting an audio file in the list and clicking the Play or Stop button allows you to test the sound by playing back the selected audio file.

NOTE: This is supported for the audio supported model only.

FTP Upload

System	EVENT ACTION / FTP UPLOAD
' Network	FTP Upload
' Video ' Event Action Alarm Out	FTP Server Add Remove
Email Remote Callback	Secondary Server Add Remove
Event	Settings Upload Type Always
	Upload Frequency 1 mage(s) per Second *
	Resolution 704X480 ~ Quality Standard ~
	Base File Name Image
	 @ Add Date/Time Suffix Add Sequence Number Suffix - max. Count 1000 Overwrite

Check the FTP Upload box to upload event detected images in JPEG file format to an ftp server.

• FTP Server: Click the Add button to register an ftp server. Clicking the Remove button deletes the registered ftp server. When an event is detected, the event detected images will be uploaded in JPEG file format to the ftp server registered as a primary server. If images fail to be uploaded to the primary server, they are uploaded to the secondary server until uploading to the secondary server fails.

Add FTP Server	X
FTP Server	
Upload Path	
Port	21
User ID	
Password	
Test	OK Cancel

- FTP Server: Enter the IP address (or domain name) of the ftp server.
- Upload Path: Enter the folder path to upload files. Special characters (\ # * | : " <> ?) cannot be used in the folder path.
- Port: Enter the port number of the ftp server.
- User ID, Password: Enter the user ID and password for the connection to the ftp server.

Click the **Test** button to check the connection to the ftp server with the information set above. When the test succeeds, click the OK button.

- · Image: Set up the image and upload settings for ftp upload.
 - Upload Type: Select the upload type. When the upload type is set to Always, images will be uploaded to the ftp server according to the settings below regardless of the event detection. When the upload type is set to Event, images will be uploaded to the ftp server according to the settings below when events are detected.

- Upload Frequency: Displays only when the upload type is set to Always. Set up the upload rate, and the preset number of images will be uploaded to the ftp server during the preset time.
- Upload 1 image per: Displays only when the upload type is set to Event. Set up the upload rate. Selecting Upload for allows you to set how long after an event is detected that event detected images will be uploaded and at what upload rate. Selecting Upload while event status is active uploads event detected images at the upload rate while an event is detected.
- Resolution, Quality: Select the resolution and quality of the images to be uploaded to the ftp server. The available resolution may change depending on the resolution setting in the Video – Streaming menu.
- Base File Name: Enter the common file name of the images to be uploaded to the ftp server and select the option to distinguish each image file. Special characters (\ / # * | : " <> ?) cannot be used in the file name. Selecting Add Date/Time Suffix adds the event detection date and time to each image file name. Selecting Add Sequence Number Suffix max. Count adds the sequence number according to the event detection order to each image file name. Selecting overwrites the previous image file. The event type is added to the image file name automatically.

NOTES:

- The video resolution setting for FTP upload may change unwillingly depending on the resolution setting in the Video – Streaming menu.
- Consider the performance of the FTP server when setting up the upload rate during the Upload Frequency or Upload 1 image per setting. The FTP upload might fail if the upload rate exceeds the performance of the FTP server.

Event			
Remote Setup	You can set up event detection function.		
Quick Setup System Very System Very System Very System Very System Very System Very System System Event			

Motion Detection

Remote Setup	x
▼ Quick Setup	EVENT / MOTION DETECTION
▼ Network	Motion Detection
▼ Video ▼ Event Action	Sensitivity Daytime 3 Nighttime 3
▼ Event Motion Detection	Minimum Blocks for Dete Davtime 1 🚔 Nighttime 1 🚔
Trip-Zone Tampering	Motion Zone Setup 330 Block(s)
System Event	Motion Ignoring Interval 2 sec.
	Daytime 09:00 🚔 ~ 18:00
	Event Action Aarm Out Send Email Image Attachment Remote calback 1 2 3 4 5 FTP Upload Move PTZ to Preset 1 * Event Action should be set for normal operation.
	OK Cancel Apply

Check the **Motion Detection** box to set up a motion detection event. When the camera detects a motion in a configured motion detection zone, it considers the motion as an event.

- Sensitivity: Set the motion sensitivity for daytime and nighttime independently. The higher the number is, the more sensitive it is.
- Minimum Blocks for Detection: Adjust the minimum number of detection blocks that must be activated in order to be considered as a motion event for daytime and nighttime independently.
- Motion Zone: Click the Setup... button and a motion detection zone setup screen appears. Define
 the area (max. four) of the image that you want to set up a motion detection zone by using the
 motion detection zone icons.
 - (Select) or (Clear): Click to select or clear a block for motion detection. You can select or clear the several blocks of an area using the mouse dragging.
 - 🖉 or 🆄 (One or All block): Click to select or clear one or all blocks at a time.
 - 🛄 (Area): Click to select or clear several blocks of an area.
- Motion Ignoring Interval: Select the motion ignoring dwell time from the drop-down list. The camera will not log or send notifications of motion events occurring during the preset interval after a motion is detected. You can control excessive event logging and remote notifications of motion detection events by adjusting the motion ignoring dwell intervals.
- Daytime: Set up the daytime range. The camera will consider the remaining time range as the nighttime.
- Event Action: Check the box for each action the camera is to take when it detects a motion detection event.
 - Alarm Out: Check the box to trigger an alarm-output signal (alarm supported model only).

- Send Email: Check the box to send an email. Selecting Image Attachment attaches an event detected image file (.JPG) to the email.
- Remote Callback: Check the box and select the remote systems to send a message (Not supported for the WebGuard program).
- Audio Alarm: Check the box and select the audio file (.wav) to sound (audio supported model only).
- FTP Upload: Check the box to upload images to an ftp server.
- Move PTZ to: Select the desired preset number to move to. You must set preset locations using remote programs.

NOTES:

- You must properly configure the settings related to each event action when setting them up to enable event actions. Refer to the *Event Action* setup.
- · This setting does not affect the motion detection by the PIR sensor (alarm supported model).

▼ System	EVENT / TRIP-ZONE		
 ▼ Network ▼ Video ♥ Event Action ♥ Event Motion Detection Trip-Zone Tampering System Event 	Trip-Zone Sensitivity Trip-Zone Motion Ignoring Interval Davtime	Daytime 3 v Setup 2 sec. v 09:00 ~ ~	Nighttime 3 v 0 Block(s)
	Event Action Alarm Out Send Email Remote Caliback FTP Upload Move PTZ to	Image Attachment	5
	*Event Action should be set	for normal operation.	

Check the Trip-Zone box to set up a trip-zone event. When the camera detects a moving to or from the preset trip-zone, it considers the moving as an event.

- Sensitivity: Set the moving sensitivity for daytime and nighttime independently. The higher the number is, the more sensitive it is.
- Trip-Zone: Click the Setup... button and a trip-zone setup screen appears. Define the area (max. four) of the image that you want to set up a trip-zone by using the trip-zone icons.
 - (Select) or (Select) or (Clear): Click to select or clear a block for motion detection. You can select or clear the several blocks of an area using the mouse dragging.

Trip-Zone

- 💋 or 🏠 (One or All block): Click to select or clear one or all blocks at a time.
- 🛄 (Area): Click to select or clear several blocks of an area.
- Trip Direction: Select the direction of the moving to be considered as an event. Selecting In considers a moving as an event when the moving to the area is detected, and selecting Out when the moving from the area is detected.
- Motion Ignoring Interval: Select the motion ignoring dwell time from the drop-down list. The camera will not log or send notifications of motion events occurring during the preset interval after a motion is detected. You can control excessive event logging and remote notifications of motion detection events by adjusting the motion ignoring dwell intervals.
- Daytime: Set up the daytime range. The camera will consider the remaining time range as the nighttime.
- Event Action: Check the box for each action the camera is to take when it detects a trip-zone event.
 Alarm Out: Check the box to trigger an alarm-output signal (alarm supported model only).
 - Send Email: Check the box to send an email. Selecting Image Attachment attaches an event detected image file (.JPG) to the email.
 - Remote Callback: Check the box and select the remote systems to send a message (Not supported for the WebGuard program).
 - Audio Alarm: Check the box and select the audio file (.wav) to sound (audio supported model only).
 - FTP Upload: Check the box to upload images to an ftp server.
 - Move PTZ to: Select the desired preset number to move to. You must set preset locations using remote programs.

NOTE: You must properly configure the settings related to each event action when setting them up to enable event actions. Refer to the *Event Action* setup.

Audio Detection

Ø Quick Setup	EVENT / AUDIO DETECTION
Video	Audio Detection
F Event Action	Sensitivity 3
Motion Detection Trip-Zone	Activation Time 1.0 sec.
Audio Detection Tampering	Use Ignoring Time 18:00 × 09:00 ×
System Event	Audio Ignore Interval 2 sec
	Event Action
	Remote Calback
	FTP Upload
	*Event Action should be set for normal operation.

Check the Audio Detection box to set up an audio detection event. When the camera detects audio during the preset activation time, it considers it as an event.

- Sensitivity: Set the audio sensitivity. The higher the number is, the more sensitive it is.
- Activation Time: Adjust the duration that audio should last to be considered as an audio-in event. The camera will not consider any audio as an audio-in event if it lasts less than the preset time.
- Use Ignoring Time: Set up the event ignoring time. The camera will not consider audio that occurs during the preset time span as an event.
- Audio Ignoring Interval: Select the audio ignoring dwell time from the drop-down list. The camera will not log or send notifications of audio events occurring during the preset interval after an audio is detected. You can control excessive event logging and remote notifications of audio detection events by adjusting the audio ignoring dwell intervals.
- Event Action: Check the box for each action the camera is to take when it detects an audio-in event.
 - Send Email: Check the box to send an email. Selecting Image Attachment attaches an event detected image file (.JPG) to the email.
 - Remote Callback: Check the box and select the remote systems to send a message (Not supported for the WebGuard program).
 - FTP Upload: Check the box to upload images to an ftp server.

NOTES:

- · This is supported for the audio supported model only.
- You must properly configure the settings related to each event action when setting them up to enable event actions. Refer to the *Event Action* setup.

Tampering

/ Quick Secup // System	EVENT / TAMPERING
▼ Network ▼ Network ▼ Video ▼ Event Action ▼ Event Motion Detection Trip-Zone Tampering System Event	Senst/vty Senst/vty 3 Activation Time 18:00 18:0 18:0
	Event Action Arm Out Send Email Image Attachment Remote Calback 1 2 3 4 5 FTP Upload
	*Event Action should be set for normal operation.

Check the **Tampering** box to set up a tampering detection event. When a radical change is detected in video (for example, the camera is moved, lens is blocked, etc), it considers it as an event.

- Sensitivity: Set the tampering sensitivity. The higher the number is, the more sensitive it is.
- Activation Time: Adjust the duration that tampering should last to be considered as a tampering event. The camera will not consider any tampering as a tampering event if it lasts less than the preset time.
- Use Ignoring Time: Set up the event ignoring time. The camera will not consider tampering that occurs during the preset time span as an event.
- Event Action: Check the box for each action the camera is to take when it detects a tampering.
 - Alarm Out: Check the box to trigger an alarm-output signal (alarm supported model only).
 - Send Email: Check the box to send an email. Selecting Image Attachment attaches an event detected image file (.JPG) to the email.
 - Remote Callback: Check the box and select the remote systems to send a message (Not supported for the WebGuard program).
 - Audio Alarm: Check the box and select the audio file (.wav) to sound (audio supported model only).
 - FTP Upload: Check the box to upload images to an ftp server.
 - Move PTZ to: Select the desired preset number to move to. You must set preset locations using remote programs.

NOTE: You must properly configure the settings related to each event action when setting them up to enable event actions. Refer to the *Event Action* setup.

System Event

Remote Setup	X
▼ Quick Setup ▼ System	EVENT / SYSTEM EVENT
▼ Network ▼ Video	System Alive
▼ Event Action ▼ Event Motion Detection	Interval 1 hr
Trip-Zone Tampering	Send Email Remote Callback 1 2 3 4 5
System Event	
	OK Cancel Apply

Check the **System Event** box to set up a system event. The camera checks and reports the system status.

- System Alive: Check the box to check the system operation, and select the check interval.
 - Send Email: Check the box to send an email when the system is operating.
 - Remote Callback: Check the box and select the remote systems to send a message when the system is operating (Not supported for the WebGuard program).

NOTE: You must properly configure the *Email* and *Remote Callback* settings when setting them up to send an email or a message. Refer to the *Event Action* setup.

Chapter 4 — WebGuard

You can monitor live video images from the camera on the web browser by using the WebGuard program.

Computer system requirements for using WebGuard are:

- Operating System: Microsoft[®] Windows[®] XP (Service Pack 3), Microsoft[®] Windows[®] Vista (Service Pack 1), Microsoft[®] Windows[®] 7 (Home Premium, Professional, Ultimate) or Microsoft[®] Windows[®] 8 (Pro, Enterprise)
- CPU: Intel Pentium III (Celeron) 600MHz or faster (Core 2 Duo E4600 recommended)
- RAM: 128MB or more (2GB recommended)
- VGA: 8MB or more (128MB recommended) (1024x768, 24bpp or higher)
- Internet Explorer: Version 6.0 or later 32-bit

Start Internet Explorer on your local PC. You can run the WebGuard program by entering the following information in the address field.

- "http://IP address:port number"
 (The camera IP address and the WebGuard port number set during the port setup)
- Or, "http://DVRNS server address/camera name" (The DVRNS server address and the camera name registered on the DVRNS server)

NOTES:

- Enter https instead of http if you have checked the Use HTTPS box during the WebGuard port number setup. Click Continue to this website (not recommended) when the security certificate warning page is displayed. When the WebGuard login page is not displayed, check Internet option settings as follows:
 - Go to Tools, then Internet Options, and then the Security tab → Click the Custom level... button
 → Set the setting of Reset custom settings to Medium-high (default) or Medium.
 - Go to Tools, then Internet Options, and then the Advanced tab → Check the Use TLS 1.0 box under the Security option.
- You do not need to enter the WebGuard port number if the WebGuard port number is set to 80 (443 when entering https) when running the WebGuard program by entering the IP address and port number.

nigol draves	
10	
SSWORD	[LOGIN] [EXIT]

Enter your ID and PASSWORD and click the [LOGIN] button.

NOTES:

- WebGuard only works with Microsoft Internet Explorer and will NOT work with other web browsers.
- WebGuard does not work with Microsoft® Windows® 8 metro UI.

NOTES:

- There might be a problem with the bottom of the WebGuard page being cropped caused by the address or status bars. In this situation, it is recommended that websites open windows without address or status bars by changing Internet setting. (Go to *Tools*, and *Internet Options*, and then the *Security* tab → Click the Custom level... button → Select *Enable* for the *Allow websites to open windows without address or status bars* option.)
- When running WebGuard in the Microsoft[®] Windows[®] Vista or later operating system, it is
 recommended that you start Internet Explorer with elevated administrator permissions. Click
 the right mouse button on the Internet Explorer icon and select the *Run as administrator* option
 from the context menu. Otherwise, some functions of WebGuard might be limited.
- There might be a problem with screen display or screen update caused by low image transmission speed when using the Microsoft[®] Windows[®] Vista or later operating system. In this situation, it is recommended that you disable the Auto Tuning capability of your computer. Run the *Command Prompt* with elevated administrator permissions (Go to the *Start* Menu, and *Accessories*, and then *Command Prompt* → Click the right mouse button and select the *Run as administrator* option). Then enter "netsh int tcp set global autotuninglevel=disable" and press the enter key. Restart your computer to apply the changes. If you want to enable the Auto Tuning capability again, enter "netsh int tcp set global autotuninglevel=normal" after running the Command Prompt with elevated administrator permissions. Restart your computer to apply the changes.
- When running the updated WebGuard for the first time, Internet Explorer might occasionally load the information from the previous version. In this case, delete the temporary Internet files by selecting *Tools* → *Internet Options* → *General* tab, and then run WebGuard again.
- You will need to get the appropriate IP address for the camera you want to connect to and the WebGuard port number from your network administrator.



① Log Out: Click Stole to log out of the WebGuard program.

- ② Version: Position the mouse pointer on the WebWatch logo to see the WebGuard program version.
- ③ Information: The Information window displays the login information of WebGuard.
- ④ Full Display: Clicking the button displays the video in full screen. Pressing the Esc button on a keyboard returns to the previous screen.
- (5) Camera Button: The button displays the camera number.
- Image Adjustment: Click 2 to adjust the brightness, contrast, saturation and hue of monitored image.
- ⑦ Zoom Control: Click Stochastic to control remotely.
- (alarm-Out Control: Click alarm out device remotely (alarm supported model only).



- Setup: Click M to set up the image drawing mode and OSD display. You can adjust the display speed by changing the image drawing mode, and select OSD information to be displayed on the screen.
- 1 Save Image: Click 📓 to save the current image as a bitmap or JPEG file format.
- 1 Remote Setup: Click at to change the settings of the camera by using the Remote Setup screen.
- ② Event Status Window: The event status window at the bottom displays a list of events that were detected in the camera.
 - Motion Detection

🚰 Trip-Zone 👘 Tampering

③ Screen Popup Menu: Clicking the right mouse button on the screen displays the screen popup menu.



- Change Camera Title: Select to change the camera title.
- Enable Audio: Select to enable audio communication with the site which the camera is installed and the audio control set panel appears (audio supported model only). Click the button to send audio to the site which the camera is installed and speak into the microphone. Click the button to monitor live audio from the site which the camera is installed through the attached speaker. Clicking both the and buttons allows two-way communication. Clicking the × button disables audio communication.
- Aspect Ratio: Select to change the image aspect ratio displayed on the screen and the option menu appears. Selecting Fit to Screen displays images by fitting them to the screen size. Selecting Original Ratio displays images by fitting them to the screen size while maintaining their original ratio. Selecting Half Size (x0.5) to Quadruple Size (x4) displays the images at the selected image size.
- Multistream: Select to choose the desired stream if the camera is in multistream mode.

 Anti-Aliasing Screen: Select to enhance image display quality by eliminating stair stepping (aliasing) effects in the enlarged image.

NOTES:

- · The image adjustment for the monitoring screen works only in the pause mode.
- A camera name change in the Web Watch mode does not affect the camera name set up on the camera. Leaving the Camera Title blank causes the camera name set up on the camera to display.
- Aspect Ratio Half Size (x0.5) to Aspect Ratio to Quadruple Size (x4) in the Screen Popup Menu will be enabled when the selected camera screen can display images in those sizes.

Appendix

Map of Screens (Remote Setup)



Alarm Supported Model



Audio Supported Model



Troubleshooting

Problem	Possible Solution
No Power	Check power cord connections.Confirm that there is power at the outlet.
PoE switch is not recognized.	Check the ground status of the PoE switch and the connected input/ output devices to the camera. If they are not grounded, use them after grounding.
No Live Video	Confirm that the camera has power.Check network connections on your PC and a camera.
Live video is not clear.	 Check if there is dust or dirt on the lens and clean the lens with a clean cotton cloth or brush. Check that the focus is set correctly. Check that the lighting and adjust the camera position or angle if bright light is shining directly into the lens.
Video color appears incorrect.	Check that the white balance setting for the camera.
Video flickers.	Check to see if the camera points directly at the sun or a fluorescent light and adjust the camera's direction.
Connection to the INIT program is not available because of wrong ID and password.	Ask your dealer or distributor.
The WebGuard program is not available.	If you cannot launch the login page of the WebGuard program, check Microsoft Internet Explorer's version. WebGuard might not run properly in versions earlier than 6.0.

Specifications

LENS		
Lens Type	Motorized vari-focal lens	
Focal Length	F1.2, f=3.0 mm to 9.0 mm	
Angle View	H: 120.0° (Wide) to 37.0° (Tele)	
	V: 62.0° (Wide) to 20.0° (Tele)	
Lens Iris Control	DC auto iris	

CAMERA	
Image Sensor	1/2.8" CMOS
Minimum Illumination	IR LED Off: 0.5 Lux, IR LED On: 0 Lux
Scanning Mode	Progressive scan
SNR	31.2 dB or higher
Dynamic Range (Digital WDR)	74.7 dB or higher
Electronic Shutter	Auto
IR LED	LED x 42 (850 nm) (LED x 24 for alarm supported model)
White LED (alarm supported model only)	LED x 6
Illumination Sensor	Yes
IR Working Distance	30 m (outdoor)

VIDEO	
Compression Algorithm	H.264, M-JPEG (Four levels)
Compression Resolution	352x240, 704x480, 1280x720, 1920x1080
Bitrate Control	H.264 –CBR / VBR (up to 12 Mbps)
Maximum Frame Rate (images per second)	30 ips @ 1920x1080 + 4 ips @ 1920x1080
Multistream	Primary, Secondary, Tertiary

AUDIO ⁱ		
Compression Algorithm	G.726 (16KHz), G.711 µ – Law (8KHz)	

ⁱ It is supported for audio supported model only.

Specifications are subject to change without notice.

INPUTS/OUTPUTS		
Video Output ⁱ	1 Composite, 1 Vp-p	
Audio Input ⁱⁱ	1 line in	
Audio Output ⁱⁱ	1 line out	
Alarm Output ⁱⁱⁱ	1 relay out, NO only, 0.3A @ 125 VAC, 1A @ 30 VDC	
Network Connectivity	10/100 Mbps Ethernet	

ⁱ It is intended for video preview while adjusting the camera.
 ⁱⁱ It is supported for audio supported model only.
 ⁱⁱⁱ It is supported for alarm supported model only.

CONNECTORS		
Video Output ⁱ	BNC	
Audio In/Out ⁱⁱ	Φ 3.5 audio jack	
Alarm Out ⁱⁱⁱ	Wires	
Ethernet Port	RJ-45	

ⁱ It is intended for video preview while adjusting the camera.
 ⁱⁱ It is supported for audio supported model only.
 ⁱⁱⁱ It is supported for alarm supported model only.

GENERAL		
Dimensions (Ø x H)	12.70" x 3.56 x 3.56" (322.7mm x 90.5mm x 90.5mm)	
Shipping Dimensions (W x H x D)	14.0 " x 5.2" x8.6" (355mm x 133mm x 219mm)	
Unit Weight	2.6 lbs. (1.17kg)	
Shipping Weight	4.3 lbs. (1.94kg)	
Operating Temperature ⁱ	14°F to 122°F (-10°C to 50°C) [Boot up temperature: 32°F to 122°F (0°C to 50°C)] [-4°F to 122°F (-20°C to 50°C) when the heater is operating]	
Operating Humidity	0% to 90%	
Power Supply	12 VDC, PoE (Power over Ethernet) (IEEE 802.3af, Class 3)	
Power Consumption ⁱ	Max. 5.16W Alarm supported model: Max. 7.56W Audio supported model: Max. 5.16W (Max. 10.8W when the heater is operating)	
Approval	FCC, CE, IP66	

ⁱ Heater operates only when the 12 VDC power is applied.

Specifications are subject to change without notice.

Index

Α

Admin/Watch/Record Port	18
В	
Bitrate Control	28

С

Camera Name	.12,	17
Compression	.28,	30

D

4
8
7
7

F

I

IP Filtering	21

М

MAT	30

Ν Network Bandwidth Limit 20 ο Q R RTSP Port......18 s т Time Sync.....14 U Use HTTPS......18 Use UPnP......19 User/Group.....14 w

WebGuard Port18