

IPC_1601-B0013P05D1606

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_1601-B0013P05D1606 Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_1601-B0013P05D1606.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

- 1 Version Information..... 3**
 - 1.1 Version Number3
 - 1.2 Release History3
 - 1.3 Version Mapping Table.....3
- 2 Feature Change Description 3**
- 3 Version Upgrade Procedure 3**
 - 3.1 Upgrade Overview3
 - 3.1.1 Version Upgrade Environment.....3
 - 3.1.2 Version Upgrade Modes.....4
 - 3.2 Upgrade Procedure4
 - 3.2.1 Upgrade Through the Web4

1 Version Information

1.1 Version Number

IPC_1601-B0013P05D1606

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_1601-B0013P05D1606	NA	2016-8-18	initial release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR304-16EP	B3118P20
NVR-B200-R8@64	B3118P20

Table 3 Product models and corresponding versions

Product Series	IPC Series
Series	IPC868ER
Models	IPC868ER series: IPC868ER-VF18
Target file name	IPC_1601-B0013P05D1606.zip

2 Feature Change Description

None.


3 Version Upgrade Procedure

3.1 Upgrade Overview

3.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

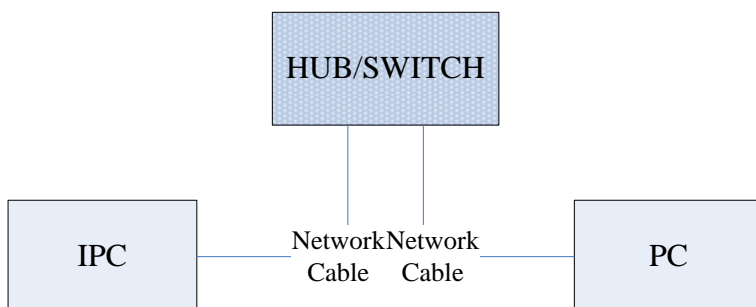

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

3.1.2 Version Upgrade Modes

You can upgrade through the Web.

3.2 Upgrade Procedure

3.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade	
Upgrade File	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upgrade"/> <input type="checkbox"/> Upgrade Boot Program
Device Restart	
<input type="button" value="Restart"/>	Restart the device.
<input type="checkbox"/> Enable Auto Restart	<input type="text" value="Each Day"/> <input type="text" value="02:00:00"/> <input type="button" value="OK"/>
Config Management	
<input type="button" value="Default"/>	Keep current network and user settings and restore other settings to defaults.
Importing	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Import"/>
Exporting	<input type="text" value="C:\Users\Desktop\lftp"/> <input type="button" value="Browse..."/> <input type="button" value="Export"/>
Diagnosis Info	
Storage Path	<input type="text" value="C:\Users\MyLocalFiles\Debug\"/> <input type="button" value="Browse..."/> <input type="button" value="Download"/>

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_6501EI_6621EI-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2016, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice. The information in this manual is subject to change without notice.