# IPC\_C2301-B0002P10D1904 Release Notes

Zhejiang Uniview Technologies Co., Ltd

# IPC\_C2301-B0002P10D1904

## **Release Notes**

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for

IPC\_C2301-B0002P10D1904.

#### Acronym:

Acronym	Full Name
IPC	IP Camera

# Content

1 Version Information	3
1.1 Version Number ·····	3
1.2 Release History ·····	3
1.3 Version Mapping Table·····	3
2 Feature Change Description	3
3 Version Upgrade Description · · · · · · · · · · · · · · · · · · ·	3
4 Version Upgrade Procedure ·····	3
4.1 Upgrade Overview·····	3
4.1.1 Version Upgrade Environment·····	4
4.1.2 Version Upgrade Modes·····	4
4.2 Upgrade Procedure ·····	4
4.2.1 Upgrade Through the Web ······	4

## 1 Version Information

#### 1.1 Version Number

IPC\_C2301-B0002P10D1904

## 1.2 Release History

#### Table1Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_C2301-B0002P10D1904	IPC_C2301-B0001P73D1809	2019-08-31	improved release

#### Table2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR	B3401.17.14.190801/ B3111.27.25.190621/ B3401.17.13.190731

## 1.3 Version Mapping Table

#### Table3Product models and corresponding versions

Product Series	IPC Series	
Series	IPC6412LR	
	IPC6412LR series:IPC6412LR-X5P	
Target file name	IPC_C2301-B0002P10D1904.zip	

# 2 Feature Change Description

Improved release.

# 3 Version Upgrade Description

None.


## 4 Version Upgrade Procedure

## 4.1 Upgrade Overview

#### 4.1.1 Version Upgrade Environment

#### 1. Network Architecture for Upgrade

Figure1Network architecture

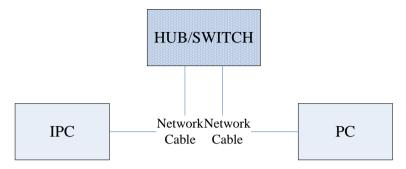

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

#### 4.1.2 Version Upgrade Modes

You can upgrade through the Web.

### 4.2 Upgrade Procedure

#### 4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click Setup>Maintenance>Device Maintenance. The Device Maintenance page is displayed.



- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC\_D1202-XXXXX.zip, and then click **Open.**
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.

(5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2019, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without priorwritten consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.