

DIPC-B1209.6.13.220512

Release Notes

Zhejiang Uniview Technologies Co., Ltd

DIPC-B1209.6.13.220512

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for DIPC-B1209.6.13.220512.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information	3
1.1 Version Number	3
1.2 Release History	3
1.3 Version Mapping Table	3
2 Feature Change Description	3
3 Version Upgrade Description	5
4 Version Upgrade Procedure	5
4.1 Upgrade Overview	5
4.1.1 Version Upgrade Environment	6
4.1.2 Version Upgrade Modes	6
4.2 Upgrade Procedure	6
4.2.1 Upgrade Through the Web	6
5 Version Upgrade Disclaimer	7

1 Version Information

1.1 Version Number

DIPC-B1209.6.13.220512

1.2 Release History

Table1 Released versions

Version No.	Basic Version No.	Released On	Remarks
DIPC-B1209.6.13.220512	DIPC-B1209.6.10.211118	2022-06-07	Improved release

Table2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR	B3111.29.56.210512/B3211.29.30.200915

1.3 Version Mapping Table

Table3 Product models and corresponding versions

Product Series	IPC Series
Series	IPC3613LR3、IPC323LR3、IPC322LR3、IPC3612LR3、IPC2123LR3、IPC2122LR5 IPC2A23LB、IPC2C22LE
Models	IPC3613LR3 series: IPC3613LR3-APF28K-F、IPC3613LR3-APF40K-F IPC3613LR3-PF28-F、IPC3613LR3-PF40-F IPC323LR3 series: IPC323LR3-VSPF28-F、IPC323LR3-VSPF40-F IPC322LR3 series: IPC322LR3-UVSPF28-F、IPC322LR3-UVSPF40-F IPC3612LR3 series: IPC3612LR3-UPF28-F、IPC3612LR3-UPF40-F IPC2123LR3 series: IPC2123LR3-PF28M-F、IPC2123LR3-PF40M-F IPC2122LR5 series: IPC2122LR5-UPF28M-F、IPC2122LR5-UPF40M-F IPC2A23LB series: IPC2A23LB-F40K、IPC2A23LB-F60K IPC2C22LE series: IPC2C22LE-SF40-WL、IPC2C22LE-SF60-WL
Target file name	DIPC-B1209.6.13.220512.zip

2 Feature Change Description

SP13D2101(DIPC-B1209.6.13.220512):

None

SP10D2101(DIPC-B1209.6.10.211118):

None

P06D2101:

Item	Feature	Description
Newly added features	Audio output	The audio output volume is adjustable within the range of 0-255 (default is 242).
	Web password policy	The web interface allows more commonly used characters (excluding "."), which can be input on the keyboard.
	Log search	Supports log searching.
	SD card status	Provides LAPI interface so user can view SD card status on EZStation.
	Login policy	All IPCs require user to fill in an email address (overseas) or mobile phone number (China) as contact information at first login.
Improved features	PTZ lock	Added the PTZ lock feature (applicable to PTZ cameras and cameras capable of zoom/focus). Zoom/focus and pan/tilt/zoom are not effective when PTZ lock is enabled.
Deleted features	None	None

P85D1907:

None

P81D1907:

None

P76D1907:

None

P73D1907:

None

P70D1907:

None

P68D1907:

Item	Feature	Description
Newly added features	New add model	IPC2A23LB-F40K、 IPC2A23LB-F60K IPC2C22LE-SF40-WL、 IPC2C22LE-SF60-WL
Improved features	None	None
Deleted features	None	None

P65D1907:

None

P63D1907:

Item	Feature	Description
Newly added features	Strong password login	A strong password is required at login. When logging in with a weak or default password, the user will be required to change the password. A strong password must contain at least nine characters comprising all three elements: letters, digits and special characters. Both uppercase and lowercase letters are supported. The default password is 123456. A strong password is required only for login from the camera' s Web interface. Login from managing platforms will not be required to change into strong passwords.
	Lock DHCP assigned IP	When DHCP is enabled, and the camera is assigned an IP by the DHCP server, the camera will still use the assigned IP after a power failure restart. When managed by an NVR, the camera can still gets online on the NVR using the IP address assigned before the restart.
Improved features	None	None
Deleted features	None	None

3 Version Upgrade Description

None.


4 Version Upgrade Procedure

4.1 Upgrade Overview

4.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure1Network architecture

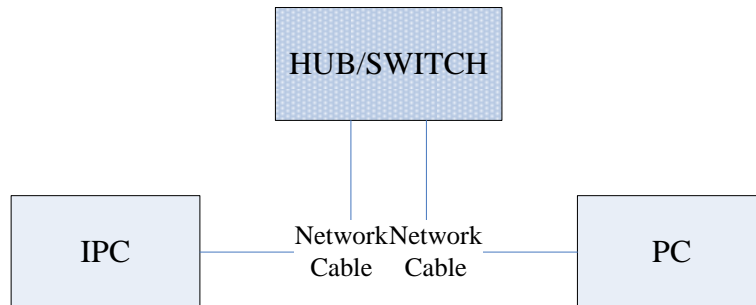

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

4.1.2 Version Upgrade Modes

You can upgrade through the Web.

4.2 Upgrade Procedure

4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup>Maintenance>Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade	
Upgrade File	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upgrade"/> <input type="checkbox"/> Upgrade Boot Program
Device Restart	
<input type="button" value="Restart"/>	Restart the device.
<input type="checkbox"/> Enable Auto Restart	Each Day <input type="button" value="v"/> 02:00:00 <input type="button" value="L"/> <input type="button" value="OK"/>
Config Management	
<input type="button" value="Default"/>	Keep current network and user settings and restore other settings to defaults.
Importing	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Import"/>
Exporting	C:\Users\Desktop\lftp <input type="button" value="Browse..."/> <input type="button" value="Export"/>
Diagnosis Info	
Storage Path	C:\Users\MyLocalFiles\Debug\ <input type="button" value="Browse..."/> <input type="button" value="Download"/>

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_D1209-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.

- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

5 Version Upgrade Disclaimer

1. By setting or installing this program in any way you agree to all of the following terms and conditions. Your downloading or using the program means you acknowledge your full understanding and acceptance of the following terms and conditions. If you do not agree to any of the following terms, you shall not use the program and you must cease installing and delete the program immediately.
2. The upgrade program is only applicable to the intended regions and product models. Before upgrade or update, please read the release notes carefully to make sure the program is applicable to your region and product model. You will be fully liable and responsible for all the consequences of device abnormality and related maintenance costs caused by your improper operations.
3. Uniview owns or is legally authorized to own all rights and IPRs (Intellectual Property Rights) of the program and the supplied release notes.
4. Software upgrades are for the optimization of product functions and do not mean there is defect.
5. You must strictly follow instructions in the release notes during the upgrade process, otherwise you are responsible for the possible consequences and related maintenance costs.
6. You shall not engage in any of the following activities, otherwise you would be liable for infringement and responsible for any adverse consequences arising therefrom.
 - 6.1 Copy the program (exclude the reasonable and necessary copies for internal backups);
 - 6.2 Exclude this statement when using the program or transfer the program to any third party;
 - 6.3 Modify the program or its derivatives;
 - 6.4 Reverse engineer, decompile or disassemble this program.
7. The program is only intended for authorized users. Its architecture, organization and source code are valuable trade secrets and confidential information owned by Uniview and its authorized parties. You agree not to provide or disclose any confidential information contained in or derived from the software to any third party. No part of this document may be excerpted, reproduced, or distributed in any form by any entity or individual without written consent from our company.